

POOL BLASTER[®]

VOLT

FX-4

Cordless Vacuum
Aspirateur pour piscine

Aspiradora portátil

Aspirador sem cabo de corrente

Kabelloser Sauger

Snoerloze stofzuiger

Aspiratore senza fili



Operator Manual
Manuel de l'opérateur

Manual de uso

Manual do Operador

Bedienungshandbuch

Gebruikershandleiding

Manuale dell'operatore

SAFETY WARNINGS

Read carefully and understand all safety warnings before operating. Failure to do so may result in serious personal injury.

Never allow children to operate this product. This is NOT a toy, children should be supervised to ensure they do not play with this product.

Keep the cleaner and its accessories out of reach of children.

Do not attempt to operate if the cleaner or charger appear to be damaged in any way.

This cleaner is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.

The warnings, cautions, and instruction discussed in this instruction manual cannot cover all possible conditions or situations that could occur. It must be understood, the operator should always exercise intensive caution and common sense when utilizing the cleaner.

Do not plug or unplug charger into a power source or the appliance with wet hands.

Do not handle the cleaner with wet hands or without shoes.

Do not operate this cleaner in the presence of flammable or combustible liquids.

Never service the cleaner while the unit on or connected to the charger.

Use only the charger supplied with the cleaner.

Never place the charger in any liquid. Never expose the charger to rain, water or moisture, or extreme heat or cold.

Disconnect the charger from power outlet when not in use or when performing any routine maintenance on the cleaner.

This cleaner contains re-chargeable batteries. Do not incinerate the battery as it will explode at high temperatures. Always dispose of batteries in accordance with local law.

Leaks from a battery may occur under extreme conditions. If battery liquid gets on the skin, wash immediately with water. If it gets in your eyes, immediately flush your eyes with a mild solution of baking soda and water, and seek medical attention.

Keep hair, loose fitting clothing and all body parts away from openings and moving parts of this cleaner

USAGE INFORMATION

Do not attempt to use if the cleaner or charger appear to be damaged in any way.

Use this product only for its intended purpose as described in this manual. Use only Water Tech accessories and filters.

This product is not intended for commercial use.

Never leave your cleaner plugged in during long-term storage, (maximum charging time should not exceed 24 hours).

Never leave your cleaner in water when it is "OFF" or when it has run out of power.

Do not use your cleaner for pool openings; the cleaner is designed for routine maintenance of your pool or spa.

The cleaner is designed for underwater use in swimming pools or spas only. It is not an all-purpose vacuum cleaner.

Submerge the cleaner in water immediately after turning the unit "ON" to prevent damage to the seal on the motor shaft. Failure to do so will shorten the life of the water seal and / or void the warranty.

Store cleaner in a clean dry place. Do not store in direct sunlight or expose to extreme temperatures.

Avoid picking up sharp objects as they may damage the filter.

Keep all openings on the cleaner free of debris which may reduce water flow.

Do not place the cleaner or charger on or near hot surfaces.

Never carry the charger by its cord or disconnect it from an outlet by pulling on the cord.

For best results use the charger in locations where temperatures are between 50° F / 10°C and 100° F / 37.7° C

Do not use or store the charger outdoors. Charge your cleaner in a clean, dry place and only with the charger provided. Do not use a charger supplied with any other appliance.

1. Vacuum Head
Tête d'aspiration
Cabezal de la aspiradora
Cabeça de aspiração
Saugerkopf
Zuigpot
Testa di aspirazione
(CAT006BK)

2. Nose Cap
Embout
Contenedor de desechos
Tampa do nariz
Nasenkappe
Neusdop
Tappo a bocchetta
(PBA002HD)

3. Filter Bag
Sac-filtre
Bolsa de filtro
Bolsa-filtro
Filterbeutel
Filterzak
Sacchetto filtrante
(PBW022XF)

4. Cleaner Body
Corps de l'aspirateur
Cuerpo de la limpiadora
Corpo do aparelho de limpeza
Reinigerkörper
Pool Blaster stofzuiger
Corpo aspiratore

5. Battery Chamber Cover
Couvercle du compartiment des piles
Tapa del compartimento de las baterías
Tampa da câmara da bateria
Abdeckung Batteriefach
Deksel van batterijhouder
Coperchio compartimento batteria
(CAT015BK)

6. Charger and EU Adapter
Chargeur et l'adaptateur de l'UE
Cargador y Adaptador de la UE
Carregador e Adaptador de UE
Ladegerät und EU-Adapter
Lader en EU Adapter
Caricabatterie e Adattatore UE
(CAT099-US-EU)



A



B



C



D



E




F



G



H 1.

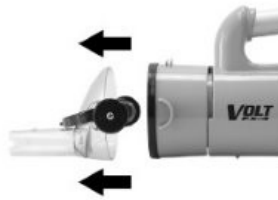

LIMITED WARRANTY

Water Tech Corp ("WT") warrants this product, including supplied accessories against defects in material or workmanship for the time periods as set forth below. Pursuant to this Limited Warranty WT will, at its option (i) repair the product to the original specifications or (ii) replace the product with a new or refurbished product. In the event of a defect, these are your exclusive remedies. For purposes of this Limited Warranty, "refurbished," means a product or part that has been returned to its original specifications.

All Pool Blaster Battery Powered Pool & Spa Vacuums. For a period of one (1) year from the original date of purchase of the product, WT will, at its option, repair or replace with new or refurbished product or parts, any product or parts determined to be defective.

Accessories. Included accessories are covered by this Limited Warranty for a period of (90) days from the original date of purchase of the product.

Instructions. Please retain the original box and internal packaging materials. To obtain warranty service, you must comply with the following requisite instructions:

- (1) Visit Water Tech Corp's Customer Support Department via email at www.wtrma.com. You will be guided through the correct process on how to obtain the required RMA# (Return Merchandise Authorization Number.) All customers must obtain an RMA number before any product will be accepted for warranty service. If you need additional assistance please contact us by telephone: (800-298-8800), email: customerservice@watertechcorp.com.
- (2) Package the unit and the WT battery charger only (if the unit requires a WT charger) properly and securely in the original box.
- (3) Attach your RMA number and Bar-Code you received from the website to the outside of the package. If you could not print the RMA number and bar-code from the website you must write your RMA number in thick black indelible marker on two sides of the box.
- (4) Send the package by USPS or express courier of choice to: Water Tech Corp, 10 Alvin Court, East Brunswick, New Jersey 08816; (WT suggests you insure the contents of your package.) WT is not responsible for lost, stolen or damaged property in transit to WT.

Repair/Replacement Warranty. This Limited Warranty shall apply to any repair, replacement part or replacement product for the remainder of the original Limited Warranty period or for ninety (90) days, whichever is longer. Any parts or products replaced shall become the property of WT.

This Limited Warranty covers only product issues caused by defects in material or workmanship during ordinary consumer use; it does not cover product issues caused by any other reasons, including but not limited to product issues caused by commercial use, acts of God, misuse, abuse, limitations in technology, or modification of or to any part of the WT product. This Limited Warranty does not cover WT products sold AS IS or WITH ALL FAULTS or consumables (such as batteries). This Limited Warranty is invalid if the factory-applied serial number has been altered or removed from the product. This Limited Warranty is valid only in the United States and Canada.

EXPRESS LIMITATION: THIS LIMITED WARRANTY ONLY APPLIES IF THE PRODUCT WAS PURCHASED FROM AN AUTHORIZED WATER TECH DEALER. THIS WARRANTY IS NOT TRANSFERABLE

LIMITATION ON DAMAGES. WT WILL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT.

DURATION OF IMPLIED WARRANTIES. EXCEPT TO THE EXTENT PROHIBITED BY LAW APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This Limited Warranty gives you specific legal rights and you may have other rights, which vary from state to state.

Industry Canada Regulatory Information

CAN ICES-3 (B)/NMB-3 (B)

Avis d'Industrie Canada

CAN ICES-3 (B)/NMB-3 (B)

FCC Compliance

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try and correct the interference by one or more of the following measures:

- Reorient or relocated the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different than that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

English

CAT006BK	1. Vacuum Head		4. Cleaner Body
PBA002HD	2. Nose Cap	CAT015BK	5. Battery Chamber Cover
PBW022XF	3. Filter Bag	CAT099-US-EU	6. Charger and EU Adapter

Specifications

Battery charger Input.....	110-240V-50/60HZ, 0.3A Maximum
Battery charger Output.....	7.2V, --- 1.A
Water temperature range.....	Maximum 96°F, (35°C) Minimum 40°F, (5°C)
Operation Depth.....	Maximum 12 ft. (3.5 m), Minimum 10 in., 0.25 m

 Only use the battery charger supplied with the cleaner.

A *Charging Your Cleaner*

Initial **4 hours**
Recharge (After complete discharge) **4 hours**

B *Sealing the Battery Chamber*

C *Inserting the Filter Bag*

D *Attaching the Vacuum Head*

E *Assembled Unit*

F *Attaching the Pool Pole*

G *Turning the Cleaner ON & OFF*

H *Maintenance*

Cleaning the Filter Bag

You should remove and clean the Filter Bag following each use (Figure H.1).
Don't scrub the bag against itself while rinsing it.

Long Term Storage

Always clean the Nose Cap and Filter Bag before storing.
Always store and charge your cleaner in a cool, dry indoor shelter.
Recharge the cleaner indoors for 4 hours after each month of inactivity.

Environmental Program(s), WEEE European Directive

Please respect the European Union regulations and help to protect the environment.
Return non-working electrical equipment to a facility appointed by your municipality that properly recycles electrical and electronic equipment.
Do not dispose them in unsorted waste bins. For items containing removable batteries, remove batteries before disposing of the product.

Environmental Recycling Programs USA



Help protect the environment.



AVERTISSEMENTS relatifs à la sécurité

Lire attentivement et comprendre tous les avertissements de sécurité avant l'utilisation. Le non-respect de ces instructions peut causer de graves blessures.

Ne jamais permettre aux enfants d'utiliser ce produit. Ce n'est pas un jouet, les enfants doivent être surveillés afin de s'assurer qu'ils ne jouent pas avec ce produit.

Gardez le nettoyeur et il s'agit d'accessoires hors de portée des enfants.

Ne pas tenter d'utiliser l'aspirateur si l'aspirateur ou le chargeur semblent endommagés de quelque façon que ce soit.

Cet aspirateur n'est pas destiné à être utilisé par des personnes présentant des capacités physiques, sensorielles ou intellectuelles réduites, ou par des personnes manquant d'expérience ou de connaissances, à moins qu'elles ne soient supervisées ou aient reçu des instructions concernant l'utilisation de l'appareil par une personne responsable de leur sécurité.

Les avertissements, mises en garde et instructions fournies dans ce manuel d'instructions ne peut pas couvrir toutes les conditions ou situations possibles qui pourraient être présentes. Il doit être clairement compris que l'opérateur doit toujours faire preuve d'une grande prudence et de bon sens lors de l'utilisation de l'aspirateur.

Ne pas brancher l'aspirateur ni le chargeur dans une source d'alimentation ni les débrancher avec les mains mouillées.

Ne pas manipuler l'aspirateur avec les mains mouillées ou sans chaussures.

Ne pas utiliser cet aspirateur en présence de liquides inflammables ou combustibles.

Ne jamais procéder à l'entretien de l'aspirateur lorsqu'il est en marche ou branché sur le chargeur.

Utiliser exclusivement le chargeur fourni avec l'aspirateur.

Ne jamais placer le chargeur dans un liquide quelconque. Ne jamais exposer le chargeur à la pluie, à l'eau ou à l'humidité, ou à une chaleur ou à un froid extrêmes.

Débrancher le chargeur de la prise de courant lorsqu'il n'est pas utilisé ou lors de tout entretien de routine de l'aspirateur.

Cet aspirateur contient des piles rechargeables. Ne pas incinérer les piles car elles exploseraient à de hautes températures.

Toujours éliminer les piles conformément aux lois locales en vigueur.

Les piles peuvent fuir dans des conditions extrêmes. Si le liquide provenant des piles touche la peau, la rincer immédiatement à l'eau. S'il pénètre dans les yeux, rincer immédiatement les yeux avec une solution douce d'eau et de bicarbonate de soude et consulter un médecin.

Éloigner les cheveux, les vêtements lâches et toutes les parties du corps des ouvertures et des pièces mobiles de l'aspirateur.

INFORMATIONS RELATIVES À L'UTILISATION

Ne pas tenter d'utiliser l'aspirateur si l'aspirateur ou le chargeur semblent endommagés de quelque façon que ce soit.

Utiliser ce produit uniquement pour l'usage prévu décrit dans ce manuel. Utiliser uniquement les accessoires et les filtres Water Tech.

Ce produit n'est pas destiné à un usage commercial.

Ne jamais laisser l'aspirateur branché pendant le remisage à long terme (le temps de charge maximal ne doit pas excéder 24 heures).

Ne jamais laisser votre aspirateur dans l'eau lorsqu'il est éteint ou n'est plus alimenté par les piles.

Ne jamais utiliser l'aspirateur sur les ouvertures de la piscine ; il est conçu pour l'entretien général des piscines et des spas.

L'aspirateur est réservé à une utilisation sous l'eau dans les piscines et les spas. Cet aspirateur n'est pas destiné à un usage polyvalent.

Immerger l'aspirateur dans l'eau immédiatement après l'avoir mis en marche pour éviter d'endommager le joint de l'arbre du moteur. Le non-respect de cette instruction réduirait la durée de vie du joint hydraulique et pourrait annuler la garantie.

Remiser l'aspirateur dans un endroit propre et sec. Ne pas le remiser sous la lumière directe du soleil ni l'exposer à des températures extrêmes.

Éviter d'aspirer des objets coupants qui pourraient endommager le filtre.

Conserver toutes les ouvertures de l'aspirateur exemptes de débris qui pourraient réduire le débit d'eau.

Ne pas placer l'aspirateur ni le chargeur sur des surfaces chaudes ou à proximité.

Ne jamais transporter le chargeur par son cordon ni le débrancher d'une prise de courant en tirant sur le cordon.

Pour obtenir de meilleurs résultats, utiliser le chargeur à une température située entre 10 °C et 37,7 °C.

Ne pas utiliser ni ranger le chargeur à l'extérieur. Charger l'aspirateur dans un endroit propre et sec et uniquement avec le chargeur fourni. Ne pas utiliser le chargeur fourni avec un autre appareil.