

Uptown Fire Pit Table

Installation Instructions



Contents

Contents	2
Required Tools	3
Placing and assembling the Table	4
Gas Connection	5
lgniter Installation	6
Locating Propane tank	8
Finishing Touches	9

Required Tools



Utility Knife

To cut and remove packaging



2 Open Ended Wrenches

To make gas connections



Leather Gloves

To protect hands from rough edges found on the coffee table.




One (1) AAA Bottery (not included)
 Required for piezoelectric igniter installation.




 Do not attempt to perform installation by yourself. This fire pit table is constructed of steel and heavy stone products.
 Have at least one other person help you.

<u>Placing and Assembling the Fire Pit table</u>

- 1. Remove access door from box and set aside.
- 2. Remove all components from packaging.
- **3.** Move the base sections without door to desired location and set into place spaced approximately 21" from each other.
- **4.** When locating your coffee table, refer to the Crystal Fire manual and maintain clearance to combustibles.
- 5. Assemble as shown below.

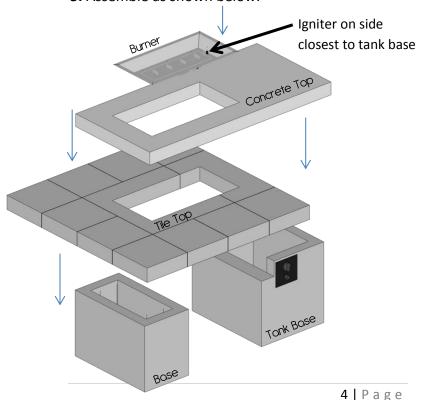


6. Insert supplied sheet metal screws into the locations shown by arrows below. This secures the granite tile top to the base.

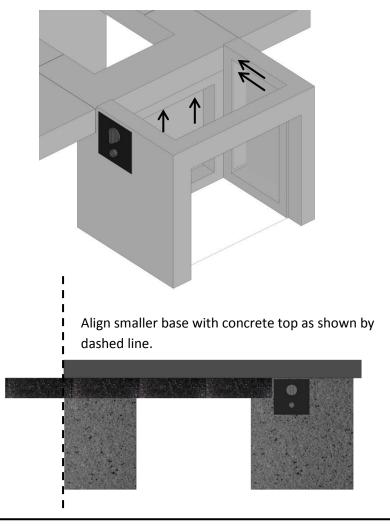

Read and understand your Crystal Fire owner's manual before beginning burner hookups or using the device.

Gas Connection

- 1. Lift burner out of top and set aside
- 2. Connect the incoming gas line and flexible metal gas line from the valve to the underside of burner, running flex hose through access hole as shown before connecting line to valve. It is not recommended to use Teflon tape or pipe dope on the connection to the valve with flare fittings.
- LPG installations use the hose and regulator provided with the burner.
- For Natural Gas hookup information and any other info not listed here consult your Crystal Fire owner's manual.
- Consult Crystal Fire manual for proper orifice size for the chosen fuel type before attaching flex line to burner and tightening securely.

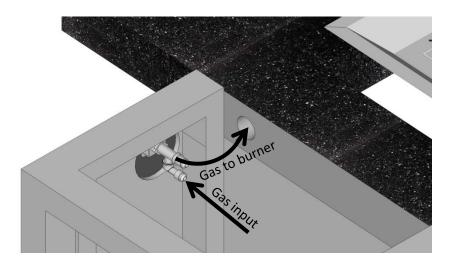


<u>laniter Installation</u>

(If your igniter only has one port on the back, please ignore instructions for grounding. Your igniter is a self-grounding model)

Make sure the valve is in the OFF position



2. Unscrew sparker cap and hex nut. Install as shown below.

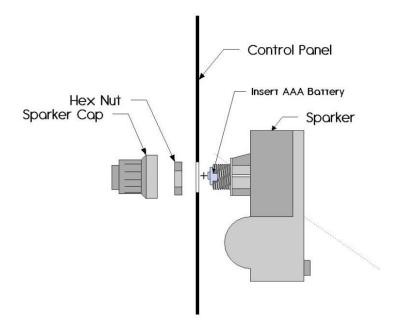


- **3.** To properly install ignition system, a spark and ground wire need to be attached to the igniter box.
 - Start by plugging the spark wire (hanging from the underside of the sparking tip) on the burner into one side of the black igniter box on your control panel.
 - Plug the included grounding wire (which arrives attached to the underside of your burner pan) into the back of the sparker box.
 - Test system by depressing the button on the igniter. A
 continuous repeating spark between the igniter
 electrode and spark-receiving probe means everything
 is connected properly. Consult the troubleshooting
 section if spark is weak, intermittent, or not present.

4. Once ignition system is grounded and gas connections are secured and checked for leaks, set the burner back into its original position if you haven't already done so.

Locating your Tank

- 1. Your tank should be positioned so that the fuel can be shut off after each use.
- 2. Slide the tank into the framework past the line shown below. This is to allow the door to close completely.
- **3.** Confirm all hoses are clear and not touching the burner.

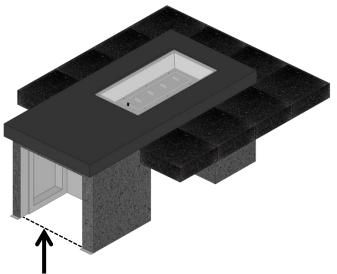

Position tank behind this line

• Install door by setting the bottom on the catching hooks first and then closing. Magnets in the table will hold door closed.

<u>Finishing touches</u>

Once fire pit is set up and in the desired position, scatter decorative glass on burner surface forming an even layer of beads.

 DO NOT BURN WITHOUT GLASS OR OTHER DECORATIVE SUBSTRATE PRESENT

IMPORTANT

Please consult your Crystal Fire instruction manual for detailed instructions and important information related to hooking up your linear burner, including safety information, proper tightening of connections with two wrenches and full burner setup and lighting instructions.

DO NOT ATTEMPT TO INSTALL CF-1224 BURNER WITHOUT FIRST CONSULTING THE MANUAL. IF YOU ARE UNSURE OF HOW TO COMPLETE THE STEPS OUTLINED, CONSULT A QUALIFIED TECHNICIAN

WARNING

After consulting the manual and following instructions, remember; before operating, all gas connections must be fully checked for leaks

Warranty: Fire pit tables are covered under a 1-year manufacturer's warranty. Please visit http://www.outdoorrooms.com/warranty-form to register your product.

© 2011 The Outdoor GreatRoom Company

14400 Southcross Drive West • Suite 100 • Burnsville, MN 55306 Toll Free: 1-866-303-4028 • Sales@OutdoorRooms.com