




Sonoma Privacy Wall


Instructions for Sonoma 12, 16, and 1216 Privacy Walls

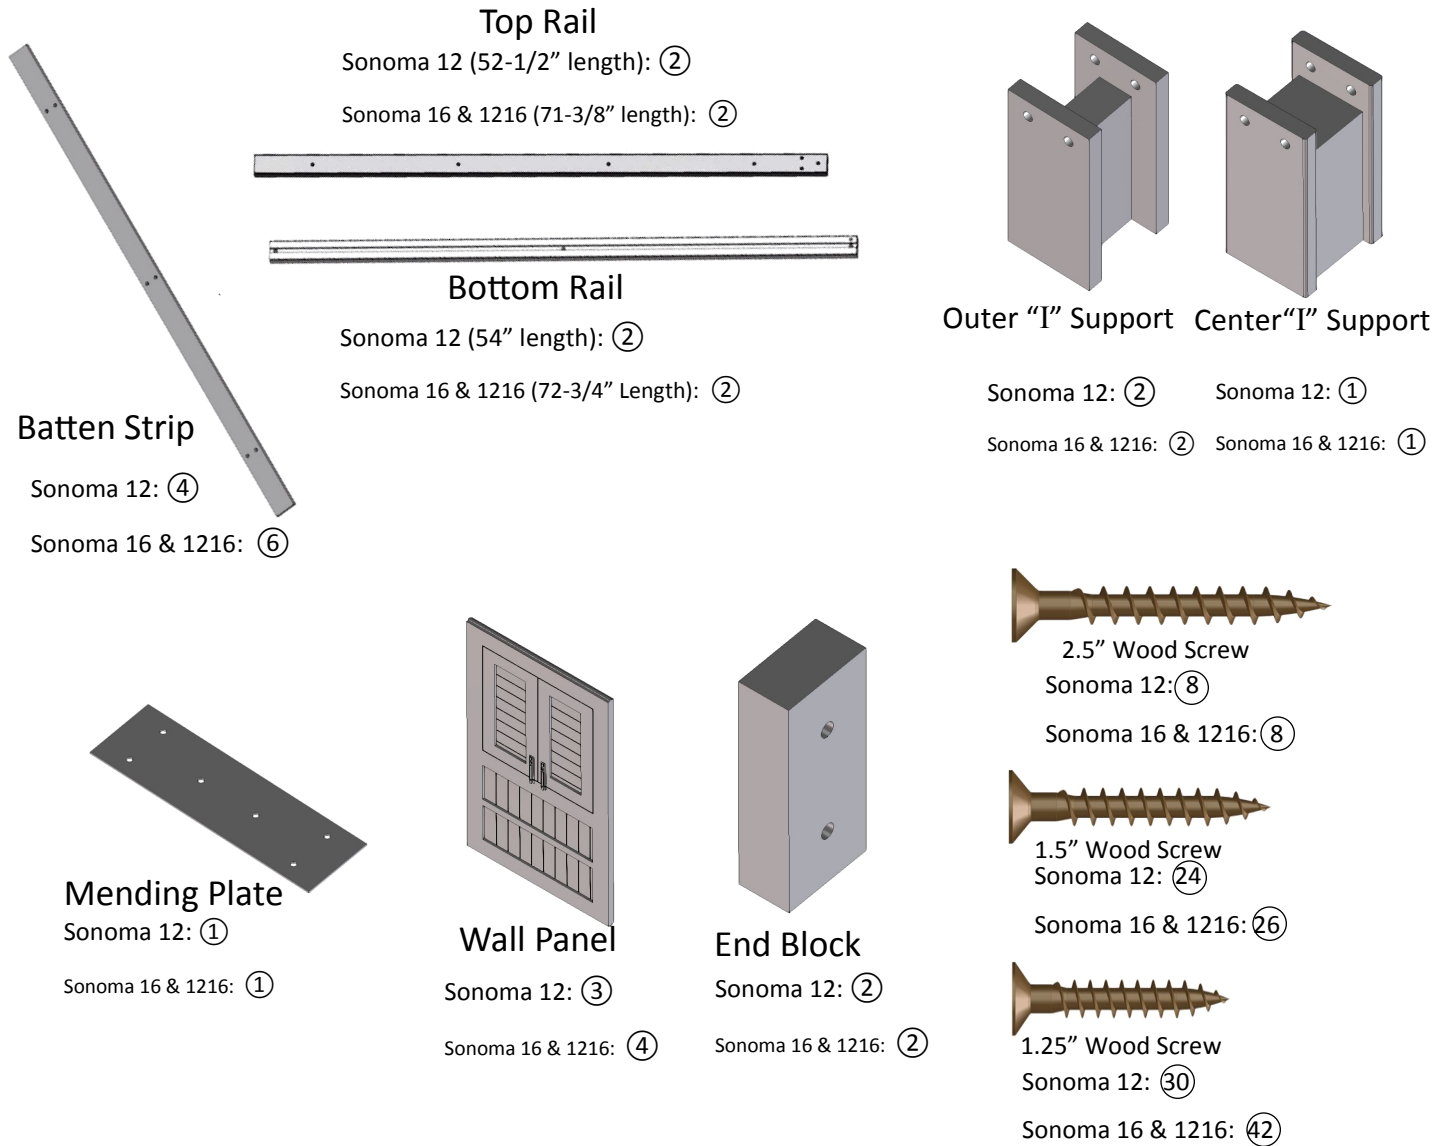

Required Tools:

- Electric drill with T-20 bit for 1-1/4" and 1-1/2" screws, and T-25 bit for 2-1/2" screws
- 1/8" drill bit for pre-drilling holes in step 8
- Step ladder
- At least two people are needed to assemble this product
- Measuring tape for verifying inside-to-inside post dimension of pergola
- Pencil
- Leveling device for checking for square
- Rubber mallet

Disclaimer—The Outdoor GreatRoom Company® is NOT liable for damage caused by weather or misuse

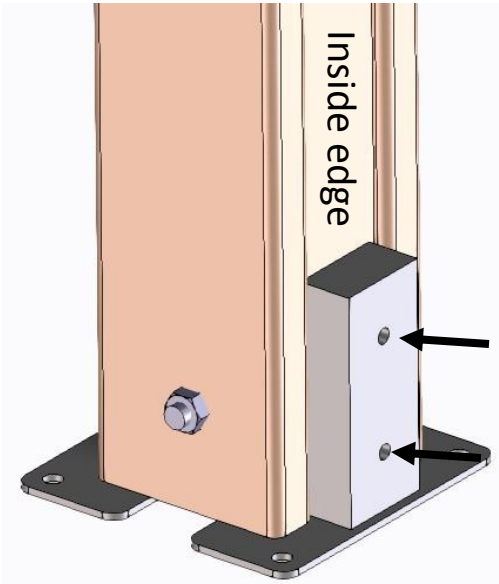


IMPORTANT:

Before beginning installation verify that pergola columns are square with the ground and that the inside-to-inside distance between them is 108-1/8" for the Sonoma 12, and 145-5/8" for the Sonoma 16 and Sonoma 1216. Also verify the height from the bottom of the column to the underside of the corbels is 67" and adjust corbel height if needed.



This installation is to be performed on the side walls of the pergola only. Installing a wall under the arched side of the pergola will require modifications to be made to the pergola or privacy wall.

1. set an **END BLOCK** into place at the base of each column and secure with two **2.5" SCREWS**.


2. Set **OUTER "I" SUPPORTS** and **CENTER "I" SUPPORT** into place roughly equal distances from each other. →

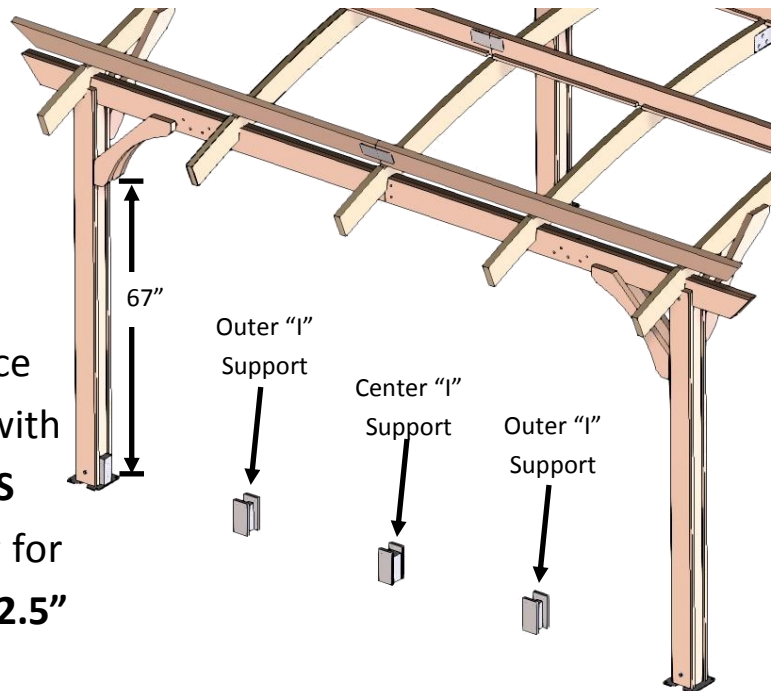


3. Set **BOTTOM RAIL** sections into place as shown and align pre-drilled holes with the holes in the **OUTER "I" SUPPORTS** and **CENTER "I" SUPPORT**. See below for proper Orientation. Insert a **1.5" and 2.5" SCREW** into each end to fasten. ↘

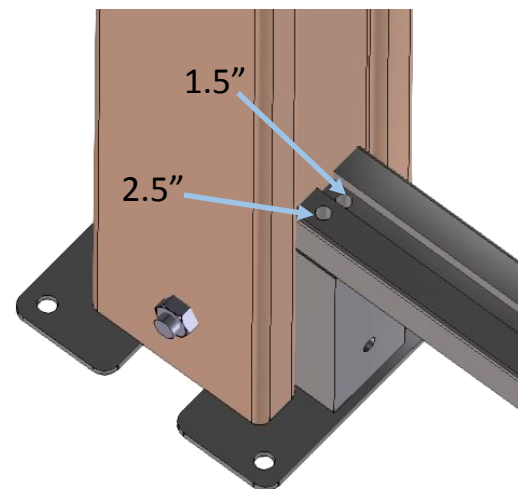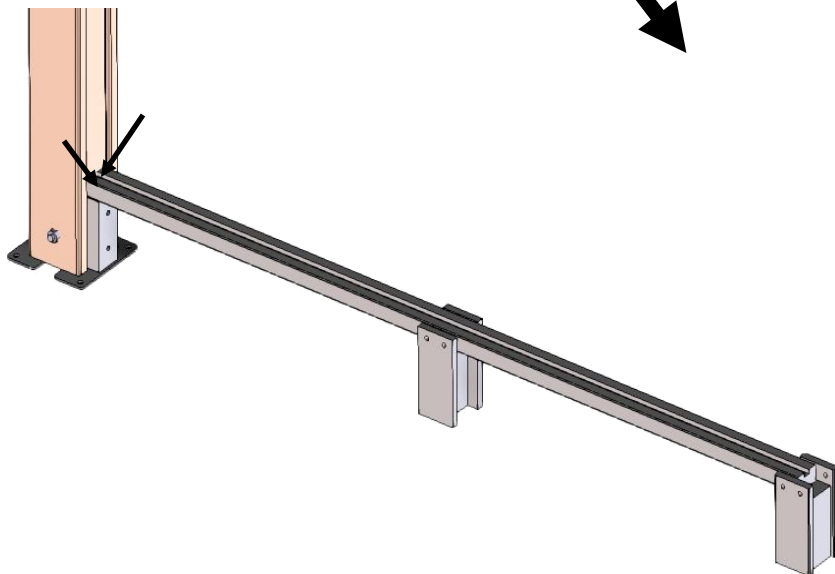


4. Align as shown and insert **1.5" SCREWS** into the pre-drilled holes at locations shown by arrows below. Holes are located on both sides of the blocks.

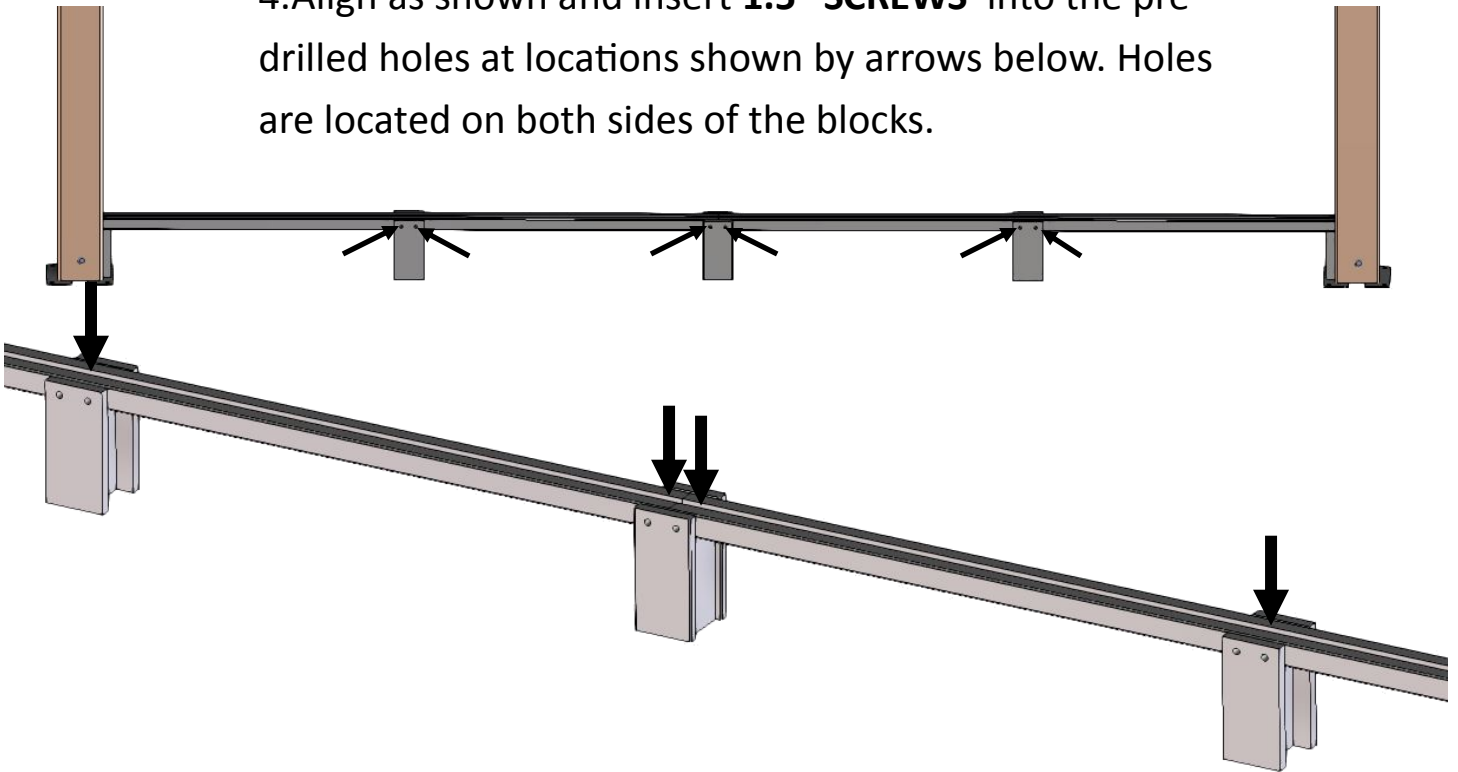





5. Place the **WALL PANELS** into the bottom channel facing the direction of your choosing, starting from the outside working inward. Be careful not to let the wall panels tip while unsupported as this may cause damage to the panels. Small gaps will be present between the wall panels. Adjust the panels so the spaces are even and outer two panels are tight to the pergola columns.

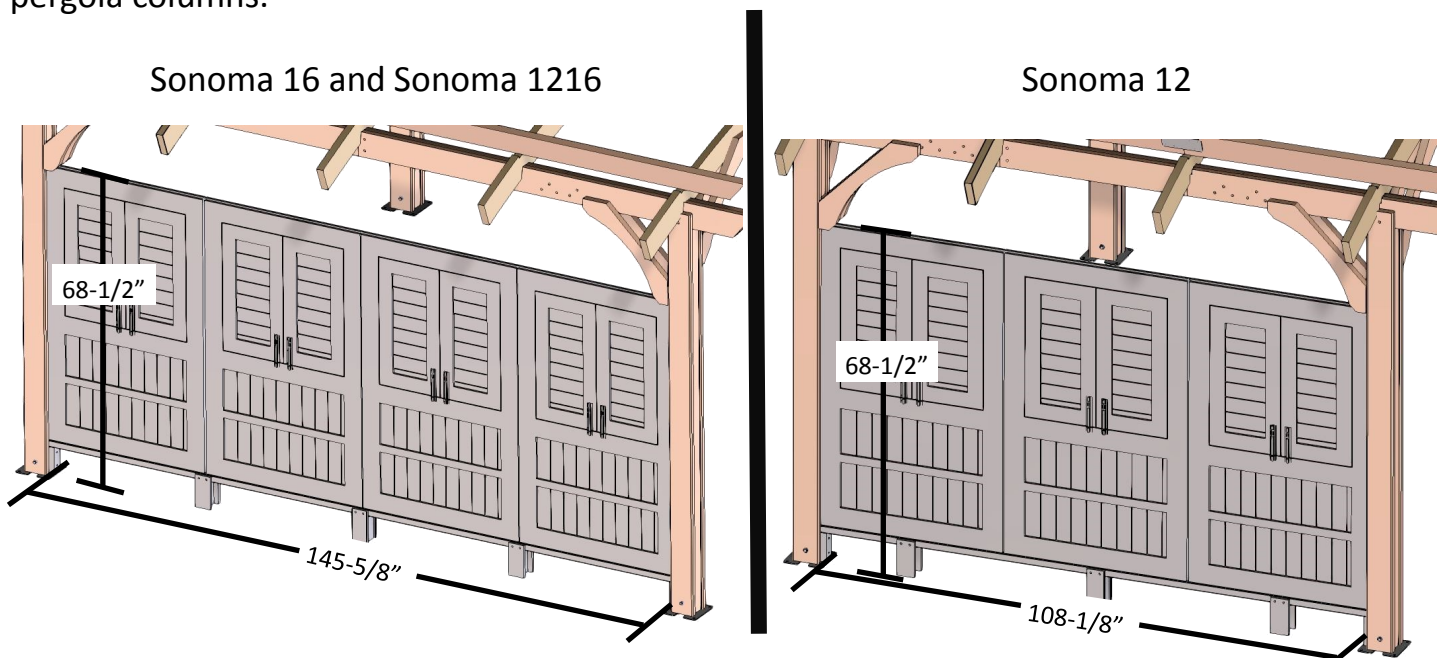


If panels fit into bottom channel tightly (this may depend on temperature and humidity) a rubber mallet can be used to carefully tap them down into a seated position.

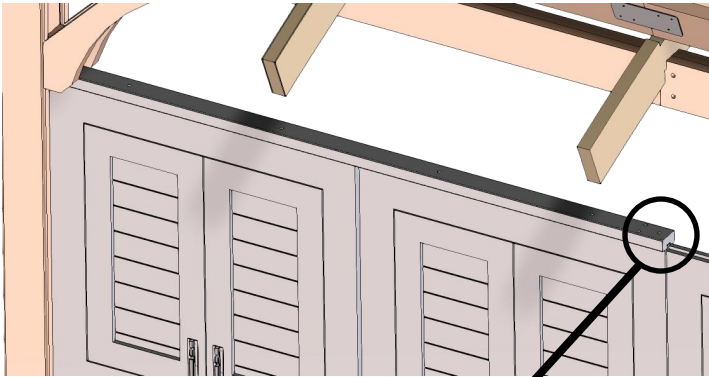


6. Set **TOP RAILS** into place so that the ends butt together at the center . Set the **MENDING PLATE** into place and fasten with 6 **1.25" SCREWS**

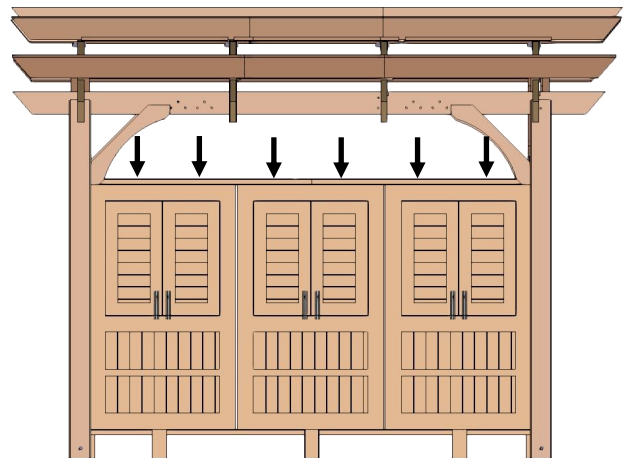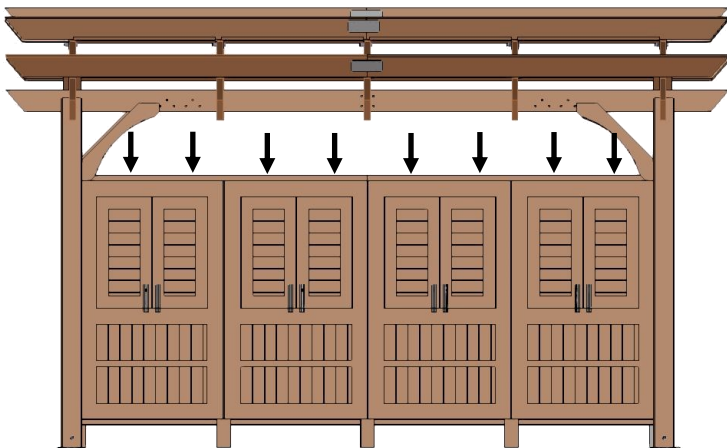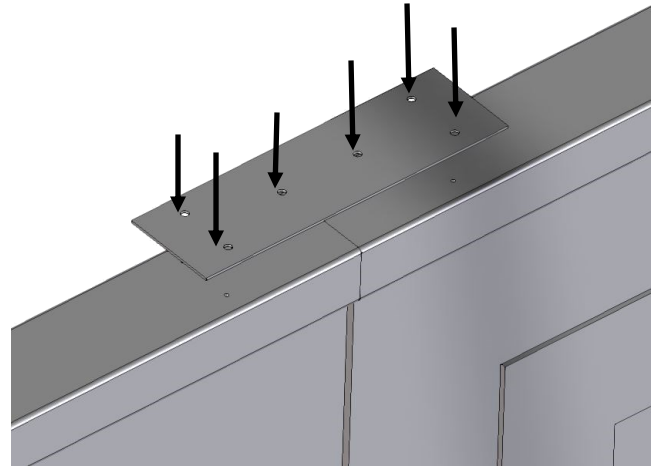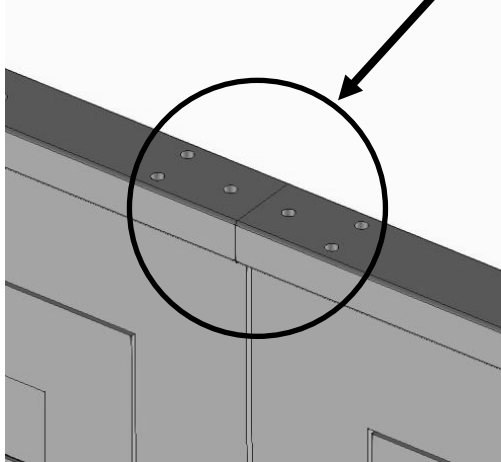


7. Fasten the **TOP RAILS** with **1.5" SCREWS** as shown.

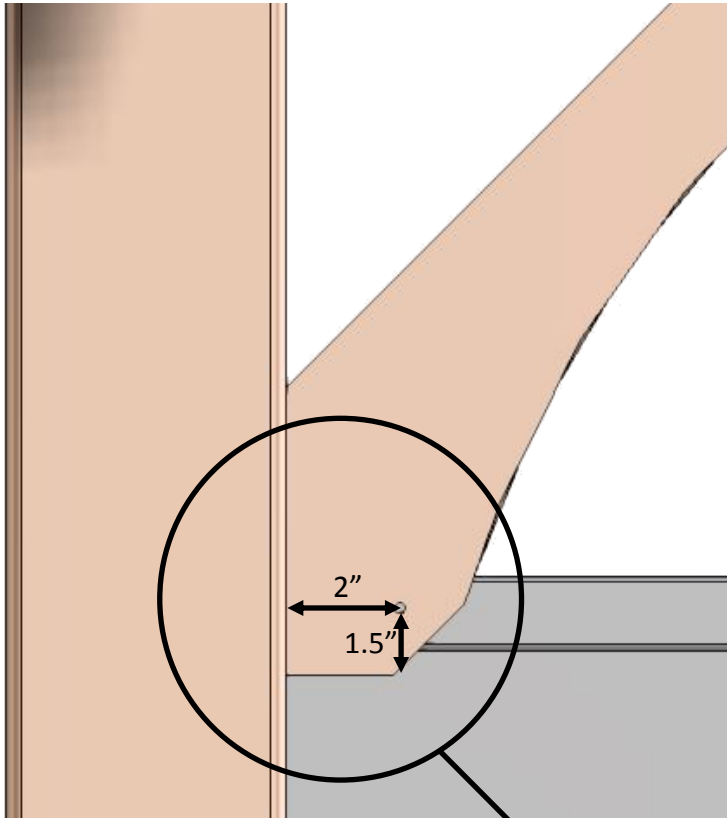

8. From the outside of each corbel, measure 1.5" up and 2" from the edge touching the column and pre-drill a hole with a 1/8" drill bit. Insert a 2.5" Screw to fasten the wall to the corbel. (Only one screw per end is required)

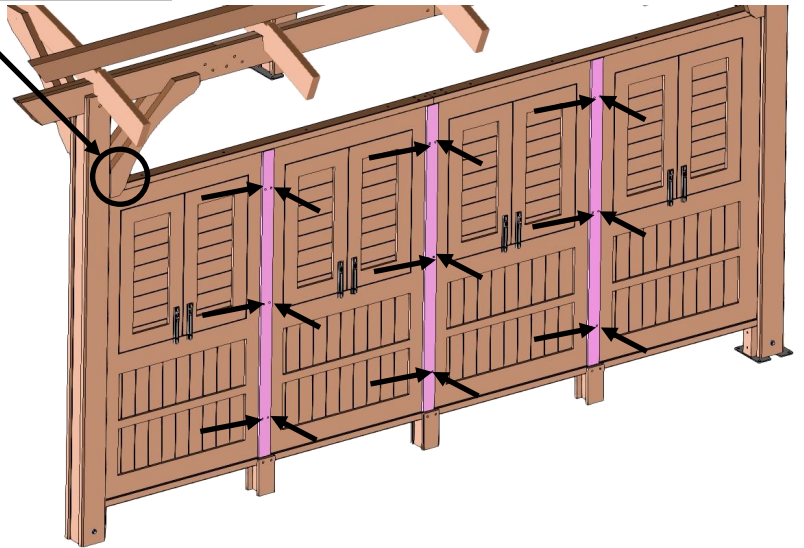

9. Install **BATTEN STRIPS** as shown using 6 **1.25" SCREWS** per strip in the pre-drilled holes. Batten Strips can be placed on both or either side of the wall to suit your preference.

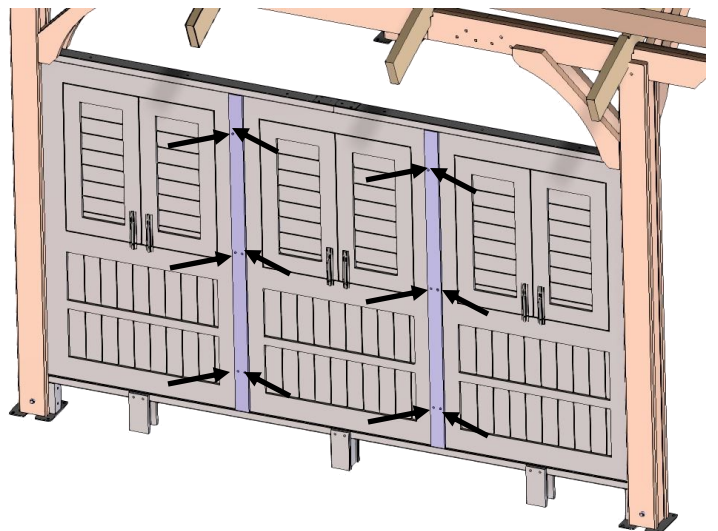

Maintenance: All finished pieces have been stained with an oil-based stain (It is recommended that the pergola receive a clear, oil-based stain yearly to maintain the color, minimize warping and prevent rotting.)

Every few years a colored oil based stain should be used to keep the original color.

Formulas below can be taken to Sherwin Williams to ensure correct colors.

All of these are oil based stains

BAC Colorant	oz	32oz	64oz	128oz
<i>MOCHA</i>				
N1-Raw Umber		12	-	-
G2-New Green		3	-	-
B1-Black		31	-	1
W1-White		22	1	-
R2-Maroon		20	1	1
Y3-Deep Gold		39	1	1
One Gallon	A18C50602		STS Clear	640359360
<i>REDWOOD</i>				
R4-New Red		6	-	-
One Gallon	A18C50500		Toner	640359386

Limited One Year Warranty



The Outdoor GreatRoom Company Outdoor Products Limited Warranty

The Outdoor GreatRoom Company extends the following warranty for Outdoor GreatRoom outdoor products used in the United States of America or Canada. Dealers and employees of The Outdoor GreatRoom Company have no authority to make any warranty or authorize any remedies in addition to or inconsistent with the terms of this warranty. This warranty gives you specific legal rights. You may also have other rights that vary from state to state.

The Outdoor GreatRoom Company warrants that this Outdoor GreatRoom Outdoor Product (the "Product") will be free from defects in material and workmanship for a period of one year from its date of purchase. Stainless steel parts and assemblies carry a limited lifetime warranty. This warranty is subject to the conditions, exclusions and limitations described below.

This warranty applies only to the original owner of the Product and is non-transferable. The Outdoor GreatRoom Company obligation under this warranty does not extend to damages resulting from (1) assembly, operation or maintenance of the Product not in accordance with the Installation/Assembly Instructions, Operating Instructions and the Listing Agency Identification Label furnished with the Product; (2) installation or use which does not comply with local building codes and ordinances; (3) shipping, improper handling, improper operation, abuse, misuse, accident or unworkmanlike repairs; (4) use of fuels other than those specified in the Operating Instructions; (5) Installation or use of components not supplied with the Product or any other components not expressly authorized and approved in writing by The Outdoor GreatRoom Company; and/or (6) modification of the Product not expressly authorized and approved in writing by The Outdoor GreatRoom Company. Any of the circumstances described in the previous sentence voids this warranty. This warranty is void if the Product or any component has been removed, repaired, or replaced before The Outdoor GreatRoom Company has been afforded a reasonable opportunity to inspect the Product.

This warranty is limited to the replacement or repair of defective components or workmanship and The Outdoor GreatRoom Company may fully discharge its obligations under this warranty by repairing or replacing, at its discretion, the defective components. The Outdoor GreatRoom Company will provide replacement parts at no charge and will pay reasonable and necessary labor and freight costs related to replacing or repairing defective components under this warranty. The maximum amount recoverable under this warranty is limited to the purchase price of the Product and, if The Outdoor GreatRoom Company is unable to provide replacement or repair in an expedient and cost-effective manner, The Outdoor GreatRoom Company may discharge all obligations under this warranty by refunding the purchase price of the Product.

EXCEPT TO THE EXTENT PROVIDED BY LAW, THE OUTDOOR GREATROOM COMPANY MAKES NO EXPRESS WARRANTIES OTHER THAN THE WARRANTY EXPRESSED HEREIN. THE DURATION OF ANY IMPLIED WARRANTY IS LIMITED TO THE DURATION OF THE WARRANTY SPECIFIED ABOVE. IN NO EVENT SHALL THE OUTDOOR GREATROOM COMPANY BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES CAUSED BY DEFECTS IN THE PRODUCT. Some states do not allow limitations on how long an implied warranty lasts, or do not allow exclusion or limitation of incidental or consequential damages, so these limitations may not apply to you.

To obtain service under this warranty, you must:

Send written notice of the claimed condition to: The Outdoor GreatRoom Company, 14400 Southcross Drive West, Suite 100, Burnsville, MN 55306.

Affirm that you are the original owner of the Product.

Provide The Outdoor GreatRoom Company reasonable opportunity to investigate the claim, including reasonable opportunity to inspect the Product prior to any repair or replacement work and before the Product or any component of the Product has been removed.