



# AquaCal®

## Operation Manual P<sub>3</sub>

# HEATWAVE SUPERQUIET®



*Five Button Display v2.xxx*

**Important**

Read this document before operating / installing this product

For additional product manuals and operation / installation procedures, please visit [www.AquaCal.com](http://www.AquaCal.com)

\_\_\_\_\_

MODEL / SERIAL NUMBER



# Table of Contents

---

<b>Contacting AquaCal AutoPilot, Inc.</b> .....	<b>1</b>
<b>Safety</b> .....	<b>1</b>
<b>1 - Operation</b> .....	<b>3</b>
<b>1.1 Display Door</b> .....	<b>3</b>
<b>1.2 Wake Up Heat Pump</b> .....	<b>4</b>
<b>1.3 Using Entry Code to Access Heat Pump</b> .....	<b>4</b>
<b>1.4 Display Panel</b> .....	<b>5</b>
<b>1.5 Activate HEAT Mode, COOL Mode, AUTO Mode, or Deactivate Equipment</b> .....	<b>7</b>
<b>1.6 Set a desired temperature (setpoint) for the solar system to activate (Select Units)</b> .....	<b>8</b>
<b>1.7 Set a desired temperature (setpoint) for the Heat Pump to activate</b> .....	<b>9</b>
<b>1.8 Using Shortcuts</b> .....	<b>10</b>
<b>1.9 Programming</b> .....	<b>12</b>
1.9.A Setting Date and Time .....	13
1.9.B Setting Date and Time Format .....	14
1.9.C Selecting Celsius or Fahrenheit .....	15
1.9.D Setting Entry Code Option .....	16
1.9.E Disabling Entry Code Option .....	17
1.9.F Configuring Solar Control (Select Units) .....	18
F.1 Solar Control Mode .....	18
F.1.a Set Solar Control to ECO Mode .....	18
F.1.b Set Solar Control to HYBRID Mode .....	19
F.1.c Set Solar Control to SOLAR OFF .....	20
F.2 Solar Boost (ECO Mode Only) .....	21
F.3 Heat Pump Mode (Hybrid or OFF Only) .....	22
F.4 Viewing Solar Roof Temperature .....	22
F.5 Solar Heat / Cool Mode .....	23
1.9.G Configuring Groups .....	24
G.1 Create a Group .....	24
G.2 Edit a Group .....	26
G.3 Delete a Group .....	27
1.9.H Configuring Schedules .....	27
H.1 Create a Schedule .....	28
H.2 Edit a Schedule .....	29
H.3 Delete a Schedule .....	31
1.9.I Schedule and Program Modes .....	32
<b>1.10 External Equipment</b> .....	<b>37</b>
1.10.A PoolSync® .....	37
1.10.B Operating Heat Pump (With an External Controller) .....	38
1.10.C Operating Multiple Connected Heat Pumps .....	39

---

<b>2 - Maintenance</b> .....	<b>40</b>
<b>2.1 Water Chemistry</b> .....	<b>40</b>
<b>2.2 Clearances</b> .....	<b>40</b>
<b>2.3 Cleaning Equipment</b> .....	<b>41</b>
<b>2.4 Irrigation and Storm Run-Off</b> .....	<b>42</b>
<b>2.5 Water Flow Rates</b> .....	<b>43</b>
<b>2.6 Freeze Protection</b> .....	<b>44</b>
<b>2.7 Winterizing</b> .....	<b>47</b>
<b>3 - Appendix</b> .....	<b>49</b>
<b>3.1 Adjusting Water Flow Using <math>\Delta T</math> (Delta-T)</b> .....	<b>49</b>
<b>3.2 Available Accessories</b> .....	<b>51</b>
<b>3.3 Configure Variable Speed Compressors (Select Units)</b> .....	<b>53</b>
<b>3.4 Identifying Model Specifications</b> .....	<b>55</b>
<b>3.5 Menu Trees</b> .....	<b>57</b>
<b>3.6 Initial Heating Recommendations</b> .....	<b>59</b>
<b>3.7 Initial Cooling Recommendations</b> .....	<b>59</b>
<b>3.8 Service Mode</b> .....	<b>59</b>
<b>3.9 Viewing System Information</b> .....	<b>60</b>
<b>4 - Troubleshooting</b> .....	<b>62</b>
<b>4.1 Fault Codes</b> .....	<b>63</b>
<b>4.2 Issues and Resolutions</b> .....	<b>69</b>

## Contacting AquaCal AutoPilot, Inc.

For further assistance, please contact the distributor or installer of this product.

If unavailable, please contact AquaCal® for a partner in your area. To better assist you, please have the heat pump model and serial number available.

- See "Identifying Model Specifications" on page 55.

Product Information:	
Website	www.AquaCal.com
Phone	(1) 727-823-5642
Hours	8-5 pm, Eastern M-F

Service Information:	
Website	www.AquaCal.com/request-heat-pump-service/

## SAFETY

- For personal safety, and to avoid damage to equipment, follow all safety instructions displayed on the equipment and within this manual. Repair and service of heat pump must be performed by an authorized service center.
- Warranties may be voided if the equipment has been improperly installed, maintained or serviced.
- If service is deemed necessary, please contact AquaCal.

### SAFETY SIGNALS

Throughout this document, safety signals have been placed where particular attention is required.



**DANGER**

Failure to heed the following will result in injury or death.



**WARNING**

Failure to heed the following may result in injury or death.



**NOTICE**

Failure to heed the following may result in damage to equipment.

When installing and using your heat pump basic safety precautions must always be followed, including the following:



**DANGER**

Failure to heed the following will result in injury or death.

- The heat pump utilizes high voltage and rotating equipment. Use caution when servicing.
- RISK OF ELECTRICAL SHOCK FROM ENERGY STORED IN CAPACITORS - MODELS EQUIPPED WITH VARIABLE FREQUENCY COMPRESSOR DRIVES STORE ELECTRICITY EVEN AFTER THE POWER HAS BEEN DEACTIVATED AT THE POWER BREAKER. ***Wait for 2 minutes after the shut down of equipment before servicing.***
- Follow all National Electric Codes (NEC) and / or State and Local guidelines.

**WARNING**

Failure to heed the following may result in injury or death.

- Installation and repairs must be performed by a qualified technician.
- The heat pump contains refrigerant under pressure. Repairs to the refrigerant circuit must not be attempted by untrained and / or unqualified individuals. Service must be performed only by qualified HVAC technicians. Recover refrigerant before opening the system.
- Improper water chemistry can present a serious health hazard. To avoid possible hazards, maintain pool / spa water per standards as detailed in this document.
- Prolonged immersion in water warmer than normal body temperature may cause a condition known as Hyperthermia. The symptoms of Hyperthermia include unawareness of impending hazard, failure to perceive heat, failure to recognize the need to exit the pool or spa, and unconsciousness. The use of alcohol, drugs, or medication can greatly increase the risk of fatal Hyperthermia. People having an adverse medical history, or pregnant women should consult a physician before using a hot tub or spa. Children and the elderly should be supervised by a responsible adult.
- Prolonged immersion in water colder than normal body temperature may cause a condition known as Hypothermia. The symptoms of Hypothermia include shivering (although as hypothermia worsens, shivering stops), clumsiness or lack of coordination, slurred speech or mumbling, confusion and poor decision-making, drowsiness or low energy, lack of concern about personal welfare, progressive loss of consciousness, weak pulse and slow or shallow breathing. Persons having an adverse medical history, or pregnant women, should consult a physician before immersing in a cold body of water. Children and the elderly should be supervised by a responsible adult.
- This appliance is not to be used by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.
- Children must be supervised and are not to play with the appliance.

**NOTICE**

Failure to heed the following may result in damage to equipment.

- Maintain proper water chemistry to avoid damage to the pump, filter, pool shell, etc.
- Water flow exceeding the maximum flow rate requires a bypass. Damage due to excessive water flow will void the warranty.
- Failure to protect equipment against corrosive conditions will adversely affect the life of the equipment and will void equipment warranty.

**SAVE THESE INSTRUCTIONS**


## IN THIS SECTION:

1.1 Display Door	3
1.2 Wake Up Heat Pump	4
1.3 Using Entry Code to Access Heat Pump	4
1.4 Display Panel	5
1.5 Activate HEAT Mode, COOL Mode, AUTO Mode, or Deactivate Equipment	7
1.6 Set a desired temperature (setpoint) for the solar system to activate (Select Units)	8
1.7 Set a desired temperature (setpoint) for the Heat Pump to activate	9
1.8 Using Shortcuts	10
1.9 Programming	12
1.9.A Setting Date and Time	13
1.9.B Setting Date and Time Format	14
1.9.C Selecting Celsius or Fahrenheit	15
1.9.D Setting Entry Code Option	16
1.9.E Disabling Entry Code Option	17
1.9.F Configuring Solar Control (Select Units)	18
1.9.G Configuring Groups	24
1.9.H Configuring Schedules	27
1.9.I Schedule and Program Modes	32
1.10 External Equipment	37
1.10.A PoolSync®	37
1.10.B Operating Heat Pump (With an External Controller)	38
1.10.C Operating Multiple Connected Heat Pumps	39

## 1.1 Display Door

The display panel is located in a door compartment on the front of the heat pump. This compartment is designed to protect the display against harsh weather. It can also be padlocked for extra security.


- Press the **bottom** of the panel to open the display panel door.
- To close, push the display panel up. Then press the **bottom** of the panel in until a clicking noise is heard.

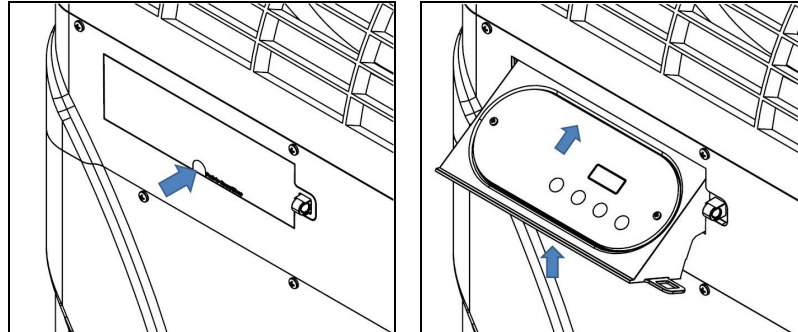

## 1.2 Wake Up Heat Pump


The display's backlight will be off when the heat pump is in sleep mode. To wake up the heat pump, slowly slide a finger across the buttons.

- The display will illuminate.
- The message "KEYPAD UNLOCKED" will briefly appear.
- Then the water temperature and mode will display.

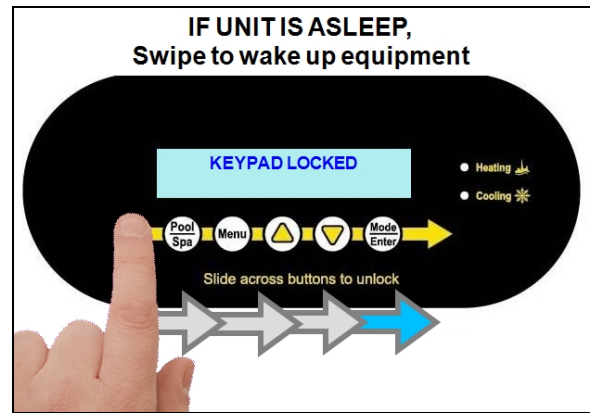

## 1.3 Using Entry Code to Access Heat Pump

If a user entry code has been enabled in the user menu, an entry code will be required to access heat pump options.

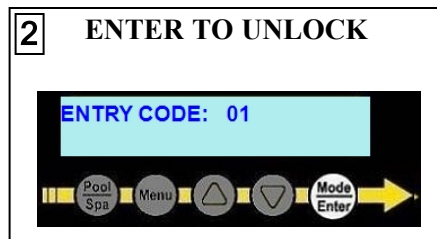

### PLEASE NOTE -


- If the entry code has been misplaced, the heat pump will need to be reset to factory defaults.
- After three minutes of inactivity, the heat pump's sleep mode will activate. See "*Wake Up Heat Pump*" above.

## 1.4 Display Panel





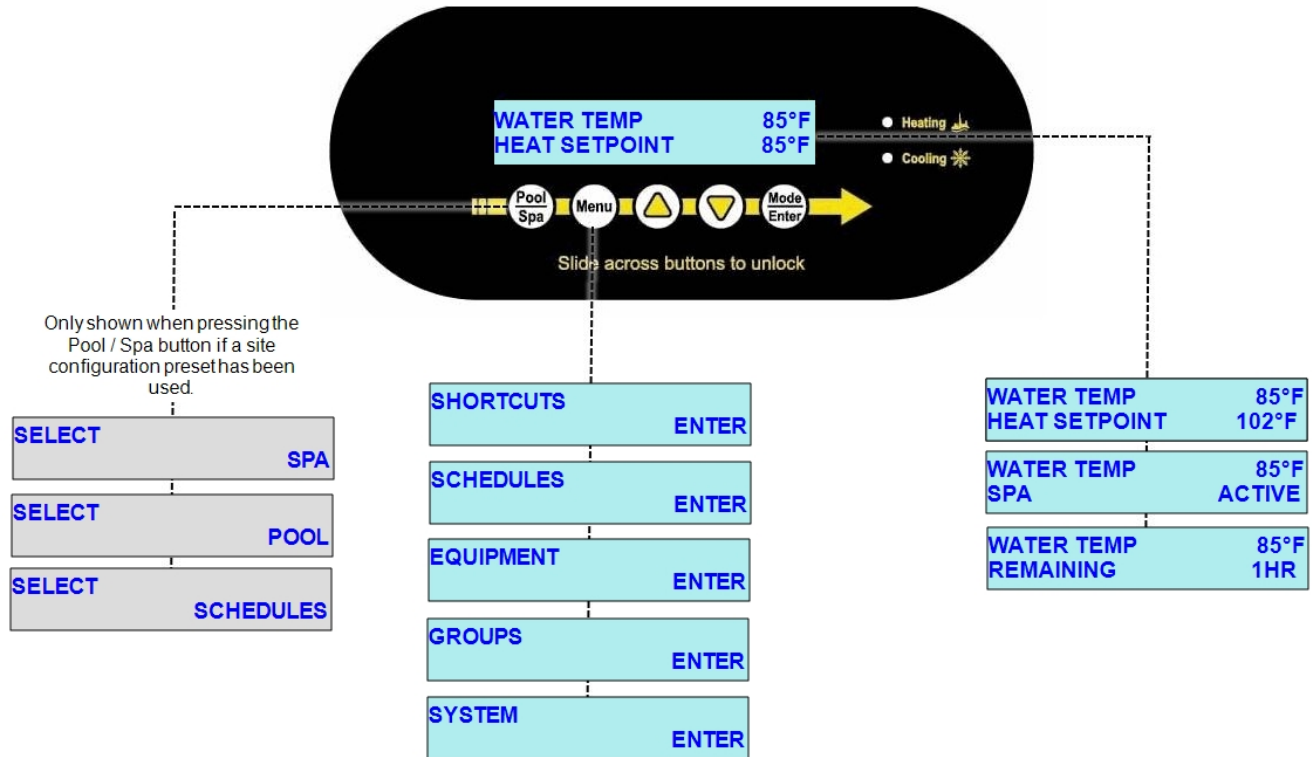

The following information outlines the operation for a standard installation.

Control Buttons will operate differently for custom installations; such as:

- When a heat pump is connected to an external controller or multiple heat pump configuration.
- When a site configuration preset has been used.




 







### Buttons

Button	Description
	Slowly slide a finger across the buttons from left to right to disable the sleep mode. Sleep mode will automatically reactivate after three minutes have passed.
	Select either the POOL or SPA mode. Any connected valves or circulation pumps will activate. To deactivate, press the "Pool/Spa" button again. If an option is highlighted, it will automatically activate after 10 seconds.
	Enter the user menus for heat pump options. Also used to exit from a menu. Press and hold the MENU button to exit to the main status screen.
	Used to increase temperature setpoint and navigate through menu options.
	Used to decrease temperature setpoint and navigate through menu options.
	Used to select the heat pump's operating mode. Also used to edit or confirm options in a menu.

## Indicator Lights

Indicator	Description
Heating	Red LED indicates the heat pump is heating the water.
Cooling	Blue LED indicates the heat pump is cooling the water.
When calling for heating or cooling, up to a three-minute delay may occur before the compressor starts.	

## Displays

	Display	Description
Entry code required		The heat pump has a user lock enabled. See " <i>Using Entry Code to Access Heat Pump</i> " on page 4.
No water flow		No water flow is detected. The filter pump is off or the heat pump is not receiving the correct water flow.
Primary Heat Pump		Primary heat pump controlling other connected heat pumps
Remote Controlled - by primary Heat Pump		Heat Pump is set to be controlled by another connected heat pump.
Remote Controlled - by external controller		Heat Pump is set to be controlled by an external controller.
Set to 75° F - Maintaining		Maintaining a water temperature set on the thermostat. In this example, the pool thermostat has been set to 75° F.
Set to 45° F - Cooling		Cooling water to point set on the thermostat. In this example, the pool thermostat has been set to 45° F.
Set to 75° F - Heating		Heating water to point set on the thermostat. In this example, the pool thermostat has been set to 75° F.
Set to Off		The heat pump has been deactivated using the "Mode / Enter" button. The heat pump will automatically restart on the next scheduled call for heating or cooling. Other activated devices will continue to operate

## 1.5 Activate HEAT Mode, COOL Mode, AUTO Mode, or Deactivate Equipment

Press "Mode / Enter" button until the desired mode is displayed.

- "HEAT" mode - After the fan and compressor start, the red "Heating" light will activate.
- "COOL" mode - After the fan and compressor start, the blue "Cooling" light will activate. If setting the heat pump's mode button to "COOL", please make sure to set solar system's Heat / Cool mode to "COOL". See "Solar Heat / Cool Mode" on page 23.
- "AUTO" mode - After the fan and compressor start, the heat pump will maintain the set temperature within 1°. The red "Heating" or blue "Cooling" light will activate. If setting the heat pump's mode button to "AUTO", please make sure to set solar system's Heat / Cool mode to "AUTO". See "Solar Heat / Cool Mode" on page 23.
- "OFF" - The heat pump will indicate it is deactivated. Any equipment connected to the heat pump will continue to operate. To deactivate all equipment connected to the heat pump, activate the service mode. See "Service Mode" on page 59.

**HEAT THE WATER**  
Use Mode Button to Select

**COOL THE WATER**  
Use Mode Button to Select

**USE AUTO MODE**  
Use Mode Button to Select

**DEACTIVATE UNIT**  
Use Mode Button to Select

**1.6 Set a desired temperature (setpoint) for the solar system to activate (Select Units)**

**PLEASE NOTE**  
Setting a water temperature setpoint for the solar system is only useful if the SOLAR CONTROL MODE is set to "HYBRID" or "ECO" mode. See "Solar Control Mode" on page 18.

- ALSO NOTE:**
- The maximum temperature the Solar System can be set towards is 104° F (40° C).
  - The solar system will be set to off if incoming water temperatures are above 108° F (42° C). This assumes the heat pump is controlling the solar system and it was installed as recommended.

**Example:**  
The solar system is set from 78° F to 80° F.

1 - Operation

**A** PRESS MENU BUTTON

WATER TEMP ##°F  
COOL SETPOINT ##°F

Pool Spa Menu [Up] [Down] Mode/Enter

**B** USE ARROWS TO "SHORTCUTS"

SHORTCUTS ENTER

Pool Spa Menu [Up] [Down] Mode/Enter

**C** PRESS "ENTER"

SHORTCUTS ENTER

Pool Spa Menu [Up] [Down] Mode/Enter

**1** USE ARROWS TO SOLAR SETPOINT

SOLAR SETPOINT 78°F

Pool Spa Menu [Up] [Down] Mode/Enter

**2** ENTER TO EDIT

SOLAR SETPOINT 78°F

Pool Spa Menu [Up] [Down] Mode/Enter

**3** ARROWS TO CHANGE

SOLAR SETPOINT 80°F

Pool Spa Menu [Up] [Down] Mode/Enter

**4** ENTER TO SAVE

SOLAR SETPOINT 80°F

Pool Spa Menu [Up] [Down] Mode/Enter

## 1.7 Set a desired temperature (setpoint) for the Heat Pump to activate

### PLEASE NOTE

Setting a water temperature setpoint for the heat pump is only useful if the SOLAR CONTROL MODE is set to "HYBRID" or the "SOLAR OFF" mode. See "Solar Control Mode" on page 18.

- The heat pump is typically used to maintain a minimum water temperature.
- The solar system would typically be set to maintain a maximum water temperature.

### Example:

A heat pump is set to 78° F and the solar system is set to 80° F.

- The heat pump would deactivate when the water reaches 78° F.
- The solar system would deactivate when the water temperature reaches 80° F.

Press the up or down arrow to set the desired temperature (setpoint) for the water.

- The heating indicator will illuminate when heating the water.
- The cooling indicator will illuminate when cooling the water.

### PLEASE NOTE:




- The maximum temperature the Heat Pump can be set towards is 104° F (40° C).

### PLEASE NOTE:

The heat pump will not operate if incoming water temperatures are above 110° F (43° C). If sustained water temperatures will fall below 32° F (0° C), the equipment must be winterized in order to prevent damage. See "Winterizing" on page 47.

### NOTE:

If a group's schedule is active and the temperature setpoint is changed, that group's temperature setpoint will also be changed.

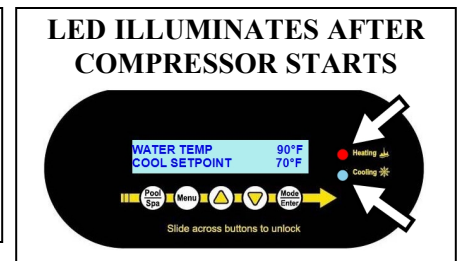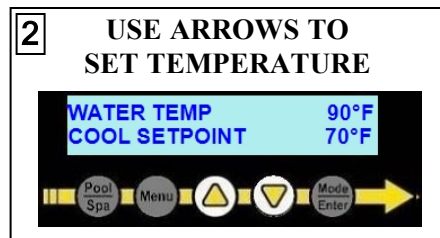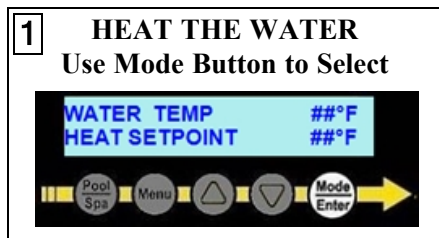

## 1.8 Using Shortcuts

The shortcuts menu provides quick access to model specific options and features. The following outlines some of these options.

### Group Access

As a group is created, a shortcut automatically appears in the shortcuts menu. The user can activate the group by shortcut and will be asked how long to operate that group.

- Multiple group shortcuts can operate at the same time. The time remaining for each group to operate will appear on the status screen.
- After the group shortcut timer expires, the heat pump group will resume its normally scheduled activity.
- To cancel the group shortcut's operation before its timer expires, go to the shortcut menu, select it, and choose "STOP".
- See "*Using a Group Shortcut*" on the facing page.
- See "*Stopping a Group Shortcut*" on the facing page.

#### **PLEASE NOTE:**

*The Spa and Pool groups (if applicable) will not appear in the shortcuts menu. Use the schedules or the Pool / Spa button to activate those groups.*

### Schedule Mode

There are three modes that can be set when running schedules.

- "AUTO" - The default mode. This allows schedules to run normally.
- "AWAY" - This mode is generally used when the user is away on vacation and doesn't want to maintain a water temperature. The heat pump will be deactivated while the rest of the schedules (including filtration) are allowed to continue.
- "OFF" - This mode turns off all schedules. The schedules resume when the schedule mode is set to "AUTO" again.
- (See "*Schedule and Program Modes*" on page 32 for more information.)

### Service Mode

This mode will deactivate the heat pump as well as all equipment connected to the heat pump.

- (See "*Service Mode*" on page 59 for more information.)

### Solar Menus

Additional menus are provided for heat pumps that control solar equipment.

- Solar Boost (Eco Mode Only) - See "*Solar Boost (ECO Mode Only)*" on page 21.
- Solar Setpoint - See "*Set a desired temperature (setpoint) for the solar system to activate (Select Units)*" on page 8.
- Solar Control Mode - See "*Solar Control Mode*" on page 18.
- Roof Temperature - See "*Viewing Solar Roof Temperature*" on page 22.

## Turbo Boost (Variable Speed Heat Pumps Only)











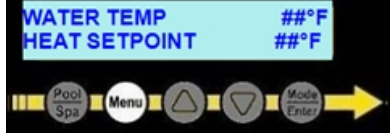
Upon demand, the heat pump's compressor can be set to maximum speed to heat or cool the water quickly. This is regardless of any previously set efficiency mode settings.

- The system will heat or cool the water with the compressor speed set to maximum. This will continue until the set temperature is reached. Then the configured efficiency mode (either 24-hour or scheduled) will resume.
- (See "Configure Variable Speed Compressors (Select Units)" on page 53 for more information.)

### Using a Group Shortcut

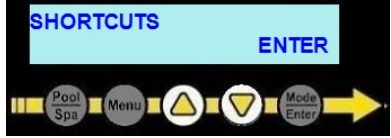In this example, a user activates a group that was previously created called "FILTRATION".

Enter "Shortcuts" menus, then proceed
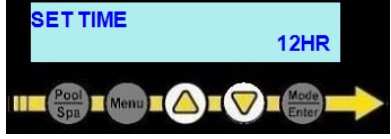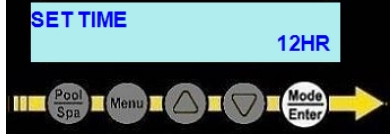
<p><b>IF UNIT IS ASLEEP, SWIPE TO WAKE UP</b></p> 	<p><b>A PRESS MENU BUTTON</b></p> 	<p><b>B USE ARROWS TO "SHORTCUTS"</b></p> 
<p><b>C PRESS "ENTER"</b></p> 	<p><b>1 ARROWS TO SHORTCUT TO USE</b></p> 	<p><b>2 ENTER TO SELECT SHORTCUT</b></p> 
<p><b>3 ENTER TO START</b></p> 	<p><b>4 ARROWS TO MAXIMUM TIME TO OPERATE</b></p> 	<p><b>5 ENTER TO ACTIVATE</b></p> 
<p><b>MENU TO EXIT, PRESS &amp; HOLD TO STATUS</b></p> 	<p><b>MENU TO EXIT, PRESS &amp; HOLD TO STATUS</b></p> 	

On the status screen the group will show as active. It will then display the time remaining before the group expires.

### Stopping a Group Shortcut

In this example a group called "FILTRATION" is deactivated before it's time expires.

Enter "Shortcuts" menus, then proceed

**IF UNIT IS ASLEEP, SWIPE TO WAKE UP**

**A PRESS MENU BUTTON**

**B USE ARROWS TO "SHORTCUTS"**

**C PRESS "ENTER"**

**1 ARROWS TO SHORTCUT TO STOP**

**2 ENTER TO SELECT**

**3 ENTER TO STOP**

**MENU TO EXIT, PRESS & HOLD TO STATUS**

**MENU TO EXIT, PRESS & HOLD TO STATUS**

## 1.9 Programming

**IN THIS SECTION:**

1.9.A Setting Date and Time .....	13
1.9.B Setting Date and Time Format .....	14
1.9.C Selecting Celsius or Fahrenheit .....	15
1.9.D Setting Entry Code Option .....	16
1.9.E Disabling Entry Code Option .....	17
1.9.F Configuring Solar Control (Select Units) .....	18
F.1 Solar Control Mode .....	18
F.1.a Set Solar Control to ECO Mode .....	18
F.1.b Set Solar Control to HYBRID Mode .....	19
F.1.c Set Solar Control to SOLAR OFF .....	20
F.2 Solar Boost (ECO Mode Only) .....	21
F.3 Heat Pump Mode (Hybrid or OFF Only) .....	22
F.4 Viewing Solar Roof Temperature .....	22
F.5 Solar Heat / Cool Mode .....	23
1.9.G Configuring Groups .....	24
G.1 Create a Group .....	24
G.2 Edit a Group .....	26
G.3 Delete a Group .....	27
1.9.H Configuring Schedules .....	27
H.1 Create a Schedule .....	28
H.2 Edit a Schedule .....	29
H.3 Delete a Schedule .....	31
1.9.I Schedule and Program Modes .....	32

## 1.9.A Setting Date and Time









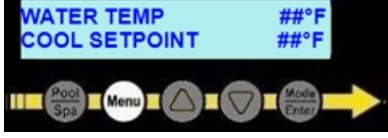
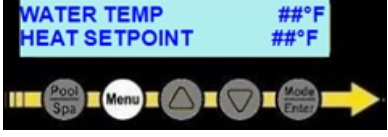
The date and time are required in order to allow schedules to operate properly.

Set the heat pump's date and time using the following steps.

### **PLEASE NOTE:**

If a PoolSync<sup>®</sup> device is attached and in-use, the time and date will automatically be set and maintained.

Enter "System" menus, then proceed
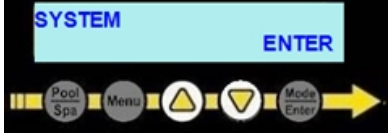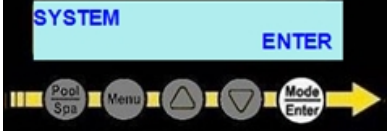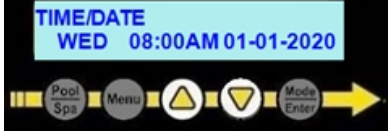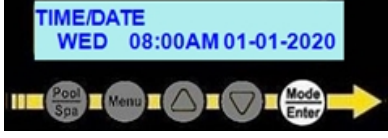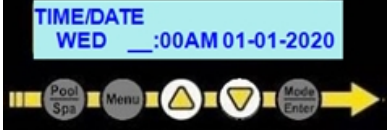
<p><b>IF UNIT IS ASLEEP, SWIPE TO WAKE UP</b></p>  <p>KEYPAD LOCKED</p>	<p><b>A PRESS MENU BUTTON</b></p>  <p>WATER TEMP ##°F COOL SETPOINT ##°F</p>	<p><b>B USE ARROWS TO "SYSTEM"</b></p>  <p>SYSTEM ENTER</p>
<p><b>C PRESS "ENTER"</b></p>  <p>SYSTEM ENTER</p>	<p><b>1 USE ARROWS TO MENU "TIME / DATE"</b></p>  <p>TIME/DATE WED 08:00AM 01-01-2020</p>	<p><b>2 PRESS ENTER, ITEM TO CHANGE WILL BLINK</b></p>  <p>TIME/DATE WED 08:00AM 01-01-2020</p>
<p><b>3 USE ARROWS TO CHANGE</b></p>  <p>TIME/DATE WED 09:00AM 01-01-2020</p>	<p><b>4 ENTER TO SAVE</b></p>  <p>TIME/DATE WED 09:00AM 02-03-2020</p>	<p><b>MENU TO EXIT, PRESS &amp; HOLD TO STATUS</b></p>  <p>WATER TEMP ##°F COOL SETPOINT ##°F</p>
<p><b>MENU TO EXIT, PRESS &amp; HOLD TO STATUS</b></p>  <p>WATER TEMP ##°F HEAT SETPOINT ##°F</p>		

## 1.9.B Setting Date and Time Format


The heat pump's date and time format can be customized.

### Customize Time


The time can be displayed in 24-hour *military* time (the default display is 12-hour).

Enter "System" menus, then proceed


**IF UNIT IS ASLEEP, SWIPE TO WAKE UP**




**A PRESS MENU BUTTON**




**B USE ARROWS TO "SYSTEM"**




**C PRESS "ENTER"**




**1 USE ARROWS TO MENU "TIME FORMAT"**




**2 ENTER TO EDIT**




**3 USE ARROWS TO CHANGE**



**4 ENTER TO SAVE**

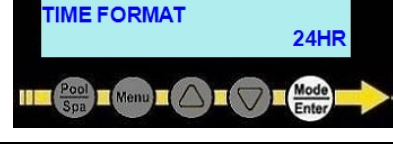

**MENU TO EXIT, PRESS & HOLD TO STATUS**

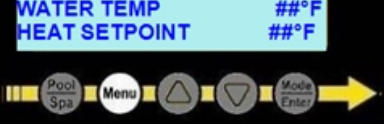


### Customize Date


The date can be displayed as Day-Month-Year (the default is Month-Day-Year).

Enter "System" menus, then proceed


**IF UNIT IS ASLEEP, SWIPE TO WAKE UP**


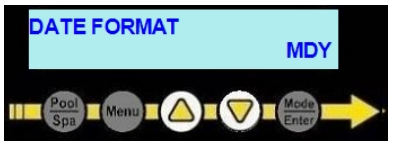
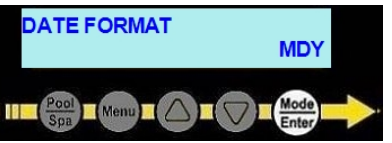

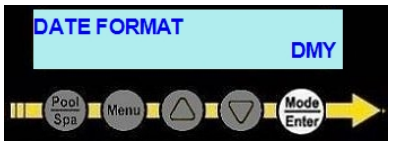


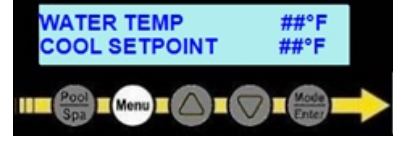

**A PRESS MENU BUTTON**

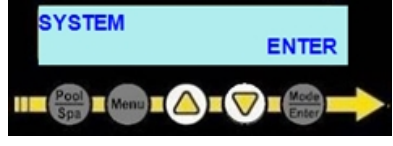

**B USE ARROWS TO "SYSTEM"**












<p><b>C</b> PRESS "ENTER"</p> 	<p><b>1</b> USE ARROWS TO MENU "DATE FORMAT"</p> 	<p><b>2</b> ENTER TO EDIT</p> 
<p><b>3</b> USE ARROWS TO CHANGE</p> 	<p><b>4</b> ENTER TO SAVE</p> 	<p>MENU TO EXIT, PRESS &amp; HOLD TO STATUS</p> 
<p>MENU TO EXIT, PRESS &amp; HOLD TO STATUS</p> 		
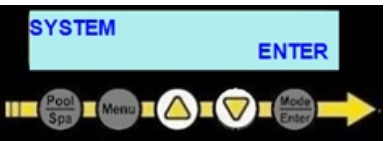
### 1.9.C Selecting Celsius or Fahrenheit

The user has the option of changing the way the water temperature is displayed. Either in Fahrenheit or Celsius. In the following example, the temperature units are changed from Fahrenheit to Celcius.

Enter "System" menus, then proceed

<p>IF UNIT IS ASLEEP, SWIPE TO WAKE UP</p> 	<p><b>A</b> PRESS MENU BUTTON</p> 	<p><b>B</b> USE ARROWS TO "SYSTEM"</p> 
<p><b>C</b> PRESS "ENTER"</p> 	<p><b>1</b> USE ARROWS TO "TEMPERATURE UNITS"</p> 	<p><b>2</b> ENTER TO EDIT</p> 
<p><b>3</b> USE ARROWS TO CHANGE</p> 	<p><b>4</b> ENTER TO SAVE</p> 	<p>MENU TO EXIT, PRESS &amp; HOLD TO STATUS</p> 

**MENU TO EXIT, PRESS  
& HOLD TO STATUS**



### 1.9.D Setting Entry Code Option

The entry code feature can prevent unauthorized access to the heat pump adjustments. This feature initiates after the heat pump goes into the sleep mode for the first time. This feature is commonly used on commercial applications.

#### NOTICE

Failure to heed the following may result in damage to equipment.

- **Before enabling the entry code feature, be sure to record the code.** If lost, the heat pump will require a program reset to regain access. This reset may require additional configuration by the installer.



#### PLEASE NOTE -

*A heat pump requesting an entry code is different than the control panel's sleep mode. (See "Wake Up Heat Pump" on page 4 for more information.)*

Enter "System" menus, then proceed

1 - Operation

<p><b>IF UNIT IS ASLEEP, SWIPE TO WAKE UP</b></p>	<p><b>A PRESS MENU BUTTON</b></p>	<p><b>B USE ARROWS TO "SYSTEM"</b></p>
<p><b>C PRESS "ENTER"</b></p>	<p><b>1 USE ARROWS TO MENU "USER ENTRY CODE"</b></p>	<p><b>2 ENTER TO EDIT</b></p>
<p><b>3 USE ARROWS TO CHANGE</b></p>	<p><b>4 ENTER TO SAVE</b></p>	<p><b>5 USE ARROWS TO MENU "USER CODE ENABLED"</b></p>
<p><b>6 ENTER TO EDIT</b></p>	<p><b>7 USE ARROWS TO CHANGE</b></p>	<p><b>8 ENTER TO SAVE</b></p>

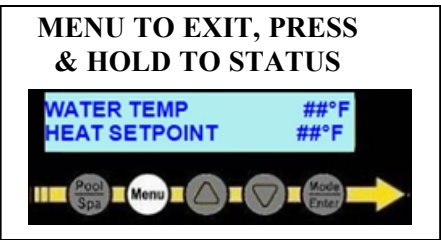
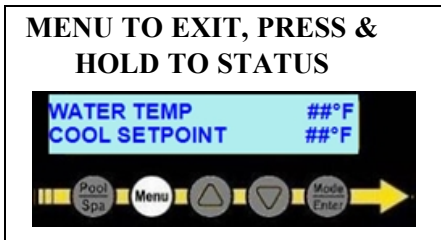


**1.9.E Disabling Entry Code Option**









**PLEASE NOTE -**

- If an entry code has already been activated, the code must be entered before proceeding to disable.

**Use Entry Code**

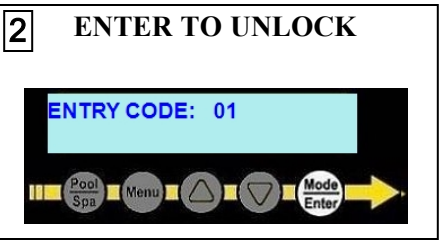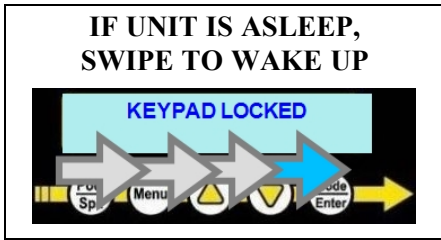

**Disable User Lock**

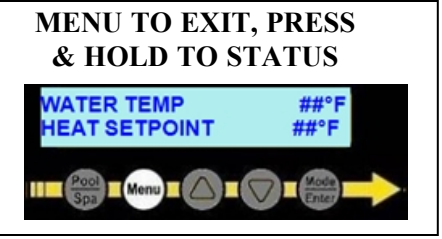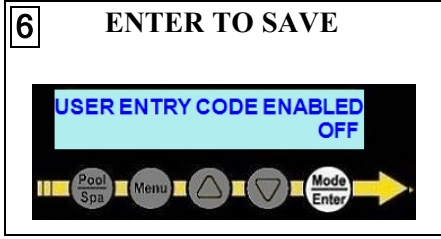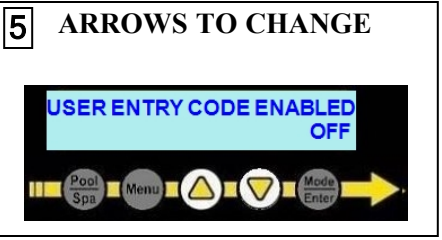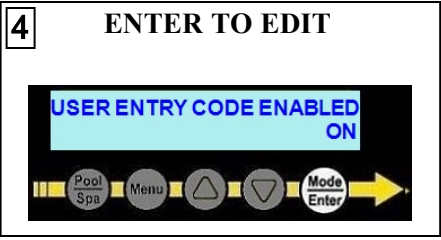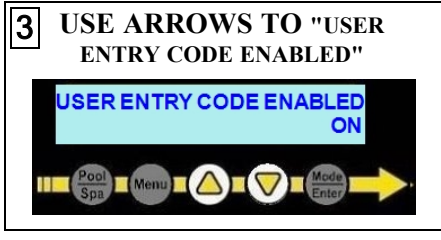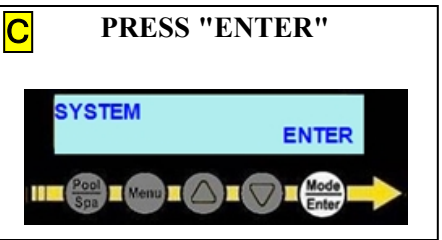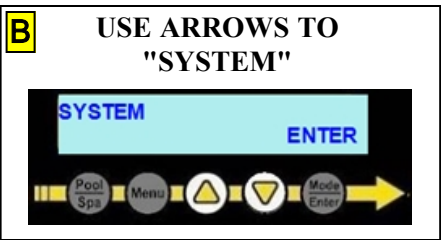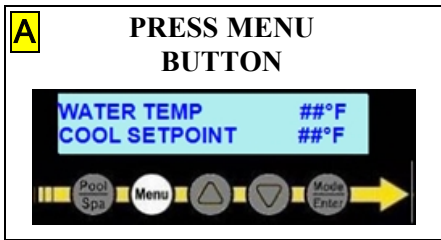

## 1.9.F Configuring Solar Control (Select Units)

### IN THIS SECTION:

<b>F.1 Solar Control Mode</b> .....	<b>18</b>
F.1.a Set Solar Control to ECO Mode .....	18
F.1.b Set Solar Control to HYBRID Mode .....	19
F.1.c Set Solar Control to SOLAR OFF .....	20
<b>F.2 Solar Boost (ECO Mode Only)</b> .....	<b>21</b>
<b>F.3 Heat Pump Mode (Hybrid or OFF Only)</b> .....	<b>22</b>
<b>F.4 Viewing Solar Roof Temperature</b> .....	<b>22</b>
<b>F.5 Solar Heat / Cool Mode</b> .....	<b>23</b>







### F.1 Solar Control Mode

Set the Solar Control mode. Available options are "ECO", "HYBRID", or "SOLAR OFF".

- **"ECO"**
  - In ECO (or economy) mode, the heat pump operation is disabled. Monitoring of the solar differences in temperature are made. The solar diverter valve actuator will activate as needed.
  - This is the maximum economical maintenance of the Pool / Spa water temperature by the solar system only.
  - A single water setpoint temperature is maintained by the user.
  - A solar boost mode is available to temporarily override this mode to bring water quickly to a desired temperature. See "Solar Boost (ECO Mode Only)" on page 21.
- **"HYBRID"**
  - In Hybrid mode, the heat pump and solar control work together to maintain the pool / spa water temperature within two setpoints. A heat pump setpoint and a solar setpoint (a minimum and maximum temperature).
  - The heat pump is typically used to maintain the minimum setpoint, while solar control maintains the maximum setpoint.
- **"SOLAR OFF"**
  - Solar control is disabled. This is the default setting from the factory.
  - When in this state, the valve actuator will rotate to the solar off position.
  - Unless the manual override feature is enabled. Water is diverted through the heat pump only.

#### F.1.a Set Solar Control to ECO Mode

Enter "Shortcuts" menus, then proceed

<p><b>IF UNIT IS ASLEEP, SWIPE TO WAKE UP</b></p> 	<p><b>A PRESS MENU BUTTON</b></p> 	<p><b>B USE ARROWS TO "SHORTCUTS"</b></p> 
<p><b>C PRESS "ENTER"</b></p> 	<p><b>1 ARROWS TO "SOLAR CONTROL MODE"</b></p> 	<p><b>2 ENTER TO EDIT</b></p> 

**3 USE ARROWS TO CHANGE**

**4 ENTER TO SAVE**

**MENU TO EXIT, PRESS & HOLD TO STATUS**

**MENU TO EXIT, PRESS & HOLD TO STATUS**

**F.1.b Set Solar Control to HYBRID Mode**

Enter "Shortcuts" menus, then proceed

**IF UNIT IS ASLEEP, SWIPE TO WAKE UP**

**A PRESS MENU BUTTON**

**B USE ARROWS TO "SHORTCUTS"**

**C PRESS "ENTER"**

**1 ARROWS TO "SOLAR CONTROL MODE"**

**2 ENTER TO EDIT**

**3 USE ARROWS TO CHANGE**









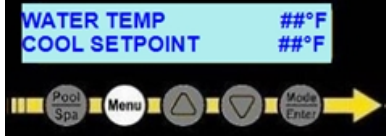

**4 ENTER TO SAVE**

**MENU TO EXIT, PRESS & HOLD TO STATUS**

**MENU TO EXIT, PRESS & HOLD TO STATUS**

## F.1.c Set Solar Control to SOLAR OFF

Enter "Shortcuts" menus, then proceed
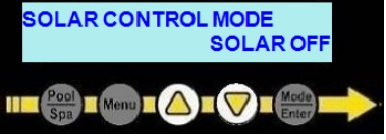
<p><b>IF UNIT IS ASLEEP, SWIPE TO WAKE UP</b></p> 	<p><b>A PRESS MENU BUTTON</b></p> 	<p><b>B USE ARROWS TO "SHORTCUTS"</b></p> 
<p><b>C PRESS "ENTER"</b></p> 	<p><b>1 ARROWS TO "SOLAR CONTROL MODE"</b></p> 	<p><b>2 ENTER TO EDIT</b></p> 
<p><b>3 USE ARROWS TO CHANGE</b></p> 	<p><b>4 ENTER TO SAVE</b></p> 	<p><b>MENU TO EXIT, PRESS &amp; HOLD TO STATUS</b></p> 
<p><b>MENU TO EXIT, PRESS &amp; HOLD TO STATUS</b></p> 		

## F.2 Solar Boost (ECO Mode Only)

Solar Boost allows the user to temporarily override the "ECO" mode to rapidly bring the water temperature to the solar temperature setpoint.

- The option activates the heat pump and solar system at the same time.
- When boost is activated, the heat pump setpoint is automatically changed to match the solar setpoint. The equipment operates together towards a single target setpoint
- Once the pool / spa water temperature reaches the setpoint, the system falls back into the ECO mode.

### NOTE

- This mode is only available if the solar control has been set to the "ECO" mode. See "Solar Control Mode" on page 18.

### Activating Solar Boost

Enter "Shortcuts" menus, then proceed

<p><b>IF UNIT IS ASLEEP, SWIPE TO WAKE UP</b></p>	<p><b>A PRESS MENU BUTTON</b></p>	<p><b>B USE ARROWS TO "SHORTCUTS"</b></p>
<p><b>C PRESS "ENTER"</b></p>	<p><b>1 USE ARROWS TO "SOLAR BOOST"</b></p>	<p><b>2 ENTER TO EDIT</b></p>
<p><b>3 USE ARROWS TO CHANGE</b></p>	<p><b>4 ENTER TO SAVE</b></p>	<p><b>MENU TO EXIT, PRESS &amp; HOLD TO STATUS</b></p>
<p><b>MENU TO EXIT, PRESS &amp; HOLD TO STATUS</b></p>		

### F.3 Heat Pump Mode (Hybrid or OFF Only)

Set the Heat Pump's mode. Available options are "HEAT SETPOINT" or "OFF".

Press "Mode / Enter" button until the desired mode is displayed.

- HEAT SETPOINT - Used to activate heat pump's heating mode. If the heat pump's setpoint is below the Pool or Spa water temperature, the fan and compressor will start, then the red "Heating" light will activate.
- OFF - The heat pump will indicate it is deactivated. The current water temperature will be displayed.

**PLEASE NOTE:**








*This mode does not control the solar control mode. See "Solar Control Mode" on page 18.*



### F.4 Viewing Solar Roof Temperature

A sensor located on the roof can measure the roof's air temperature. This approximates the heating or cooling potential of the water in the solar panels on the roof. This menu is a status screen and can not be edited.

Enter "Shortcuts" menus, then proceed

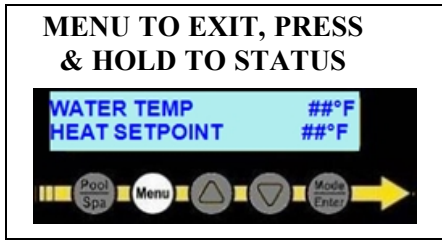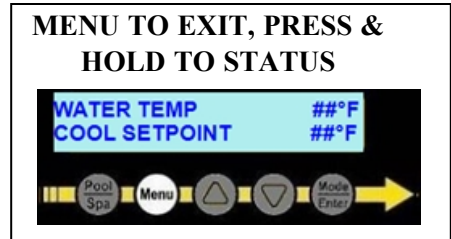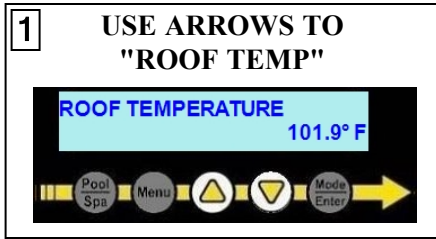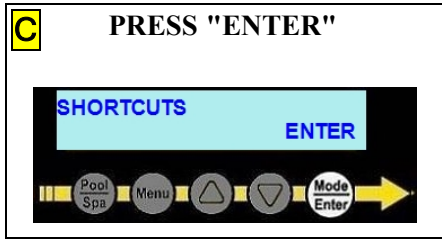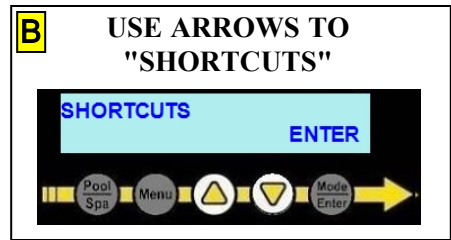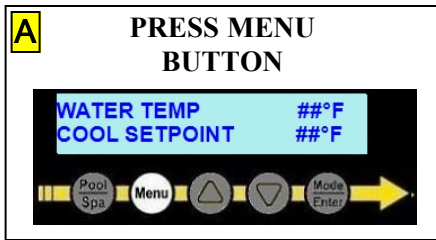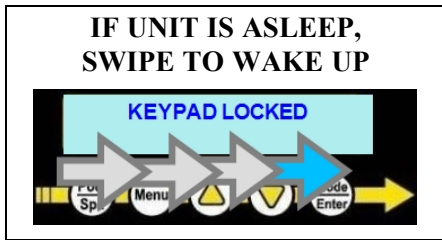

## F.5 Solar Heat / Cool Mode

The user can set the Solar Heat Cool mode if necessary. Available options are "HEAT", "COOL", or "AUTO". The default mode from the factory is "HEAT". It is advised that this mode match the heat pump's mode button setting.

In the following example, the Solar Heat / Cool Mode is reset from "HEAT" to "COOL".

Enter "Solar Advanced" menus, then proceed

<p><b>IF UNIT IS ASLEEP, SWIPE TO WAKE UP</b></p> 	<p><b>A PRESS MENU BUTTON</b></p> 	<p><b>B USE ARROWS TO "SYSTEM"</b></p> 
<p><b>C PRESS "ENTER"</b></p> 	<p><b>D USE ARROWS TO "ADVANCED"</b></p> 	<p><b>E PRESS "ENTER"</b></p> 
<p><b>F USE ARROWS TO "SOLAR CONTROL"</b></p> 	<p><b>G PRESS "ENTER"</b></p> 	<p><b>H USE ARROWS TO "SOLAR ADVANCED"</b></p> 
<p><b>I PRESS "ENTER"</b></p> 	<p><b>1 ARROWS TO "SOLAR HEAT / COOL MODE"</b></p> 	<p><b>2 ENTER TO EDIT</b></p> 
<p><b>3 USE ARROWS TO CHANGE</b></p> 	<p><b>4 ENTER TO SAVE</b></p> 	<p><b>MENU TO EXIT, PRESS &amp; HOLD TO STATUS</b></p> 
<p><b>MENU TO EXIT, PRESS &amp; HOLD TO STATUS</b></p> 		

## 1.9.G Configuring Groups

A group is used to control multiple devices (equipment) connected to the heat pump, either by manually activating the group through a shortcut, or scheduling the group to activate at a specified time.

### EXAMPLES IN THIS SECTION:

G.1 Create a Group .....	24
G.2 Edit a Group .....	26
G.3 Delete a Group .....	27

### G.1 Create a Group

#### EXAMPLES OF GROUPS THAT CAN BE CREATED:

- A Custom Filtration Group -
  - This group could be used if the user didn't want to regulate the temperature of the water the entire time the circulation pump is activated. A custom group can be created that separates the amount of filtration time from the amount of time allowed for the heat pump to heat or cool the water.

The example below shows a "FILTRATION" group being created manually.  
A circulation pump will be added to the group.

#### PLEASE NOTE

*This section only describes the configuration of an already connected circulation pump. To physically wire this type of device to the heat pump, see the heat pump's installation manual.*

Enter "Groups" menus, then proceed

**IF UNIT IS ASLEEP, SWIPE TO WAKE UP**  
KEYPAD LOCKED

**A PRESS "MENU" BUTTON**  
WATER TEMP ##°F  
COOL SETPOINT ##°F

**B USE ARROWS TO "GROUPS"**  
GROUPS ENTER

**C PRESS "ENTER"**  
GROUPS ENTER

**1 USE ARROWS TO "NEW GROUP SETUP"**  
NEW GROUP SETUP

**2 ENTER TO CREATE**  
NEW GROUP SETUP

**3 USE ARROWS TO NAME "FILTRATION"**  
NAME FILTRATION

**4 ENTER TO SAVE**  
NAME FILTRATION

**5 USE ARROWS TO SET MAXIMUM ACTIVE TIME**  
MAXIMUM ACTIVE TIME 12HR

**6 ENTER TO SAVE**

**7 USE ARROWS TO SET FREEZE PROTECT OPTION**

**8 ENTER TO SAVE**

**9 PRESS BUTTON UNDER "YES" TO SAVE**

**10 PRESS "ENTER" TO ADD EQUIPMENT**

**11 USE ARROWS TO SELECT EQUIPMENT**

**12 ENTER TO SAVE**

**13 USE ARROWS TO SET RPM**

**14 ENTER TO SAVE**

**MENU TO EXIT, PRESS & HOLD TO STATUS**

**MENU TO EXIT, PRESS & HOLD TO STATUS**

The group is now ready to be activated using a shortcut or scheduled to activate at a certain time.

- See "*Using a Group Shortcut*" on page 11.
- See "*Create a Schedule*" on page 28.

## G.2 Edit a Group

The example below shows a "FILTRATION" group being edited.

An existing variable speed circulation pump will be deleted and an attached single speed circulation pump (named "POOL PUMP") will be added. The device will be set to be "ON" when the group is active.

Enter "Groups" menus, then proceed

<p><b>IF UNIT IS ASLEEP, SWIPE TO WAKE UP</b></p> 	<p><b>A PRESS "MENU" BUTTON</b></p> 	<p><b>B USE ARROWS TO "GROUPS"</b></p> 
<p><b>C PRESS "ENTER"</b></p> 	<p><b>1 USE ARROWS TO "FILTRATION GROUP"</b></p> 	<p><b>2 ENTER TO EDIT</b></p> 
<p><b>3 USE ARROWS TO "REMOVE EQUIPMENT"</b></p> 	<p><b>4 ENTER TO SELECT</b></p> 	<p><b>5 USE ARROWS TO DEVICE TO REMOVE</b></p> 
<p><b>6 ENTER TO SELECT</b></p> 	<p><b>7 PRESS BUTTON UNDER "YES" TO CONFIRM</b></p> 	<p><b>8 USE ARROWS TO "ADD EQUIPMENT"</b></p> 
<p><b>9 ENTER TO SELECT</b></p> 	<p><b>10 USE ARROWS TO DEVICE TO ADD</b></p> 	<p><b>11 ENTER TO SELECT</b></p> 
<p><b>12 USE ARROWS TO SELECT DEVICE STATE</b></p> 	<p><b>13 ENTER TO SAVE</b></p> 	<p><b>MENU TO EXIT, PRESS &amp; HOLD TO STATUS</b></p> 

MENU TO EXIT, PRESS & HOLD TO STATUS



### G.3 Delete a Group

The example below shows a "FILTRATION" group being deleted. Any schedules associated with that group will also be deleted.

Enter "Groups" menus, then proceed

<p><b>IF UNIT IS ASLEEP, SWIPE TO WAKE UP</b></p>	<p><b>A PRESS "MENU" BUTTON</b></p>	<p><b>B USE ARROWS TO "GROUPS"</b></p>
<p><b>C PRESS "ENTER"</b></p>	<p><b>1 USE ARROWS TO "DELETE GROUP"</b></p>	<p><b>2 ENTER TO SELECT</b></p>
<p><b>3 USE ARROWS TO GROUP TO BE DELETED</b></p>	<p><b>4 ENTER TO SELECT</b></p>	<p><b>5 PRESS BUTTON UNDER "YES" TO CONFIRM</b></p>
<p><b>MENU TO EXIT, PRESS &amp; HOLD TO STATUS</b></p>	<p><b>MENU TO EXIT, PRESS &amp; HOLD TO STATUS</b></p>	

### 1.9.H Configuring Schedules

A schedule can be used to activate a group of devices at a specified time.

- See "Configuring Groups" on page 24.

**EXAMPLES IN THIS SECTION:**

H.1 Create a Schedule .....	28
H.2 Edit a Schedule .....	29
H.3 Delete a Schedule .....	31

**H.1 Create a Schedule**

A maximum of four (4) schedule programs can be configured for each group.

The example below shows a "FILTRATION" group being scheduled.

Enter "Schedules" menus, then proceed

1 - Operation

<p><b>IF UNIT IS ASLEEP, SWIPE TO WAKE UP</b></p> 	<p><b>A PRESS MENU BUTTON</b></p> 	<p><b>B USE ARROWS TO "SCHEDULES"</b></p> 
<p><b>C PRESS "ENTER"</b></p> 	<p><b>1 ARROWS TO GROUP TO SCHEDULE</b></p> 	<p><b>2 ENTER TO EDIT</b></p> 
<p><b>3 USE ARROWS TO THE PROGRAM TO SCHEDULE (1-4)</b></p> 	<p><b>4 ENTER TO EDIT</b></p> 	<p><b>5 USE ARROWS TO EDIT DAYS</b></p> 
<p><b>6 ENTER TO SAVE</b></p> 	<p><b>7 USE ARROWS TO "START" TIME</b></p> 	<p><b>8 ENTER TO EDIT</b></p> 
<p><b>9 USE ARROWS TO CHANGE</b></p> 	<p><b>10 ENTER TO SAVE</b></p> 	<p><b>11 USE ARROWS TO "END" TIME</b></p> 

**12 ENTER TO EDIT**

**13 USE ARROWS TO CHANGE**

**14 ENTER TO SAVE**

**MENU TO EXIT, PRESS & HOLD TO STATUS**

**MENU TO EXIT, PRESS & HOLD TO STATUS**

## H.2 Edit a Schedule

The example below shows a pool group schedule being edited:

- From 8:00AM-5:00PM SMTWTFS (everyday)
- To 9:00AM-6:00PM -MTWTF- (Monday through Friday)



### WARNING

Failure to heed the following may result in injury or death.

- When editing schedules containing the circulation pump, allow time for proper filtration.
- Follow all State and Local guidelines in regards to satisfying code-specified whole system turnover rates.

### PLEASE NOTE:

*This is not a recommended filtration schedule.*

- What is shown is just an example of how to edit a schedule.
- The default schedule was initially created using one of the presets in the installer wizard.

Enter "Schedules" menus, then proceed

**IF UNIT IS ASLEEP, SWIPE TO WAKE UP**

**A PRESS MENU BUTTON**

**B USE ARROWS TO "SCHEDULES"**

**C PRESS "ENTER"**

**1 USE ARROWS TO "POOL GROUP"**

**2 PRESS ENTER TO EDIT**

**3 USE ARROWS TO SCHEDULE TO EDIT**

PROGRAM 1 SMTWTFS  
08:00AM-05:00PM EDIT

**4 ENTER TO EDIT**

PROGRAM 1 SMTWTFS  
08:00AM-05:00PM EDIT

**5 USE ARROWS TO "PROGRAM 1 DAYS"**

PROGRAM 1 DAYS  
SMTWTFS

**6 ENTER TO EDIT**

PROGRAM 1 DAYS  
SMTWTFS

**7 USE ARROWS TO CHANGE**

PROGRAM 1 DAYS  
-MTWTF-

**8 ENTER TO SAVE**

PROGRAM 1 DAYS  
-MTWTF-

**9 USE ARROWS TO "PROGRAM1 START"**

PROGRAM 1 START  
08:00AM

**10 ENTER TO EDIT**

PROGRAM 1 START  
08:00AM

**11 USE ARROWS TO CHANGE**

PROGRAM 1 START  
09:00AM

**12 ENTER TO SAVE**

PROGRAM 1 START  
09:00AM

**13 USE ARROWS TO "PROGRAM1 END"**

PROGRAM 1 END  
05:00PM

**14 ENTER TO EDIT**

PROGRAM 1 END  
05:00PM

**15 USE ARROWS TO CHANGE**

PROGRAM 1 END  
06:00PM

**16 ENTER TO SAVE**

PROGRAM 1 END  
06:00PM

**MENU TO EXIT, PRESS & HOLD TO STATUS**

WATER TEMP ##°F  
COOL SETPOINT ##°F

**MENU TO EXIT, PRESS & HOLD TO STATUS**

WATER TEMP ##°F  
HEAT SETPOINT ##°F

### H.3 Delete a Schedule

Select the group and then the program to edit. Use the clear option to remove the program's schedule.

In the following example, the group "FILTRATION" has a schedule in "PROGRAM 1" that will be cleared (deleted).

Enter "Schedules" menus, then proceed

<p><b>IF UNIT IS ASLEEP, SWIPE TO WAKE UP</b></p> 	<p><b>A PRESS MENU BUTTON</b></p> 	<p><b>B USE ARROWS TO "SCHEDULES"</b></p> 
<p><b>C PRESS "ENTER"</b></p> 	<p><b>1 ARROWS TO SCHEDULED GROUP</b></p> 	<p><b>2 ENTER TO EDIT</b></p> 
<p><b>3 USE ARROWS TO PROGRAM TO EDIT</b></p> 	<p><b>4 ENTER TO EDIT</b></p> 	<p><b>5 USE ARROWS TO "CLEAR"</b></p> 
<p><b>6 ENTER TO SELECT</b></p> 	<p><b>7 SELECT "YES" TO CLEAR PROGRAM</b></p> 	<p><b>MENU TO EXIT, PRESS &amp; HOLD TO STATUS</b></p> 
<p><b>MENU TO EXIT, PRESS &amp; HOLD TO STATUS</b></p> 		

## 1.9.I Schedule and Program Modes

Schedules can be deactivated temporarily as needed. Either globally through a schedule mode, or individually by setting a group's program mode.


SCHEDULE MODE	Description	
"AUTO"	The default mode. This allows schedules to run normally.	See "Set Schedule Mode to "AUTO"" below.
"AWAY"	This mode is generally used when the user is away on vacation and doesn't want to maintain a water temperature. The heat pump will be deactivated while the rest of the schedules (including filtration) are allowed to continue.	See "Set Schedule Mode to "AWAY"" on the facing page.
"OFF"	This mode turns off all schedules. The schedules resume when the schedule mode is set to "AUTO" again. Please note - this will also halt any connected circulation pump activity. This option is not meant for long term usage.	See "Set Schedule Mode to "OFF"" on page 34.

PROGRAM MODE	Description	
"ON"	A group's scheduled programs are set to operate normally.	See "Set Group Programs to "ON"" on page 35.
"PAUSED"	A group's scheduled programs will be paused. The programs will automatically resume the next scheduled day. No other group's activities will be effected.	See "Set Group Programs to "PAUSED"" on page 35.
"OFF"	This mode turns off all schedule programs for the group indefinitely. Programs resume when the program mode is set to "ON" again.	See "Set Group Programs to "OFF"" on page 36.


Set Schedule Mode to "AUTO"

Enter "Shortcuts" menus, then proceed


**IF UNIT IS ASLEEP, SWIPE TO WAKE UP**



**A PRESS MENU BUTTON**



**B USE ARROWS TO "SHORTCUTS"**



**C** PRESS "ENTER"

SHORTCUTS ENTER

Pool Spa Menu [Up] [Down] Mode Enter

**1** ARROWS TO "SCHEDULE MODE"

SCHEDULE MODE OFF

Pool Spa Menu [Up] [Down] Mode Enter

**2** ENTER TO EDIT

SCHEDULE MODE OFF

Pool Spa Menu [Up] [Down] Mode Enter

**3** ARROWS TO "AUTO"

SCHEDULE MODE AUTO

Pool Spa Menu [Up] [Down] Mode Enter

**4** ENTER TO SAVE

SCHEDULE MODE AUTO

Pool Spa Menu [Up] [Down] Mode Enter

MENU TO EXIT, PRESS & HOLD TO STATUS

WATER TEMP ##°F  
COOL SETPOINT ##°F

Pool Spa Menu [Up] [Down] Mode Enter

MENU TO EXIT, PRESS & HOLD TO STATUS

WATER TEMP ##°F  
HEAT SETPOINT ##°F

Pool Spa Menu [Up] [Down] Mode Enter

Set Schedule Mode to "AWAY"

Enter "Shortcuts" menus, then proceed

IF UNIT IS ASLEEP, SWIPE TO WAKE UP

KEYPAD LOCKED

Pool Spa Menu [Up] [Down] Mode Enter

**A** PRESS MENU BUTTON

WATER TEMP ##°F  
COOL SETPOINT ##°F

Pool Spa Menu [Up] [Down] Mode Enter

**B** USE ARROWS TO "SHORTCUTS"

SHORTCUTS ENTER

Pool Spa Menu [Up] [Down] Mode Enter

**C** PRESS "ENTER"

SHORTCUTS ENTER

Pool Spa Menu [Up] [Down] Mode Enter

**1** ARROWS TO "SCHEDULE MODE"

SCHEDULE MODE AUTO

Pool Spa Menu [Up] [Down] Mode Enter

**2** ENTER TO EDIT

SCHEDULE MODE AUTO

Pool Spa Menu [Up] [Down] Mode Enter

**3** ARROWS TO "AWAY"

SCHEDULE MODE AWAY

Pool Spa Menu [Up] [Down] Mode Enter

**4** ENTER TO SAVE

SCHEDULE MODE AWAY

Pool Spa Menu [Up] [Down] Mode Enter

**5** ARROWS AND ENTER TO SET END DATE

AWAY END DATE 01-01-2020

Pool Spa Menu [Up] [Down] Mode Enter

MENU TO EXIT, PRESS & HOLD TO STATUS



MENU TO EXIT, PRESS & HOLD TO STATUS



Set Schedule Mode to "OFF"

Enter "Shortcuts" menus, then proceed

IF UNIT IS ASLEEP, SWIPE TO WAKE UP



**A** PRESS MENU BUTTON



**B** USE ARROWS TO "SHORTCUTS"



**C** PRESS "ENTER"



**1** ARROWS TO "SCHEDULE MODE"



**2** ENTER TO EDIT



**3** ARROWS TO "OFF"



**4** ENTER TO SAVE



MENU TO EXIT, PRESS & HOLD TO STATUS













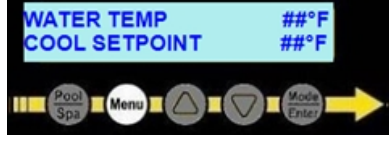
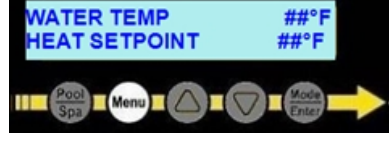
MENU TO EXIT, PRESS & HOLD TO STATUS



Set Group Programs to "ON"

In the following example, the "Pool" group's set of scheduled programs will be set from "PAUSED" back to "ON".

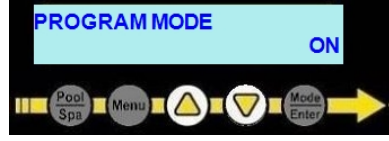


Enter "Schedules" menus, then proceed








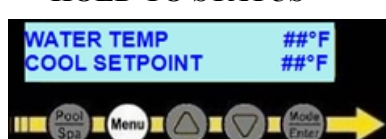
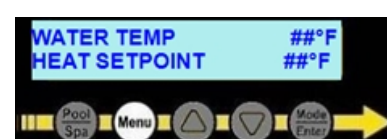
<p><b>IF UNIT IS ASLEEP, SWIPE TO WAKE UP</b></p> 	<p><b>A PRESS MENU BUTTON</b></p> 	<p><b>B USE ARROWS TO "SCHEDULES"</b></p> 
<p><b>C PRESS "ENTER"</b></p> 	<p><b>1 ARROWS TO "POOL GROUP"</b></p> 	<p><b>2 ENTER TO EDIT</b></p> 
<p><b>3 ARROWS TO "PROGRAM MODE"</b></p> 	<p><b>4 ENTER TO EDIT</b></p> 	<p><b>5 ARROWS TO "ON"</b></p> 
<p><b>6 ENTER TO SAVE</b></p> 	<p><b>MENU TO EXIT, PRESS &amp; HOLD TO STATUS</b></p> 	<p><b>MENU TO EXIT, PRESS &amp; HOLD TO STATUS</b></p> 

Set Group Programs to "PAUSED"

In the following example, the "Pool" group's set of scheduled programs will be paused. This will continue until the programs are set back to "ON".

Enter "Schedules" menus, then proceed





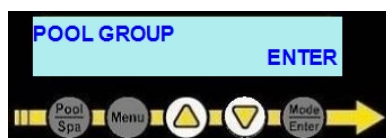

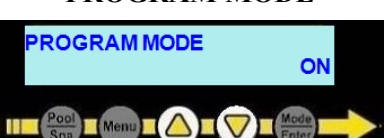
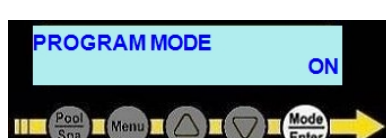
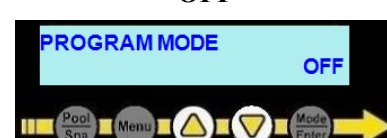
<p><b>IF UNIT IS ASLEEP, SWIPE TO WAKE UP</b></p> 	<p><b>A PRESS MENU BUTTON</b></p> 	<p><b>B USE ARROWS TO "SCHEDULES"</b></p> 
---	--	---




<b>C</b> PRESS "ENTER" 	<b>1</b> ARROWS TO "POOL GROUP" 	<b>2</b> ENTER TO EDIT 
<b>3</b> ARROWS TO "PROGRAM MODE" 	<b>4</b> ENTER TO EDIT 	<b>5</b> ARROWS TO "PAUSED" 
<b>6</b> ENTER TO SAVE 	MENU TO EXIT, PRESS & HOLD TO STATUS 	MENU TO EXIT, PRESS & HOLD TO STATUS 

Set Group Programs to "OFF"

In the following example, the "Pool" group's set of scheduled programs will be set from "ON" to "OFF".  
 The schedules will not resume until the programs are set back to "ON".

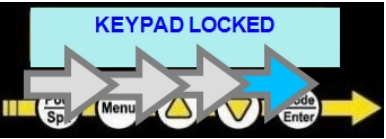Enter "Schedules" menus, then proceed

IF UNIT IS ASLEEP, SWIPE TO WAKE UP 	<b>A</b> PRESS MENU BUTTON 	<b>B</b> USE ARROWS TO "SCHEDULES" 
<b>C</b> PRESS "ENTER" 	<b>1</b> ARROWS TO "POOL GROUP" 	<b>2</b> ENTER TO EDIT 
<b>3</b> ARROWS TO "PROGRAM MODE" 	<b>4</b> ENTER TO EDIT 	<b>5</b> ARROWS TO "OFF" 

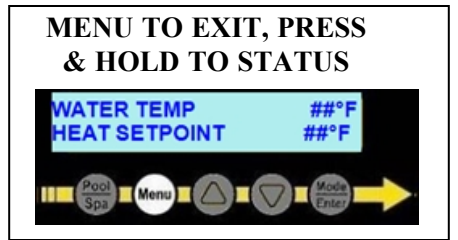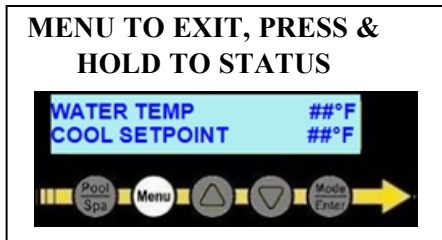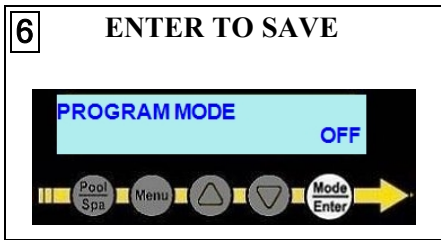

## 1.10 External Equipment

**IN THIS SECTION:**

1.10.A PoolSync® .....	37
1.10.B Operating Heat Pump (With an External Controller) .....	38
1.10.C Operating Multiple Connected Heat Pumps .....	39

### 1.10.A PoolSync®









Select heat pumps will automatically allow for WI-FI capabilities using a PoolSync® .







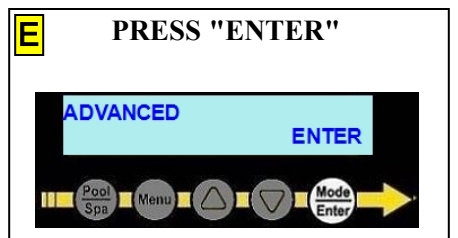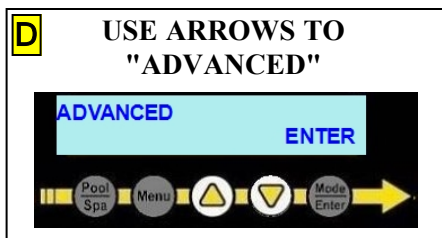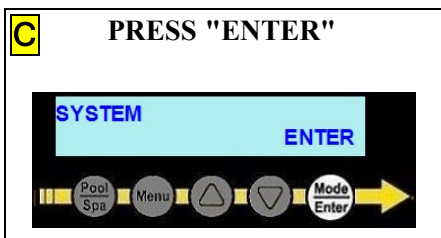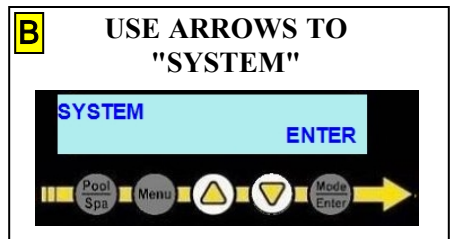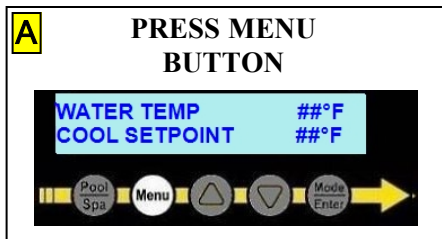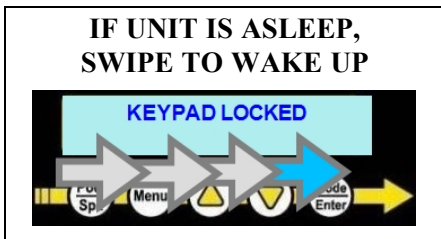

- The PoolSync® device will allow direct control of the heat pump from a mobile device.
- Contact installing dealer to order this product.
- Go online and download the PoolSync® manual for information on connecting and using this device with an AquaCal heat pump.  
<https://www.aquacal.com/accessories/>
- Confirm the PoolSync® has been set as an active external control device. See "*Confirm PoolSync® is set to operate*" below.

#### Confirm PoolSync® is set to operate


The heat pump has this device active by default. In this example, however, the heat pump is reconfigured to use the PoolSync® device instead of a prior configuration of a "SMART" external controller.

Enter "Advanced" menus, then proceed



<p><b>1</b> USE ARROWS TO "EXTERNAL CONTROL"</p> 	<p><b>2</b> ENTER TO SELECT</p> 	<p><b>3</b> ARROWS TO MODE</p> 
<p><b>4</b> ENTER TO EDIT</p> 	<p><b>5</b> ARROWS TO "POOLSYNC"</p> 	<p><b>6</b> ENTER TO SELECT</p> 
<p>MENU TO EXIT, PRESS &amp; HOLD TO STATUS</p> 	<p>MENU TO EXIT, PRESS &amp; HOLD TO STATUS</p> 	

**1.10.B Operating Heat Pump (With an External Controller)**

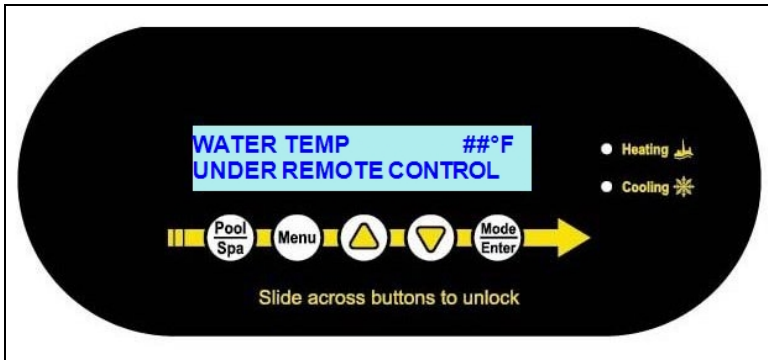


If the display indicates the unit is under remote control, an external control device has been configured to control the heat pump. See the external control device manual. Or contact installer or manufacturer of that device.

**PLEASE NOTE:**  
 When using a SMART external control device, the time-out and service modes will deactivate the Heat Pump.

### 1.10.C Operating Multiple Connected Heat Pumps

Each heat pump will indicate whether it is a primary or secondary unit on the display. Changes in mode and operation are made on the primary heat pump only.

- The primary heat pump will automatically start and stop the secondary heat pumps in a timed and controlled sequence.

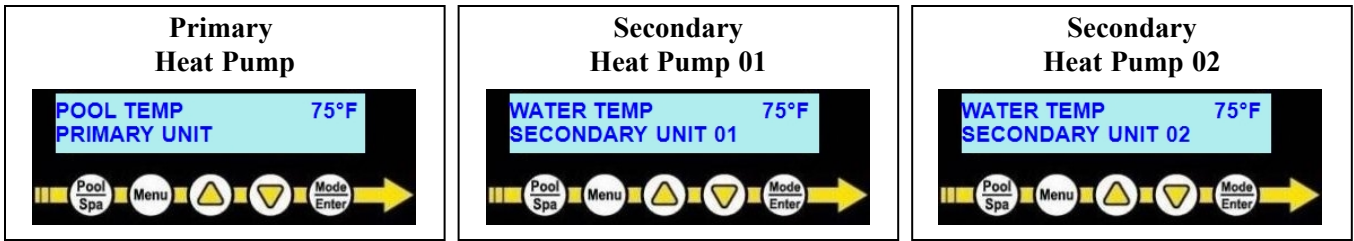

## 2 - Maintenance

### IN THIS SECTION:

2.1 Water Chemistry .....	40
2.2 Clearances .....	40
2.3 Cleaning Equipment .....	41
2.4 Irrigation and Storm Run-Off .....	42
2.5 Water Flow Rates .....	43
2.6 Freeze Protection .....	44
2.7 Winterizing .....	47

### 2.1 Water Chemistry

Check water chemistry regularly and maintain within recommended levels. Standards vary in different residential and commercial applications. Follow all local applicable codes.

#### NOTICE

Failure to heed the following may result in damage to equipment.

- Do not allow water to flow through the heat pump when refinishing or acid washing a pool. Use an installed bypass to route water away from the heat pump or deactivate the filter pump.
- To avoid damage to equipment, monitor and maintain chemistry within recommended levels.




**CHEMISTRY LEVEL CHART  
(RESIDENTIAL)**

CHEMICAL	POOLS	SPAS
<b>Chlorine</b>	1.0 – 3.0 ppm (1 – 3 mg/L)	3.0 – 5.0 ppm (3 – 5 mg/L)
<b>Bromine</b>	2.0 – 6.0 ppm (2 – 6 mg/L)	2.0 – 6.0 ppm (2 – 6 mg/L)
<b>Cyanuric Acid</b>	30 – 50 ppm (30 – 50 mg/L)	30 – 50 ppm (30 – 50 mg/L)
<b>pH</b>	7.4 – 7.6	7.4 – 7.6
<b>Total Alkalinity</b>	80 – 120 ppm (80 – 120 mg/L)	80 – 120 ppm (80 – 120 mg/L)
<b>Calcium Hardness</b>	200 – 400 ppm (200 – 400 mg/L)	150 – 250 ppm (150 – 250 mg/L)
<b>Total Dissolved Solids*</b>	0 – 1500 ppm (0 – 1.5 g/L)	1500 (1.5 g/L) ppm above start-up of total dissolved solids in spas

\* Salt from a chlorine generator is not included in Total Dissolved Solids.

### 2.2 Clearances

- Proper air circulation is required for the heat pump to operate efficiently. The following diagrams show the minimum clearances required for the proper operation of the heat pump.
- Avoid placing objects near or on top of the heat pump. This includes shrubbery and lawn furniture. These objects will reduce performance and efficiency and hinder maintenance access.

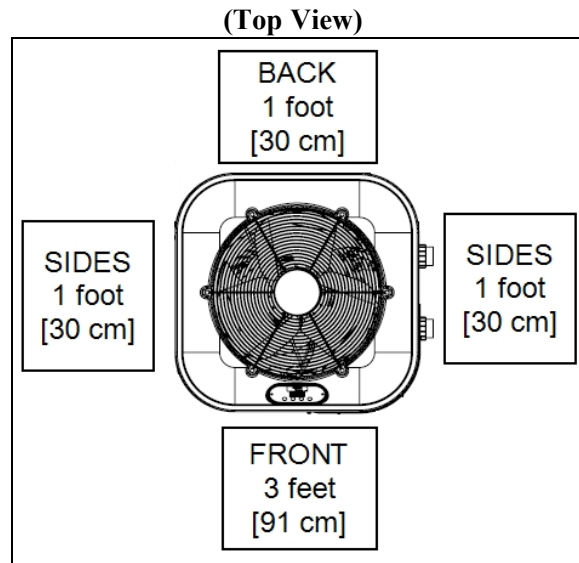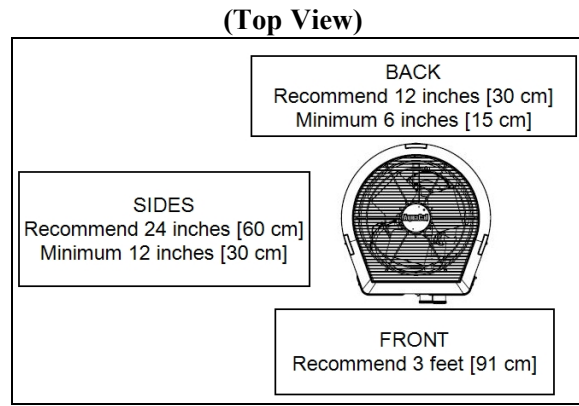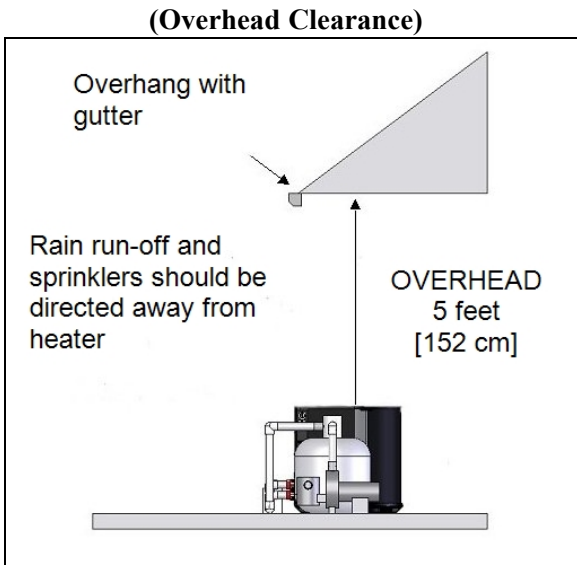

## 2.3 Cleaning Equipment

Cleaning and polishing the heat pump regularly can protect its appearance and longevity. More frequent servicing may be required for heat pumps located in sandy or coastal areas where sand and salt spray can damage equipment.

### **WARNING**

Failure to heed the following may result in injury or death.

- Possible electric shock hazard - Deactivate power to all electrical devices on the pad when washing heat pump. Do not restore electrical power until equipment is completely dry.

### **NOTICE**

Failure to heed the following may result in damage to equipment.

- Do not use a pressure cleaner to wash the heat pump. Damage to heat pump components may result. If using a hose-end spray nozzle adjust the spray pattern to low strength only.
- Do not spray water directly into the interior of the heat pump; damage to components may result.
- Do not use chemicals on the display panel.

## Cleaning

1. Wash cabinet using a low-pressure water hose. A high-pressure water stream will cause damage to the aluminum fins of the heat pump. This damage is not covered under the product warranty.
2. While the heat pump is still wet, use an approved cleaning agent to clean the exterior of the heat pump. **Do not use chemicals on the display panel.**
3. Use a detergent-dampened cloth to wipe the heat pump's exterior cabinet.
4. Flush all exterior with fresh water using a low-pressure water hose.
5. Dry the cabinet using a soft cloth being careful not to damage fins.

APPROVED CLEANING AGENTS*
Fantastic®
Formula 409®
Cascade®
All Power Plain Detergent (3% Solution)

Table 1 - Cleaning Agents

- \* The trademarks used in approved cleaning agents are the property of their owners and are not related to AquaCal®.

## Polishing

1. Polish the heat pump's cabinet panels using an approved polishing agent and following the manufacturer's instructions. **Do not use chemicals on the display panel.**
2. Rinse the heat pump panels with fresh water, wipe, and buff panels using a dry soft cloth.
3. Allow heat pump interior and surrounding equipment to "air-dry" for several hours prior to restoring electrical power.

APPROVED POLISHING AGENTS*
Simoniz® Wax
Glo-Coat®
Armor All® Protectant

Table 2 - Polishing Agents

- \* The trademarks used in approved polishing agents are the property of their owners and are not related to AquaCal®.

## 2.4 Irrigation and Storm Run-Off

- Irrigation water may damage heat pump components. Direct irrigation water away from the heat pump.
- The heat pump will withstand normal rainfall. Do not allow a roof slope to direct rainwater onto the heat pump. Have a gutter installed on the roof edge to direct this water away from the heat pump. Or install the heat pump in another location.

## 2.5 Water Flow Rates

Maintain water flow rates as indicated. Please note, these specifications relate to the heat pump only. Code-specified whole system turnover rates must be satisfied.

### NOTICE

Failure to heed the following may result in damage to equipment.

- Water flow exceeding maximum flow rates will negatively affect the total pool filtration performance and may damage the heat pump. This will not be covered under the equipment warranty.

MODEL	HEAT EXCHANGER TYPE	FLOW RATES	
		MINIMUM	MAXIMUM
SQ120R*	Titanium ThermoLink <sup>®</sup>	30 GPM (113.6 L/min)	70 GPM (265 L/min)
SQ125*	Titanium ThermoLink <sup>®</sup>	30 GPM (113.6 L/min)	70 GPM (265 L/min)
SQ145*	Titanium ThermoLink <sup>®</sup>	30 GPM (113.6 L/min)	70 GPM (265 L/min)
SQ150VS*	Titanium ThermoLink <sup>®</sup>	30 GPM (113.6 L/min)	70 GPM (265 L/min)
SQ166R*	Titanium ThermoLink <sup>®</sup>	30 GPM (113.6 L/min)	70 GPM (265 L/min)
SQ225*	Titanium ThermoLink <sup>®</sup>	30 GPM (113.6 L/min)	70 GPM (265 L/min)
T035	Titanium Tube-in-Tube	20 GPM (75.7 L/min)	45 GPM (170 L/min)
T055	Titanium Tube-in-Tube	20 GPM (75.7 L/min)	45 GPM (170 L/min)
T075	Titanium Tube-in-Tube	20 GPM (75.7 L/min)	45 GPM (170 L/min)
T090*	Titanium ThermoLink <sup>®</sup>	30 GPM (113.6 L/min)	70 GPM (265 L/min)
T091*	Titanium ThermoLink <sup>®</sup>	30 GPM (113.6 L/min)	70 GPM (265 L/min)
T115*	Titanium ThermoLink <sup>®</sup>	30 GPM (113.6 L/min)	70 GPM (265 L/min)
T116*	Titanium ThermoLink <sup>®</sup>	30 GPM (113.6 L/min)	70 GPM (265 L/min)
T135*	Titanium ThermoLink <sup>®</sup>	30 GPM (113.6 L/min)	70 GPM (265 L/min)
T135R*	Titanium ThermoLink <sup>®</sup>	30 GPM (113.6 L/min)	70 GPM (265 L/min)
T170	Titanium Tube-in-Tube	30 GPM (113.6 L/min)	70 GPM (265 L/min)
TC500	Titanium Tube-in-Tube	20 GPM (75.7 L/min)	45 GPM (170 L/min)
TC1000*	Titanium ThermoLink <sup>®</sup>	30 GPM (113.6 L/min)	70 GPM (265 L/min)
TC1500*	Titanium ThermoLink <sup>®</sup>	30 GPM (113.6 L/min)	70 GPM (265 L/min)

\* Head Loss - 30 GPM = 1.5 PSI, 70 GPM = 8.2 PSI

### PLEASE NOTE -

If minimum flow rates are not met, heat pump performance is reduced and performance will suffer. Internal safety devices may deactivate the heat pump with the following errors:

- **HIGH PRESSURE FAULT**
- **HP5 SYSTEM LOCKOUT**
- **LOW PRESSURE FAULT**
- **LP5 SYSTEM LOCKOUT**

- Operate water filtration devices per manufacturer's specifications. Dirty filters can cause a reduction of water flow to the heat pump. An increase of 7-10 psi (48 to 69 kPa) higher than the clean filter pressure typically reduces flow rates. This requires the filter to be cleaned or back-washed.
- Keep baskets free of debris. A large quantity of debris in the pump and skimmer baskets can reduce water flow.
- Check for improper valve settings. A partially closed valve after the filter, or a full-open bypass around the heat pump, will cause insufficient water flow through the heat pump.
- The maximum static pressure (or operating pressure) is 50 psi (345 kPa). These specifications relate to the heat pump only.
- Code-specified whole system turnover rates must be satisfied.

## 2.6 Freeze Protection

When freeze protection is active, water is circulated through designated group's plumbing circuits in 5 minute cycles. The water circulation lowers the chances of water freezing in those circuits.

- Freeze protection will automatically activate when the air temperature falls below 37° F (3° C).
- When the air temperature rises to 42° F (6° C), freeze protection will deactivate.
- These set temperatures and cycle times can be adjusted as needed in settings. See "*Adjusting Freeze Protection Options*" on the facing page.

### **PLEASE NOTE:**

- Freeze protection is meant to be temporary. If freezing temperatures will continue for an extended time frame, the pool equipment **must** be winterized.
- The heat pump will not attempt to heat water in freezing conditions.
- As a group cycles on and off, any devices contained within that group will also cycle on and off. If this behavior is undesirable, the device can either be removed from the group or manually deactivated.


### Requirements for Freeze Protection

- A circulation pump must exist in the group to be protected.
- Water flow must be properly directed through the group's plumbing circuit via valve actuators.
- The group's freeze protection option must be set to on.

### Adjusting Groups to Allow Freeze Protection

In the following example, a "FOUNTAIN" group is edited to enable freeze protection.

Enter "Groups" menus, then proceed

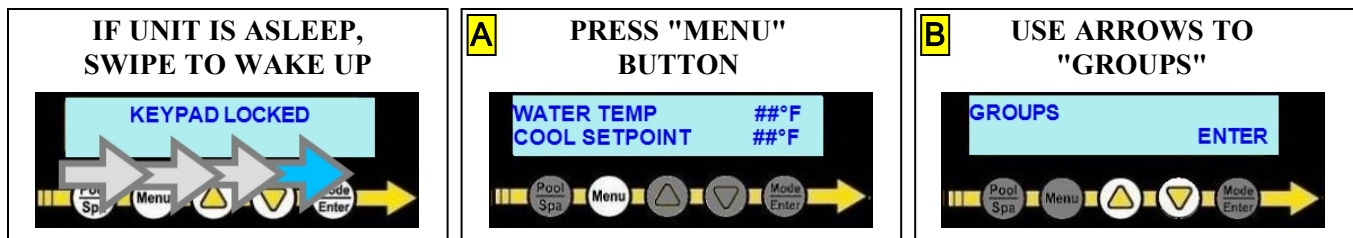

**C** PRESS "ENTER"

**1** USE ARROWS TO GROUP TO EDIT

**2** PRESS "ENTER" TO EDIT

**3** ARROWS TO "FREEZE PROTECT ENABLED"

**4** PRESS "ENTER" TO EDIT

**5** USE ARROWS TO CHANGE TO "ON"

MENU TO EXIT, PRESS & HOLD TO STATUS

MENU TO EXIT, PRESS & HOLD TO STATUS

Adjusting Freeze Protection Options

**NOTICE**

Failure to heed the following may result in damage to equipment.

- Use extreme care when setting and adjusting freeze protection options. Improper freeze protection settings can cause damage to equipment. This is not covered by heat pump warranty.

Available freeze protection options:

- "PROTECT ON SETPOINT" can be adjusted from 33° F to 39° F (.6° C to 4° C). The default is 37° F (3° C).
- "PROTECT OFF SETPOINT" can be adjusted from 40° F to 45° F (4° C to 7° C). The default is 42° F (5.5° C).
- "CYCLE TIME" can be adjusted from 5 to 20 minutes. The default is 5 minutes.
- "ACTIVE TIME" can be adjusted from 15 to 120 minutes. The default is 60 minutes.

Enter "Advanced" menus, then proceed

IF UNIT IS ASLEEP, SWIPE TO WAKE UP

**A** PRESS MENU BUTTON

**B** USE ARROWS TO "SYSTEM"

**C** PRESS "ENTER"

**D** USE ARROWS TO "ADVANCED"

**E** PRESS "ENTER"

**1** USE ARROWS TO MENU "FREEZE PROTECT"

**2** PRESS "ENTER" TO EDIT

**3** USE ENTER & ARROWS TO ADJUST "PROTECT ON SETPOINT"

**4** USE ENTER & ARROWS TO ADJUST "PROTECT OFF SETPOINT"

**5** USE ENTER & ARROWS TO ADJUST "CYCLE TIME"

**6** USE ENTER & ARROWS TO ADJUST "ACTIVE TIME"

MENU TO EXIT, PRESS & HOLD TO STATUS

MENU TO EXIT, PRESS & HOLD TO STATUS

## 2.7 Winterizing

Failure to properly winterize the heat pump as needed may result in serious equipment damage.

### **DANGER**

Failure to heed the following will result in injury or death.

- Deactivate power while routing wiring to control board.
- RISK OF ELECTRICAL SHOCK FROM ENERGY STORED IN CAPACITORS - MODELS EQUIPPED WITH VARIABLE FREQUENCY COMPRESSOR DRIVES STORE ELECTRICITY EVEN AFTER THE POWER HAS BEEN DEACTIVATED AT THE POWER BREAKER. *Wait for 2 minutes after the shut down of equipment before servicing.*
- Follow all National Electric Codes (NEC) and/or State and Local guidelines.

### **WARNING**

Failure to heed the following may result in injury or death.

- Deactivate all electrical power to heat pump before performing hard freeze procedures.

### **NOTICE**

Failure to heed the following may result in damage to equipment.

- Failure to winterize heat pump may result in serious equipment damage. Freeze damage is not covered under the heat pump warranty.
- While the plumbing connections are in the winterized condition (not fully tightened), it is imperative that water not run through the heat pump. Loss of water through loose plumbing connections may result in damage to circulation pump, pool and spa structures, and other equipment.

### Light Freeze Conditions

A light freeze is when the ambient air temperature falls below 32 degrees Fahrenheit (0° C) for less than 8 hours. Typically during light freeze conditions circulating (or moving) water will not freeze. Temporarily activate the filter pump for continuous operation during light freeze conditions. If the heat pump is directly controlling a water circulation pump, any groups marked as requiring freeze protection will automatically have water circulated to the equipment. See "*Freeze Protection*" on page 44.


### Hard Freeze Conditions

A hard freeze is when the ambient air temperature falls below 32 degrees Fahrenheit (0° C) for more than 8 hours. In areas where this condition is prevalent and sustained, the heat pump **MUST** be winterized for hard freeze conditions. Follow the correct procedure depending on the type of heat exchanger found in the heat pump.

#### Titanium ThermoLink<sup>®</sup> Exchanger (with no Drain)

1. Disconnect the plumbing to the heat pump at connection unions (removal is counter-clockwise).
2. Allow water to drain completely from the heat pump. Expect to see a lot of water drain out at first, and then a small amount to continue to drain out over a long period.
3. After heat pump has fully drained, partially reconnect plumbing connection unions.
4. Winterizing is complete.
5. When ready to use the heat pump again, hand-tighten connection unions. Reconnect electrical power, and set the operating mode on the heat pump. Activate the filter pump.


**No Drain**

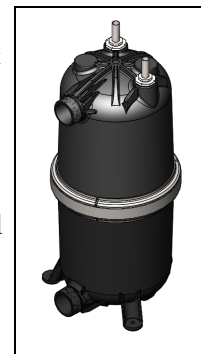


## Titanium Tube-in-Tube Exchanger

1. Disconnect the plumbing to the heat pump at connection unions (removal is counter-clockwise).
2. Allow water to drain completely from the heat pump. Expect to see a lot of water drain out at first, and then a small amount to continue to drain out over a long period.

**Titanium  
Tube-in-  
Tube**

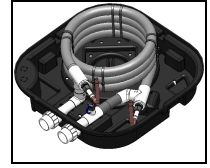

3. Place an air hose into the water inlet of the heat pump; wrap a clean rag around the hose to form a temporary seal.
4. Push all water from the water circuit using compressed air no stronger than 50 psig (446 kPa). The residual water should be forced out of the heat pump's water outlet. Allow compressed air to blow into the heat pump inlet for at least 15-20 seconds after the water stops coming out.

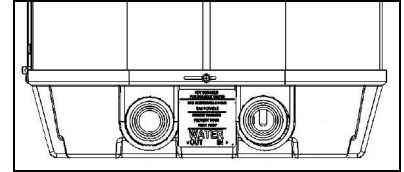

5. Repeat process on the outlet side of the heat pump.
6. Partially reconnect plumbing connection unions.
7. Winterizing is complete.
8. When ready to use the heat pump again, hand-tighten connection unions. Reconnect electrical power, and set the operating mode on the heat pump. Activate the filter pump.

### IN THIS SECTION:

3.1 Adjusting Water Flow Using $\Delta T$ (Delta-T)	49
3.2 Available Accessories	51
3.3 Configure Variable Speed Compressors (Select Units)	53
3.4 Identifying Model Specifications	55
3.5 Menu Trees	57
3.6 Initial Heating Recommendations	59
3.7 Initial Cooling Recommendations	59
3.8 Service Mode	59
3.9 Viewing System Information	60

### 3.1 Adjusting Water Flow Using $\Delta T$ (Delta-T)

The Delta-T is the temperature difference between the water temperatures entering and leaving the heat pump.

The equipment can be fine-tuned for maximum performance by balancing water flow rates to maintain an ideal  $\Delta T$ .

**The adjustment procedure must be completed with the unit in heating mode and solar system set to OFF. See "Set Solar Control to SOLAR OFF" on page 20.**

#### PLEASE NOTE -

- The installation of temperature ports is required for all commercial applications.
- The installation of temperature ports is strongly recommended for residential installations.
  - See "*Temperature Port Kit (# STK0096)*" on page 53.

1. Adjust the thermostat to its lowest setting with the unit in heating mode.
2. Deactivate the water filtration pump.
3. Confirm that the filters leading to the heat pump are clean.
4. Adjust the valves controlling water headed towards the heat pump to the half-open position.
5. Adjust the valves controlling water leading away from the heat pump to a fully open position.
6. Activate the pool water filtration pump.
7. Slowly raise the thermostat temperature until the heat pump activates.
  - After a four-minute delay, the heat pump's compressor will start.
8. With the heat pump running, confirm the filtration pump is operating properly with adequate flow and no short cycling.
9. Wait for water temperatures to stabilize (approximately 5 minutes).
10. Adjust valves in the following order using the temperature chart provided.
  - a. Adjust the valve that controls water exiting the heat pump until the correct temperature differential is achieved. Match the temperature measured with a temperature probe to the chart.
  - b. Wait for water temperatures to stabilize. Then check the temperature again. Re-adjust the valve as needed.
11. Mark valves at these positions for future reference.

**Temperature Port  
(Shown with Probe)**



HEAT EXCHANGER TYPE	MODEL	TEMPERATURE
Titanium ThermoLink®	SQ120R	3° to 7° F (1.7° C to 3.9° C)
Titanium ThermoLink®	SQ125	3° to 7° F (1.7° C to 3.9° C)
Titanium ThermoLink®	SQ145	3° to 7° F (1.7° C to 3.9° C)
Titanium ThermoLink®	SQ150VS	3° to 7° F (1.7° C to 3.9° C)
Titanium ThermoLink®	SQ166R	3° to 8° F (1.7° C to 4.4° C)
Titanium ThermoLink®	SQ225	4° to 9° F (2.2° C to 5° C)
Tube-in-Tube	T035	1° to 4° F (.5° C to 2.2° C)
Tube-in-Tube	T055	2° to 5° F (1.1° C to 2.8° C)
Tube-in-Tube	T075	3° to 7° F (1.7° C to 3.9° C)
Titanium ThermoLink®	T090	3° to 6° F (1.7° C to 3.3° C)
Titanium ThermoLink®	T115	3° to 7° F (1.7° C to 3.9° C)
Titanium ThermoLink®	T135	4° to 8° F (2.2° C to 4.4° C)
Titanium ThermoLink®	T135R	4° to 8° F (2.2° C to 4.4° C)
Titanium Tube-in-Tube	T170	3° to 7° F (1.7° C to 3.9° C)
Titanium Tube-in-Tube	TC500	2° to 5° F (1.1° C to 2.8° C)
Titanium ThermoLink®	TC1000	2° to 5° F (1.1° C to 2.8° C)
Titanium ThermoLink®	TC1500	3° to 7° F (1.7° C to 3.9° C)

Table 3 - Temperature Chart

**PLEASE NOTE -**

- Temperature differences are based on pool water temperatures of 69° to 75° F. (20.5° to 23.8° C)
- For water temperatures outside this range, contact AquaCal®. See "Contacting AquaCal AutoPilot, Inc." on page 1.

### 3.2 Available Accessories

Accessories may be purchased through an authorized dealer of AquaCal® products.

#### Bypass Valve Kit (# STK0135)

- When high flow rates are outside recommended specifications, please use this kit or an alternative bypass valve system.
- This kit can be used to control excessive water flow through the heat pump. It provides automatic flow adjustments for most applications.



#### Condensation Drain Kit (# STK0202)

- Used when condensation water flow must be directed to a specific location.



#### Expansion Board Upgrade Kit (# STK0247)

- This kit contains an upgrade board that will give the heat pump direct control of actuators, circulation pumps, and relay-controlled devices.



#### Spa Turbo Boost Flow Switch Kit (# STK0244)

- This kit is used to allow for rapid heating of a Spa when a variable speed heat pump is controlled by certain Automation Systems.

**Grid Flow Switch (# 0040S)**

- Used for automatic pool/spa thermostat switching.
- This kit is not to be used on applications exceeding 50 PSI (345 kPa).

©2013 AWC



**Liquid Blankets**

- An invisible liquid heat barrier designed to retain heat and extend the swimming season.
- AquaCal® recommends [Lo-Chlor®](#) Aqua Blanket™.



**Plumbing Unions**

- 2 Inch Unions - (# PLS2627)



**PoolSync® WI-FI Controller (ECP0343)**

- This kit will add WiFi control capabilities to the heat pump.
- Contact installing dealer to order this product.



## Temperature Port Kit (# STK0096)

- This port can be used to adjust water flow using Delta-T.
- The kit comes with port, installation components, and a temperature probe.



## 3.3 Configure Variable Speed Compressors (Select Units)

Selected heat pumps have variable speed compressors designed to more quickly and efficiently reach a temperature set point. The compressor's performance can be controlled using a turbo boost mode (in the shortcuts menus) or two different types of efficiency modes.

### Turbo Boost

Upon demand, the heat pump's compressor can be set to maximum speed to heat or cool the water quickly. This is regardless of any previously set efficiency mode settings.

- The system will heat or cool the water with the compressor speed set to maximum. This will continue until the set temperature is reached. Then the configured efficiency mode (scheduled or 24-hour) will resume.
- See "*Turbo Boost*" below.

### Efficiency Mode - 24 Hour

When using this mode, the compressor increases to a higher rate of speed until the temperature set point is reached.

- The compressor speed will then lower to maintain that temperature set point. This will continue as long as there is water flow.
- See "*Set Efficiency Mode to 24 Hour*" on the next page.




### Efficiency Mode - Filtration Schedule

When using this mode, the compressor's speed is set to heat or cool the water within 60% of the circulation pump's filtration time period. This is the highest efficiency operational mode, providing the lowest cost of operation.

- Example - If the filtration period is set from 10:00 am to 8:00 pm, the system attempts to bring the water to set point by 4:00 pm at optimal performance.
- See "*Set Efficiency Mode to Filtration Schedule*" on page 55.

### Turbo Boost

Enter "Shortcuts" menus, then proceed

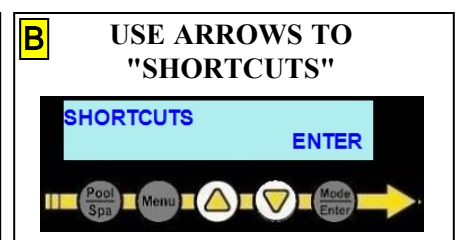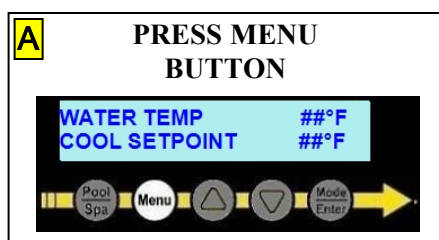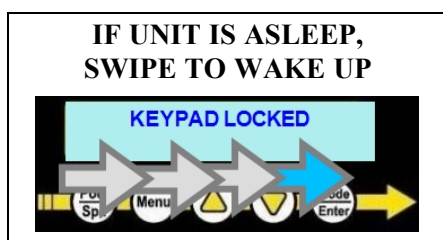

**C** PRESS "ENTER"

SHORTCUTS ENTER

**1** USE ARROWS TO MENU "TURBO BOOST"

TURBO BOOST OFF

**2** ENTER TO EDIT

TURBO BOOST OFF

**3** USE ARROWS TO CHANGE

TURBO BOOST ON

**4** ENTER TO SAVE

TURBO BOOST ON

MENU TO EXIT, PRESS & HOLD TO STATUS

WATER TEMP ##°F  
COOL SETPOINT ##°F

MENU TO EXIT, PRESS & HOLD TO STATUS

WATER TEMP ##°F  
HEAT SETPOINT ##°F

**Set Efficiency Mode to 24 Hour**

Enter "Advanced" menus, then proceed

IF UNIT IS ASLEEP, SWIPE TO WAKE UP

KEYPAD LOCKED

**A** PRESS MENU BUTTON

WATER TEMP ##°F  
COOL SETPOINT ##°F

**B** USE ARROWS TO "SYSTEM"

SYSTEM ENTER

**C** PRESS "ENTER"

SYSTEM ENTER

**D** USE ARROWS TO "ADVANCED"

ADVANCED ENTER

**E** PRESS "ENTER"

ADVANCED ENTER

**1** USE ARROWS TO MENU "EFFICIENCY MODE"

EFFICIENCY MODE FILTRATION

**2** ENTER TO EDIT

EFFICIENCY MODE FILTRATION

**3** USE ARROWS TO CHANGE TO "24HR"

EFFICIENCY MODE 24HR

**4** ENTER TO SAVE

EFFICIENCY MODE 24HR

MENU TO EXIT, PRESS & HOLD TO STATUS





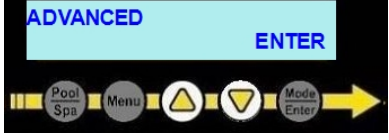





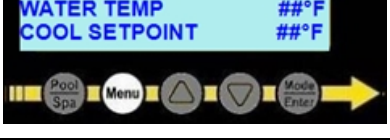
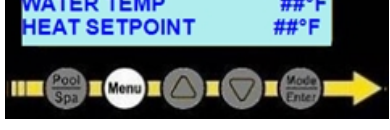
WATER TEMP ##°F  
COOL SETPOINT ##°F

MENU TO EXIT, PRESS & HOLD TO STATUS

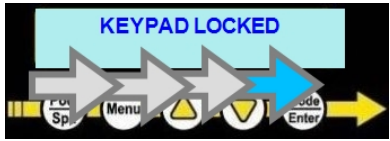WATER TEMP ##°F  
HEAT SETPOINT ##°F

## Set Efficiency Mode to Filtration Schedule

Enter "Advanced" menus, then proceed


<p><b>IF UNIT IS ASLEEP, SWIPE TO WAKE UP</b></p> 	<p><b>A PRESS MENU BUTTON</b></p> 	<p><b>B USE ARROWS TO "SYSTEM"</b></p> 
<p><b>C PRESS "ENTER"</b></p> 	<p><b>D USE ARROWS TO "ADVANCED"</b></p> 	<p><b>E PRESS "ENTER"</b></p> 
<p><b>1 USE ARROWS TO MENU "EFFICIENCY MODE"</b></p> 	<p><b>2 ENTER TO EDIT</b></p> 	<p><b>3 USE ARROWS TO CHANGE TO "FILTRATION"</b></p> 
<p><b>4 ENTER TO SAVE</b></p> 	<p><b>MENU TO EXIT, PRESS &amp; HOLD TO STATUS</b></p> 	
<p><b>MENU TO EXIT, PRESS &amp; HOLD TO STATUS</b></p> 		


### 3.4 Identifying Model Specifications

1. Find Data Plate - The data plate is usually posted on the side of the equipment or the inside of the heat pump's access plate.
2. Find the model number on the data plate. The first letters and numbers indicate the model type.
3. The complete model number identifies the equipment's specifications.



### 3.5 Menu Trees

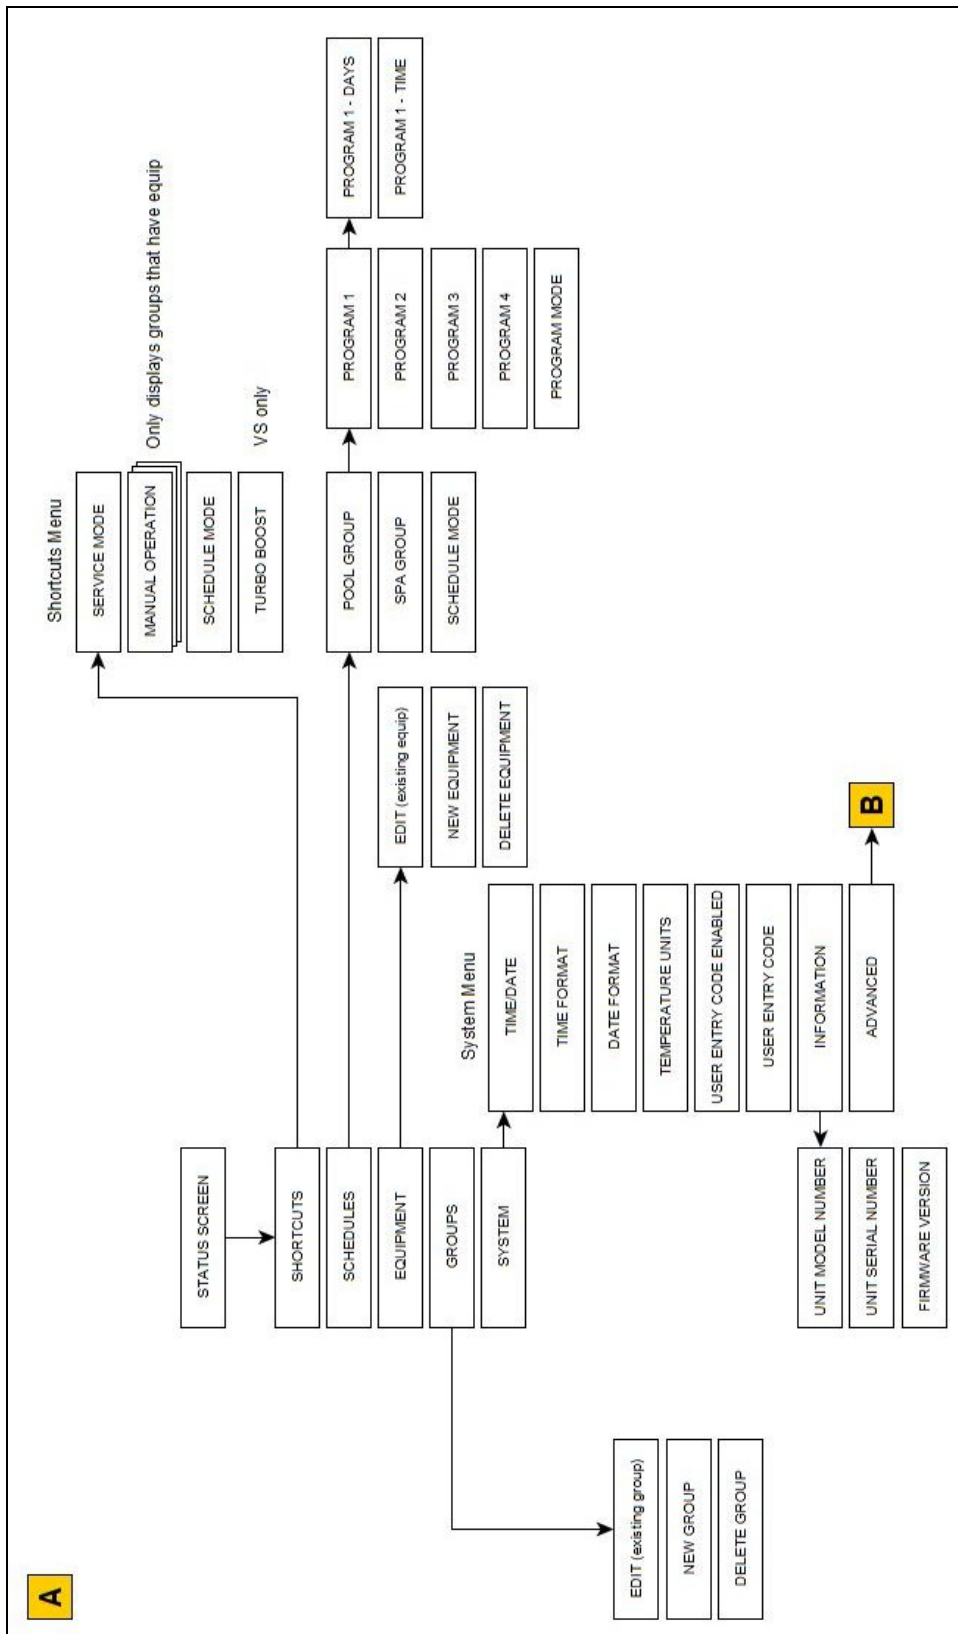

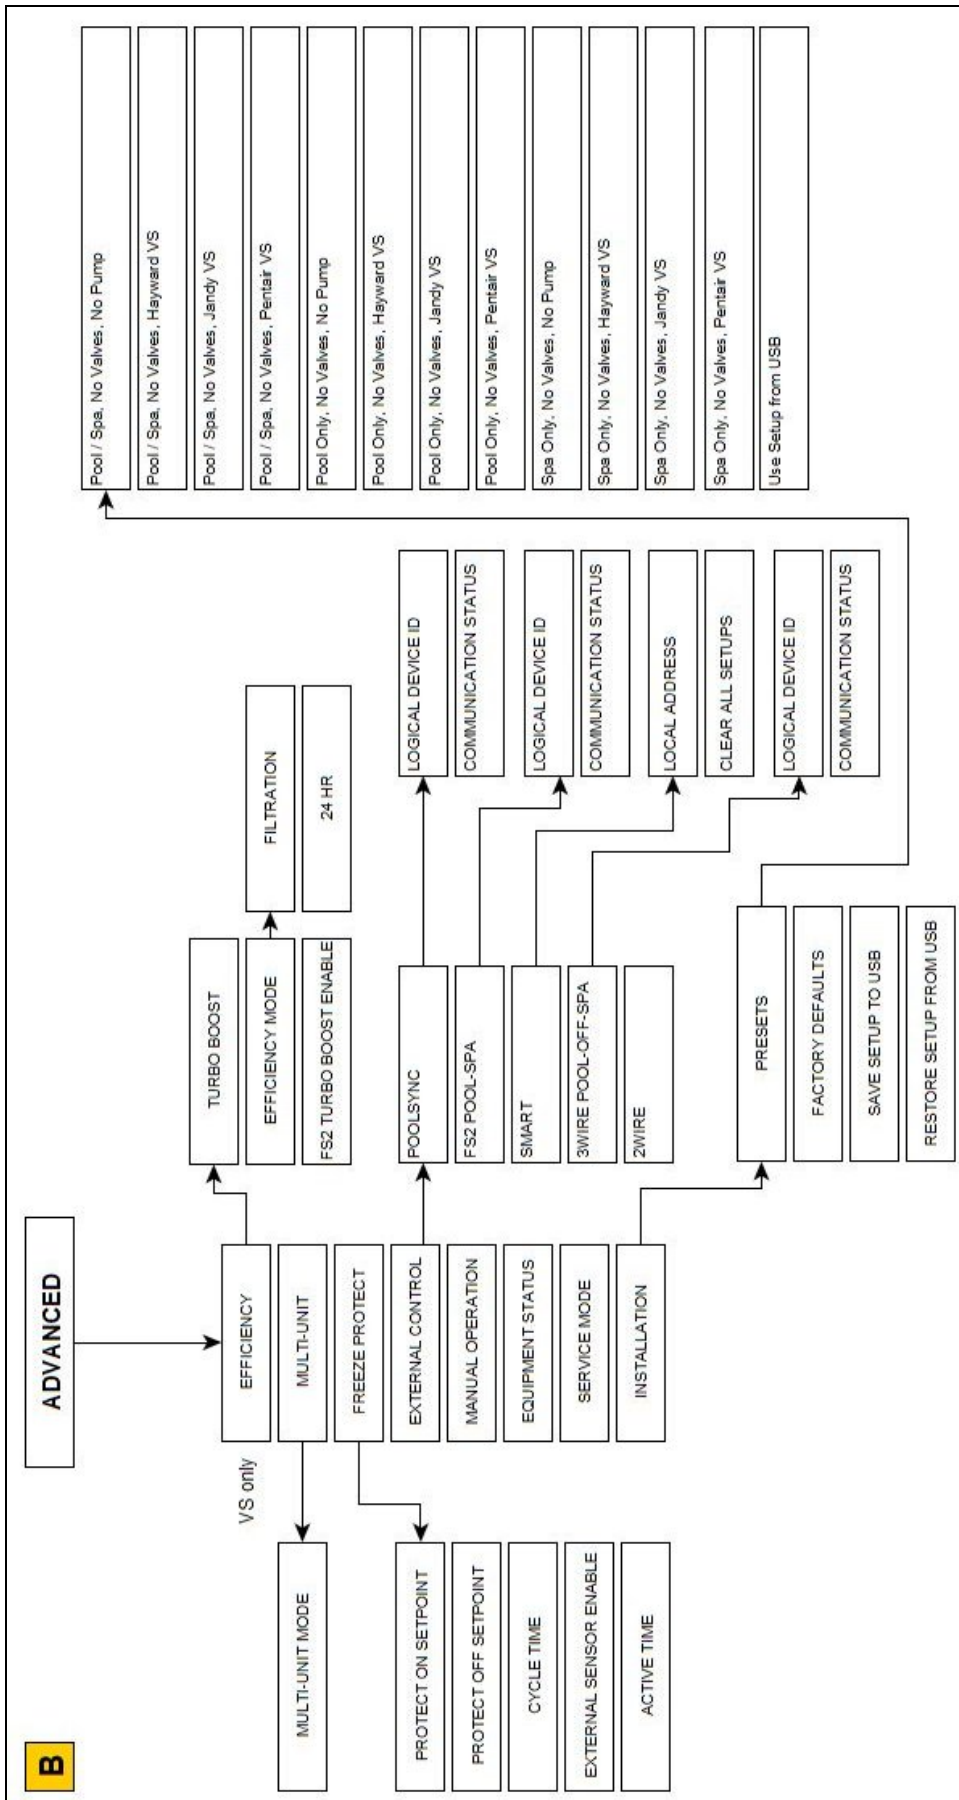

### 3.6 Initial Heating Recommendations

The following recommendations will reduce the amount of time required to heat a pool. **If unsure of equipment heating capability, review equipment data plate.** See "*Identifying Model Specifications*" on page 55.

1. Use the heat pump's "POOL/SPA" button to select the "POOL" group.
2. Select 48HR (48 hours) for the "SET TIME".
3. Confirm the mode has been set to "HEAT" mode.
4. Set the desired temperature "HEAT SETPOINT" for the water.
5. If a circulation pump has been connected to the heat pump, it will automatically activate.
6. Activate Turbo Boost Mode if equipped.
7. Use a pool cover or blanket to reduce heating time.

### 3.7 Initial Cooling Recommendations


The following recommendations will reduce the amount of time required to cool a pool or cold plunge application. **If unsure of equipment cooling capability, review equipment data plate.** See "*Identifying Model Specifications*" on page 55.

1. Use the heat pump's "POOL/SPA" button to select the "POOL" group.
2. Select 48HR (48 hours) for the "SET TIME".
3. Confirm the mode has been set to "COOL" mode.
4. Set the desired temperature "COOL SETPOINT" for the water.
5. If a circulation pump has been connected to the heat pump, it will automatically activate.
6. Activate Turbo Boost Mode if equipped.

### 3.8 Service Mode

The heat pump can be set into a service mode where all connected devices including the heat pump can be deactivated for servicing. While in service mode, connected devices / equipment can be manually activated as needed.

Enter "Shortcuts" menus, then proceed

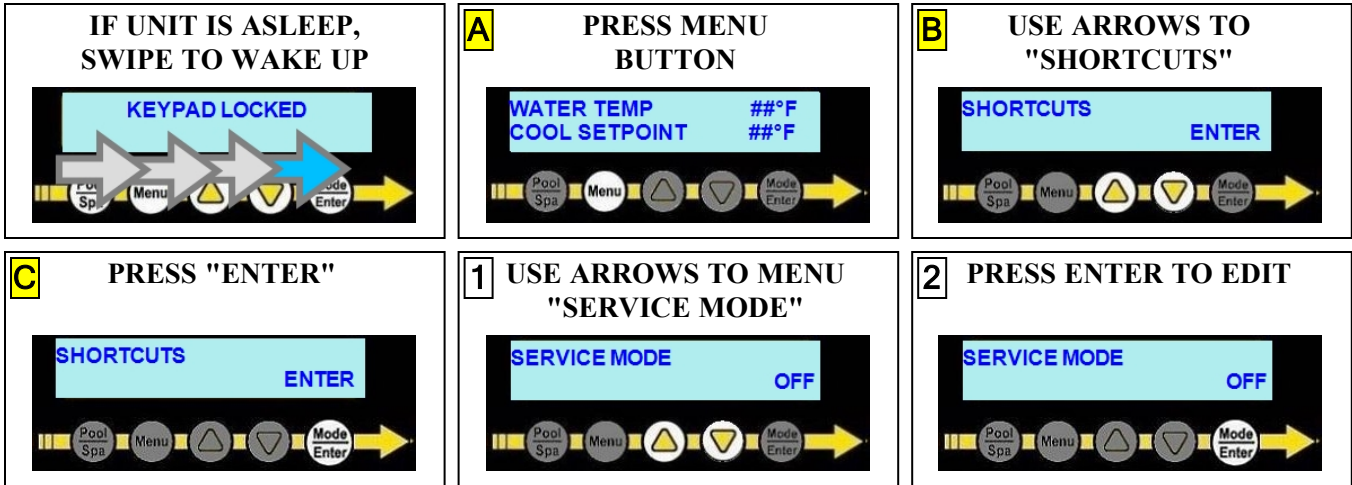

**3 USE ARROWS TO "ON"**

A screenshot of a control panel display showing "SERVICE MODE ON". Below the display are five buttons: "Pool Spa", "Menu", an up arrow, a down arrow, and "Mode Enter". A yellow arrow points to the right from the "Mode Enter" button.

**4 ENTER TO SAVE**

A screenshot of a control panel display showing "SERVICE MODE ON". The "Mode Enter" button is highlighted with a white circle. A yellow arrow points to the right from the "Mode Enter" button.

**MENU TO EXIT, PRESS & HOLD TO STATUS**

A screenshot of a control panel display showing "WATER TEMP ##°F" and "COOL SETPOINT ##°F". The "Mode Enter" button is highlighted with a white circle. A yellow arrow points to the right from the "Mode Enter" button.

**MENU TO EXIT, PRESS & HOLD TO STATUS**

A screenshot of a control panel display showing "WATER TEMP ##°F" and "HEAT SETPOINT ##°F". The "Mode Enter" button is highlighted with a white circle. A yellow arrow points to the right from the "Mode Enter" button.

When service is complete, repeat above steps setting SERVICE MODE to "OFF".

**3.9 Viewing System Information**

The heat pump model, serial number, and firmware version can be viewed in the information menus.

Enter "System" menus, then proceed

**IF UNIT IS ASLEEP, SWIPE TO WAKE UP**

A screenshot of a control panel display showing "KEYPAD LOCKED". A large grey arrow points from left to right across the screen. Below the display are five buttons: "Pool Spa", "Menu", an up arrow, a down arrow, and "Mode Enter". A yellow arrow points to the right from the "Mode Enter" button.

**A PRESS MENU BUTTON**

A screenshot of a control panel display showing "WATER TEMP ##°F" and "COOL SETPOINT ##°F". The "Menu" button is highlighted with a white circle. A yellow arrow points to the right from the "Mode Enter" button.

**B USE ARROWS TO "SYSTEM"**

A screenshot of a control panel display showing "SYSTEM ENTER". The down arrow button is highlighted with a white circle. A yellow arrow points to the right from the "Mode Enter" button.

**C PRESS "ENTER"**

A screenshot of a control panel display showing "SYSTEM ENTER". The "Mode Enter" button is highlighted with a white circle. A yellow arrow points to the right from the "Mode Enter" button.

**1 USE ARROWS TO MENU "INFORMATION"**

A screenshot of a control panel display showing "INFORMATION ENTER". The down arrow button is highlighted with a white circle. A yellow arrow points to the right from the "Mode Enter" button.

**2 PRESS ENTER TO VIEW**

A screenshot of a control panel display showing "INFORMATION ENTER". The "Mode Enter" button is highlighted with a white circle. A yellow arrow points to the right from the "Mode Enter" button.

**3 USE ARROWS TO VIEW "UNIT SERIAL NUMBER"**

A screenshot of a control panel display showing "UNIT SERIAL NUMBER" and "XXXXXXXXXX". The down arrow button is highlighted with a white circle. A yellow arrow points to the right from the "Mode Enter" button.

**4 USE ARROWS TO VIEW "UNIT MODEL NUMBER"**

A screenshot of a control panel display showing "UNIT MODEL NUMBER" and "XXXXXXXXXX". The down arrow button is highlighted with a white circle. A yellow arrow points to the right from the "Mode Enter" button.

**5 USE ARROWS TO VIEW "FIRMWARE VERSION"**

A screenshot of a control panel display showing "FIRMWARE VERSION" and "HPC XXXXX DISP XXXXX". The down arrow button is highlighted with a white circle. A yellow arrow points to the right from the "Mode Enter" button.

**MENU TO EXIT, PRESS &  
HOLD TO STATUS**



**MENU TO EXIT, PRESS  
& HOLD TO STATUS**



## 4 - Troubleshooting

### DANGER

Failure to heed the following will result in injury or death.

- Deactivate power while routing wiring to control board.
- RISK OF ELECTRICAL SHOCK FROM ENERGY STORED IN CAPACITORS - MODELS EQUIPPED WITH VARIABLE FREQUENCY COMPRESSOR DRIVES STORE ELECTRICITY EVEN AFTER THE POWER HAS BEEN DEACTIVATED AT THE POWER BREAKER. *Wait for 2 minutes after the shut down of equipment before servicing.*
- Follow all National Electric Codes (NEC) and/or State and Local guidelines.

### WARNING

Failure to heed the following may result in injury or death.

- Repairs must not be attempted by untrained or unqualified individuals.
- The heat pump contains refrigerant under high pressure. Repairs to the refrigerant circuit must not be attempted by untrained or unqualified individuals. Service must be performed only by qualified HVAC technicians. Recover refrigerant before opening the system.

### NOTICE

Failure to heed the following may result in damage to equipment.

- Service by unauthorized personnel will void the heat pump warranty.

**IN THIS SECTION:**

**Fault Codes**

CLOCK LOW BATTERY .....	64
DEFROST1 SENSOR OPEN or DEFROST2 SENSOR OPEN .....	64
DEFROST1 SENSOR SHORT or DEFROST2 SENSOR SHORT .....	64
ERROR AT PRIMARY UNIT .....	64
HAYWARD VS PUMP FAULT .....	64
JANDY VS PUMP FAULT .....	64
PENTAIR VS PUMP FAULT .....	65
HIGH PRESSURE FAULT .....	65
HIGH WATER TEMP .....	66
HP5 SYSTEM LOCKOUT .....	66
HPC TEMP SYSTEM LOCKOUT .....	66
LOW PRESSURE FAULT .....	67
LP5 SYSTEM LOCKOUT .....	67
MULTI-UNIT COMM FAULT .....	68
NO POOL/SPA GROUP EXISTS .....	68
SMART COMM FAULT .....	68
VARIABLE DRIVE FAULT .....	68
WATER TEMP1 SENSOR SHORT or WATER TEMP1 SENSOR OPEN .....	68
WATER TEMP2 SENSOR SHORT or WATER TEMP2 SENSOR OPEN .....	69

**Issues and resolutions**

Blank Display .....	69
Circulation Pump Won't Activate .....	69
Display Panel Not Responding .....	69
Displays "DEFROSTING" .....	70
Displays "FREEZE PROTECTION ACTIVE" .....	70
Displays "NO SYSTEM FIRMWARE" .....	71
Displays "NO POOL/SPA WATER FLOW" .....	71
Displays "SET TO SWITCH REMOTELY" .....	71
Displays "UNIT MODEL NUMBER" .....	71
Heat Pump Not Running .....	72
Heat Pump's Tripping Breaker .....	72
Heat Pump Won't Shut Off .....	72
Heat Pump Is Running, Not Heating .....	73
Heat Pump Is Running, Not Cooling .....	74
Ice Forming on the Heat Pump .....	75
"Pool / Spa" Button Isn't Working .....	76
Schedule Not Working .....	76
Water Coming From Heat Pump .....	76

**4.1 Fault Codes**

A fault code indicates a specific issue or condition that will require action before the equipment can resume operating.

Please perform the following troubleshooting.  
 If the issue reoccurs, please contact AquaCal. See "*Contacting AquaCal AutoPilot, Inc.*" on page 1.

**CLOCK LOW BATTERY****ISSUE**

The real-time clock controller indicates a low battery condition.

- The time will reset to factory default.

**RESOLUTION**

A qualified technician should replace the battery. The date and time will need to be reset on the heat pump after replacement.

**DEFROST1 SENSOR OPEN or DEFROST2 SENSOR OPEN****ISSUE**

Open defrost sensor.

**RESOLUTION**

A qualified technician should replace the defrost sensor.

**DEFROST1 SENSOR SHORT or DEFROST2 SENSOR SHORT****ISSUE**

Shorted defrost sensor.

**RESOLUTION**

A qualified technician should replace the defrost sensor.

**ERROR AT PRIMARY UNIT****ISSUE**

The heat pump is secondary to a primary heat pump that is displaying a fault code.

**RESOLUTION**

The error at the primary heat pump must be corrected before the secondary unit will resume operation.

**HAYWARD VS PUMP FAULT****ISSUE**

The heat pump has either lost communication with a connected Hayward circulation pump. Or the Hayward pump needs attention.

**RESOLUTION**

Check circulation pump documentation for a resolution for that product.

**JANDY VS PUMP FAULT****ISSUE**

The heat pump has either lost communication with a connected Jandy circulation pump. Or the Jandy pump needs attention.

**RESOLUTION**

Check circulation pump documentation for a resolution for that product.

## PENTAIR VS PUMP FAULT

### ISSUE

The heat pump has either lost communication with a connected Pentair water pump. Or the Pentair pump needs attention.

### RESOLUTION

Check circulation pump documentation for a resolution for that product.

## HIGH PRESSURE FAULT

### ISSUE

The refrigerant system's high-pressure switch is showing as open.

### RESOLUTION

#### Heat Only Units

Place heat pump in heating mode and perform the following troubleshooting.

Determine if an insufficient amount of water is being supplied to the equipment.

1. Confirm the filter pump is on.
2. If a multiple-speed filter pump is being used, run filter pump at a higher speed. Do not exceed the maximum flow rate for the model.
3. Confirm water is not being diverted away from the heat pump.
  - See "*Water Flow Rates*" on page 43.
  - See "*Adjusting Water Flow Using  $\Delta T$  (Delta-T)*" on page 49.

#### Cool Only Units

Determine if an insufficient amount of air is being supplied to the equipment.

1. Check for proper fan operation. If the fan is not operating, contact AquaCal® Technical Support.
2. Check for obstructed airflow around the heat pump.
  - See "Clearances"
3. Check for a dirty or blocked evaporator coil.
  - See "*Cleaning Equipment*" on page 41.

#### Heat and Cool Units (Reversing)

Place heat pump in heating mode and perform the following troubleshooting.

Determine if an insufficient amount of water is being supplied to the equipment.

1. Confirm the filter pump is on.
2. If a multiple-speed filter pump is being used, run filter pump at a higher speed. Do not exceed the maximum flow rate for the model.
3. Confirm water is not being diverted away from the heat pump.
  - See "*Water Flow Rates*" on page 43.
  - See "*Adjusting Water Flow Using  $\Delta T$  (Delta-T)*" on page 49.

## HIGH WATER TEMP

### ISSUE

Incoming water temperature has exceeded 108° F (42° C) and the unit has been deactivated. The heat pump will not operate until the incoming water temperature drops to 100° F (38° C) or lower.

### RESOLUTION

1. Determine if a gas heater is sending water directly to the heat pump. This situation would need to be corrected before continuing.
2. If the **HIGH WATER TEMP** fault continues to display, the water temperature sensor may require replacement.

## HP5 SYSTEM LOCKOUT

### ISSUE

The heat pump has locked due to five high-pressure faults during one call for heating or cooling.

### RESOLUTION

1. Deactivate then reactivate power to the heat pump to clear error.
2. Troubleshoot the high-pressure issue causing the error.
  - See "*HIGH PRESSURE FAULT*" on the previous page.

## HPC TEMP SYSTEM LOCKOUT

### ISSUE

The heat pump's controller board is overheating.

### RESOLUTION

A qualified technician should be contacted to correct the issue.

## LOW PRESSURE FAULT

### ISSUE

The refrigerant system's low-pressure switch is showing as open.

### RESOLUTION

#### Heat Only Units

Place heat pump in heating mode and perform the following troubleshooting.

1. Check for proper fan operation. If the fan is not operating, contact AquaCal® Technical Support.
2. Check for obstructed airflow around the heat pump.
  - See "Clearances"
3. Check for a dirty or blocked evaporator coil.
  - See "*Cleaning Equipment*" on page 41.
4. Check for signs of heavy ice buildup on the coil.

#### Cool Only Units

Determine if an insufficient amount of water is being supplied to the equipment.

1. Confirm the filter pump is on.
2. If a multiple-speed filter pump is being used, run filter pump at a higher speed. Do not exceed the maximum flow rate for the model.
3. Confirm water is not being diverted away from the heat pump.
  - See "*Water Flow Rates*" on page 43.
  - See "*Adjusting Water Flow Using  $\Delta T$  (Delta-T)*" on page 49.

#### Heat and Cool Units (Reversing)

Place heat pump in heating mode and perform the following troubleshooting.

1. Check for proper fan operation. If the fan is not operating, call for service.
2. Check for obstructed airflow around the heat pump.
  - See "Clearances"
3. Check for a dirty or blocked evaporator coil.
  - See "*Cleaning Equipment*" on page 41.
4. Check for signs of heavy ice buildup on the coil.

## LP5 SYSTEM LOCKOUT

### ISSUE

The heat pump has locked due to five low-pressure faults during one call for heating or cooling.

### RESOLUTION

1. Deactivate then reactivate power to the heat pump to clear error.
2. Troubleshoot the low-pressure issue causing the error.
  - See "*LOW PRESSURE FAULT*" above.

**MULTI-UNIT COMM FAULT****ISSUE**

Secondary heat pump is not receiving a signal from the primary heat pump.

**RESOLUTION**

1. Confirm the primary heat pump is operating correctly. If, for example, no power is supplied to the primary heat pump, an error will appear on the secondary heat pumps.

**NO POOL/SPA GROUP EXISTS****ISSUE**

When pushing the POOL/SPA button, the heat pump displays the message "NO POOL/SPA GROUP EXISTS".

**RESOLUTION**

- A POOL or SPA group is only created if a preset has been used. For simple systems with only one body of water, a preset is not required. See " " for more information.

**SMART COMM FAULT****ISSUE**

Heat Pump is not receiving a signal from an external controller using a smart connection point.

**RESOLUTION**

1. Confirm a smart external controller is being used.
  - If unsure, contact installer of heat pump for more information. The heat pump may need to be reconfigured to set external controller to "none".
2. If using a smart external controller, confirm the controller is correctly set to send signals to the heat pump. See manuals or guides provided with the external controller.

**VARIABLE DRIVE FAULT****ISSUE**

A problem was detected in the variable speed compressor.

**RESOLUTION**

Deactivate heat pump at power disconnect.

**Wait for two minutes for the capacitors to discharge.**

Then reactivate heat pump's power at disconnect. If error reoccurs, call for service.

**WATER TEMP1 SENSOR SHORT or WATER TEMP1 SENSOR OPEN****ISSUE**

Open or shorted water sensor.

**RESOLUTION**

A qualified technician should replace the water sensor. Until the sensor is replaced, the setpoint is limited to 96° F (35.5° C)

## WATER TEMP2 SENSOR SHORT or WATER TEMP2 SENSOR OPEN

### ISSUE

Open or shorted water sensor.

### RESOLUTION

A qualified technician should replace the water sensor. Until the sensor is replaced, the setpoint is limited to 96° F (35.5° C)

## 4.2 Issues and Resolutions

Please perform the following troubleshooting.

For further assistance, please contact AquaCal. See "*Contacting AquaCal AutoPilot, Inc.*" on page 1.

## Blank Display

### ISSUE

The Heat Pump may have an incoming power problem.

### RESOLUTION

Confirm electrical power is being supplied to the heat pump from electrical disconnect(s).

## Circulation Pump Won't Activate

### ISSUE

A circulation pump controlled by the heat pump will not activate as needed.

### RESOLUTION

1. Confirm circulation pump is included in any group that requires it. See "*Edit a Group*" on page 26.
2. Confirm the group containing the circulation pump has an appropriate schedule. See "*Edit a Schedule*" on page 29.
3. Confirm the schedule mode is set to "AUTO" and the scheduled program mode is set to "ON". See "*Schedule and Program Modes*" on page 32.

## Display Panel Not Responding

### ISSUE

The heat pump's display panel will not respond to user input.

### RESOLUTION

1. If heat pump display shows "**UNDER REMOTE CONTROL**", use the external control device to control the heat pump.
2. If needed, check with the external controller manufacturer for further assistance using that device.

**Displays "DEFROSTING"****ISSUE**

The heat pump has sensed the coil is icing up. See "*Ice Forming on the Heat Pump*" on page 75. No action is required.

**RESOLUTION****Heat Only Units - Passive Defrost**

When ice starts to form on the coil, the compressor will stop operating while the fan continues to operate.

- The coil will begin to warm to the surrounding air temperature. When the coil's temperature rises above 38° F (3.3° C), the compressor is restarted and heating resumes.
- If the coil's temperature remains below 38° F (3.3° C), the compressor will remain off.

**Cool Only Units - Passive Defrost**

When ice starts to form on the coil, the compressor will stop operating while the fan continues to operate.

- The coil will begin to warm to the surrounding air temperature. When the coil's temperature rises above 38° F (3.3° C), the compressor is restarted and cooling resumes.
- If the coil's temperature remains below 38° F (3.3° C), the compressor will remain off.

**Heat and Cool Units - Active Defrost**

Hot refrigerant gas will be sent through the coil to rapidly remove ice or frost.

During this process, the melting of the ice may appear as steam coming off the heat pump. This is normal.

**Displays "FREEZE PROTECTION ACTIVE"****ISSUE**

The heat pump has sensed the air temperature has dropped below 37° F (0° C). This is the default setpoint before the heat pump begins to circulate water to groups marked as needing freeze protection. The heat pump will not heat water in these conditions. (See "*Freeze Protection*" on page 44 for more information.)

**NOTICE**

Failure to heed the following may result in damage to equipment.

- Freeze protection is meant to be temporary. If freezing temperatures will continue for an extended time frame, the pool equipment ***must*** be winterized.

**PLEASE NOTE:**

*This protection is only available for heat pumps that directly control a circulation pump.*

**Displays "NO SYSTEM FIRMWARE"****ISSUE**

The heat pump has encountered a software error.

**RESOLUTION**

Call for service.

**Displays "NO POOL/SPA WATER FLOW"****ISSUE**

Low or no water detected. This is normal when the circulation pump is deactivated.

**RESOLUTION**

1. Confirm the filter pump is on.
2. If a multiple-speed filter pump is being used, run at a higher speed to determine if the error persists. Do not exceed the maximum flow rate for your model.
3. Confirm water is not being diverted away from the heat pump.
  - See "*Water Flow Rates*" on page 43.
  - See "*Adjusting Water Flow Using  $\Delta T$  (Delta-T)*" on page 49.

**Displays "SET TO SWITCH REMOTELY"****ISSUE**

If when pressing the "Pool / Spa" button the display flashes the message "**SET TO SWITCH REMOTELY**", the heat pump is using a remote relay switch or a 3-wire controller.

**RESOLUTION**

- The Pool and Spa thermostat automatically switch when using these modes.
- Operation manually will not be available when using these external devices. No action is required.

**Displays "UNIT MODEL NUMBER"****ISSUE**

The heat pump has encountered a software error.

**RESOLUTION**

- The model number and serial number will need to be re-entered into the system. The system will then operate as normal.
- If the issue reoccurs, please contact the distributor or installing dealer.

## Heat Pump Not Running

### ISSUE

The heat pump will not run.

### RESOLUTION

1. Confirm equipment is receiving power. Is the heat pump display illuminated?
  - If not, confirm the main breaker (located at the power supply panel) and the disconnect switch (located near the heat pump) are both turned on.
  - If the display still does not illuminate, it is recommended that the heat pump installer or electrician confirm the heat pump is receiving power.
2. Confirm correct mode is selected.
  - See "*Activate HEAT Mode, COOL Mode, AUTO Mode, or Deactivate Equipment*" on page 7.
3. Confirm thermostat is set correctly.
  - When heating the water is desired, the thermostat should be set above the current water temperature.
  - When cooling the water is desired, the thermostat should be set below the current water temperature.
  - See "*Set a desired temperature (setpoint) for the Heat Pump to activate*" on page 9.
4. If an error code is displayed, diagnose and correct the cause of the code.
  - See "*Fault Codes*" on page 63.
5. If the heat pump is using an external controller, the heat pump may not be set correctly to accept the controller's signal.
  - See "*Operating Heat Pump (With an External Controller)*" on page 38.

## Heat Pump's Tripping Breaker

### ISSUE

The heat pump breaker(s) keeps tripping.

### RESOLUTION

1. If AquaCal® heat pumps have been connected using a multiple heat pump configuration, the configuration may be incorrect. Please confirm settings or contact installer of equipment.
2. Have an electrician confirm breakers are correct type, in good condition, and properly sized for the heat pump.

## Heat Pump Won't Shut Off

### ISSUE

The heat pump will not deactivate.

### RESOLUTION

#### **PLEASE NOTE**

*When the heat pump is set to off, the display will show the current water temperature or no water flow indicator.*

1. Confirm the correct mode has been set on the heat pump.
  - See "*Activate HEAT Mode, COOL Mode, AUTO Mode, or Deactivate Equipment*" on page 7.
2. Confirm the heat pump has reached the desired temperature set on the thermostat. The heat pump will continue to run until the set temperature is reached.
  - See "*Set a desired temperature (setpoint) for the Heat Pump to activate*" on page 9.
3. If the heat pump is using an external controller, it may not be set correctly. See the external controller's manual.

### ISSUE

The heat pump is running. But the water is not heating.

### RESOLUTION

1. If the heat pump is using an external controller, confirm it is set correctly.
  - See "*Operating Heat Pump (With an External Controller)*" on page 38.
  - If the heat pump is still not running correctly with this device, contact the installer of the device or the device's manufacturer for further assistance.
2. Confirm heat pump mode is set to heat.
3. Confirm thermostat is set to the desired water temperature.
4. Confirm valves are positioned to heat the correct body of water (either the pool or the spa). If heating a spa that overflows into a pool, confirm the spa is isolated when being heated (not flowing into the pool).
5. Confirm heat pump is transferring heat into the water.
  - Measure the temperature of air discharge coming out of the heat pump fan. If discharge air is between 8° to 10° F (4.4° to 5.6° C) colder than the outside ambient air, the heat pump is moving heat into the water.
6. If an error code is displayed, diagnose and correct cause of code.
  - See "*Fault Codes*" on page 63.
7. Confirm that the filter pump has a sufficient run-time. The heat pump will not run (or heat the water) without water flow.
  - See "*Initial Heating Recommendations*" on page 59.
8. If heating a spa, deactivate air blower or venturi (if equipped) to allow for quicker heating times. For pools, deactivate water features, such as slides, waterfalls, or fountains to allow water to retain heat. Use of a liquid pool blanket product, such as an Aqua Blanket™, can also compensate for excessive heat loss.
  - See "*Liquid Blankets*" on page 52.

### ISSUE

The heat pump is running. But the water is not cooling.

### RESOLUTION

1. If the heat pump is using an external controller, confirm the heat pump is programmed properly to allow for cooling.
  - See "*Operating Heat Pump (With an External Controller)*" on page 38.
2. Confirm the heat pump mode is set to cool.
3. Confirm the thermostat is set below the current water temperature.
4. Confirm valves are positioned to cool the correct body of water (either the pool or the spa). If cooling a spa that overflows into a pool, confirm the spa is isolated when being cooled (not flowing into the pool).
5. If an error code is displayed, determine and correct the condition causing the code.
  - See "*Fault Codes*" on page 63.
6. Confirm heat pump is transferring heat out of the water.
  - Measure the temperature of air discharge coming out of the heat pump's fan. If the air is between 8° to 10° F (4.4° to 5.6° C) warmer than the outside ambient air, the heat pump is moving heat out of the water.
7. Confirm that the filter pump has a sufficient run-time. The heat pump will not run (or cool the water) without water flow.
  - See "*Initial Cooling Recommendations*" on page 59.

### ISSUE

When conditions are too cold for proper operation, the heat pump will enter a defrost mode. This prevents ice from building up on the evaporator coil.

### RESOLUTION

#### Heat Only Units:

- The heat pump may develop a fine layer of white frost on the outside coil before entering the defrost mode. This is normal.
  - See "*Displays Defrosting*" on page 70.
- If heavy ice (not frost) starts to build up, shut off the heat pump. Contact the installer or manufacturer.
- If the ambient air temperature will be falling below 32° F (0° C) for more than 8 hours, winterize equipment.
  - See "*Winterizing*" on page 47.

#### Cool Only Units

- The heat pump may enter defrost mode if the water flow rate falls below the acceptable range. See "*Water Flow Rates*" on page 43.
- If the ambient air temperature will be falling below 32° F (0° C) for more than 8 hours, winterize equipment.
  - See "*Winterizing*" on page 47.

#### Heat and Cool Units (with Active Defrost or “Icebreaker”):

- During freezing conditions, pool or spa heating will continue. Frost or ice may develop during the “countdown” to the active defrost (up to 50 minutes). This is normal. See "*Displays Defrosting*" on page 70.
- The heat pump will enter an "active defrost" stage to remove the accumulated frost and ice.
  - Be sure to observe the unit for at least 50 minutes. If it has not entered an active defrost cycle, call for service.

#### **TIP:**

*The heat pump can be manually set to defrost by temporarily switching to the cooling mode until the ice or frost melts.*

- If the ambient air temperature is (or will be) falling below 32° F (0° C) for more than 8 hours, winterize equipment.
  - See "*Winterizing*" on page 47.

## "Pool / Spa" Button Isn't Working

### ISSUE

The "Pool / Spa" button is disabled if the following devices have been configured on the heat pump. Check with installer if unsure of devices enabled on heat pump.

- A 2-wire external controller.
- A 3-wire external controller.
- A "SMART" external controller.
- An external flow switch.

### RESOLUTION

If not used to operate the heat pump, deactivate the external control device.

## Schedule Not Working

### ISSUE

A device isn't operating as scheduled.

### RESOLUTION

- Confirm the group has an appropriate schedule program. See "*Edit a Schedule*" on page 29.
- Confirm the schedule mode is set to "AUTO" and the scheduled program mode is set to "ON". See "*Schedule and Program Modes*" on page 32.
- Confirm the time is set correctly in the system. See equipment manual for information on changing date and time on heat pump.

## Water Coming From Heat Pump

### ISSUE

The water may be normal condensation produced as a by-product of the heat pump's refrigeration process.

The heat pump can produce up to 8 to 10 gallons (30 to 38 liters) of condensation per hour depending on the humidity of the ambient air. Determine if the water is condensation or a possible leak.

### RESOLUTION

1. Deactivate heat pump, leaving the filter pump on. After several hours, determine if the water is still coming from the heat pump.
2. If using chlorine or bromine as a pool/spa sanitizer, test the water around the heat pump using a test strip. If the test strip indicates that chlorine or bromine is present, a leak may exist.

#### **PLEASE NOTE -**

*If desired, a kit is available to re-direct condensation water away from the heat pump.*

- See "*Condensation Drain Kit (# STK0202)*" on page 51.

