

# IMPORTANT INSTALLATION INSTRUCTIONS

FOLLOW INSTALLATION INSTRUCTIONS VERY CAREFULLY  
OR FOUNTAIN WILL NOT FUNCTION AS SPECIFIED.


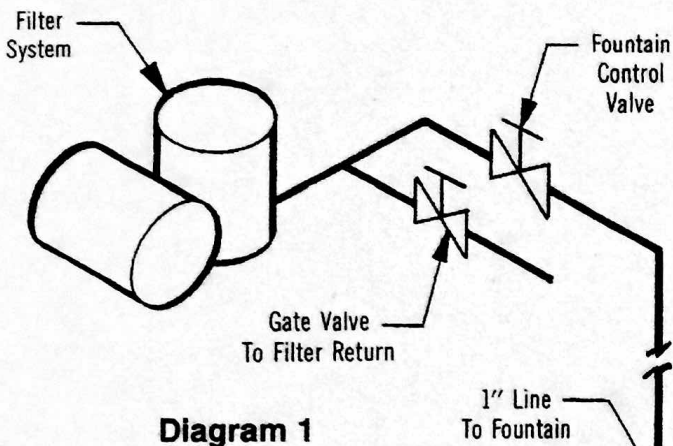


Diagram 1

- 1 Install 1" valve and 1" line to prepared hole in pool floor. Install gate valves on both fountain line and filter return line. NOTE: For fully automatic system an electric solenoid valve may be used for fountain control valve.

- 2 Stub-out fountain line at a point 6" below finished plaster level. See detailed dimension drawings on reverse side.

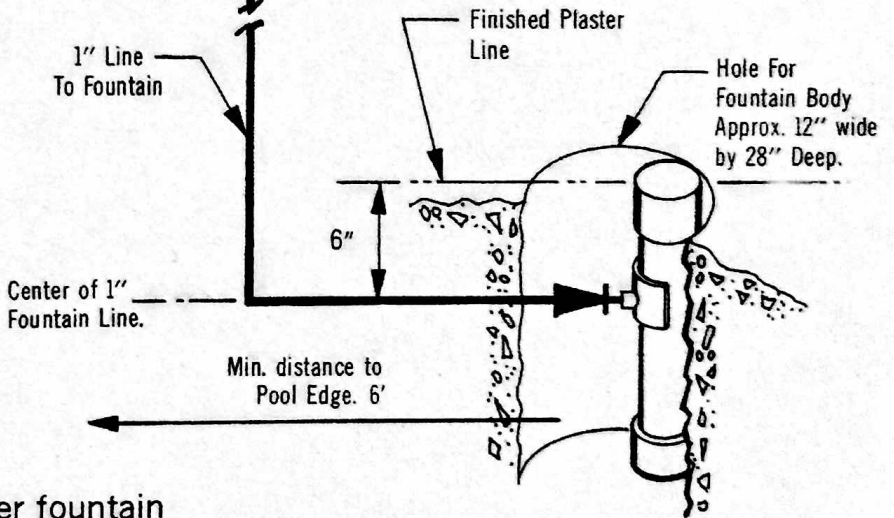

- 3 Leave protective red cover over fountain head until plastering is finished. Using a straight edge and a spirit level make sure that fountain is absolutely level. (See Diagram 2)

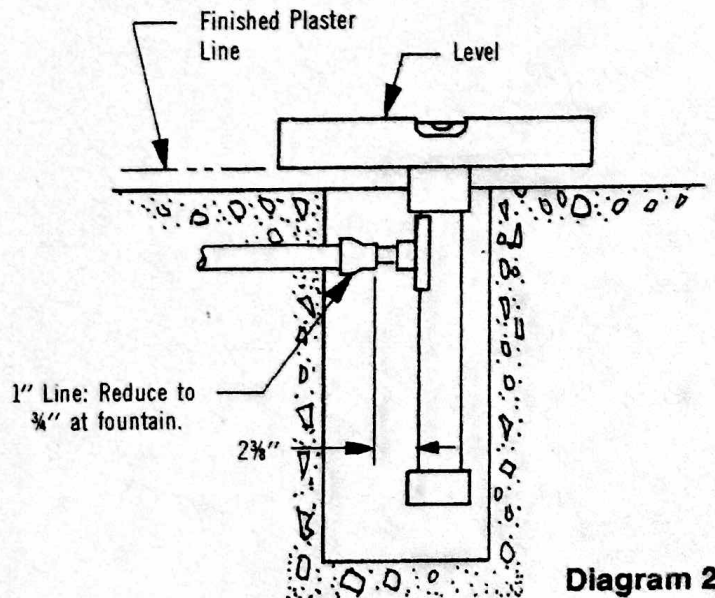


Diagram 2

HELPFUL HINT:  
Two 45 degree ells  
May Be Used For  
Universal Swivel  
During Alignment.


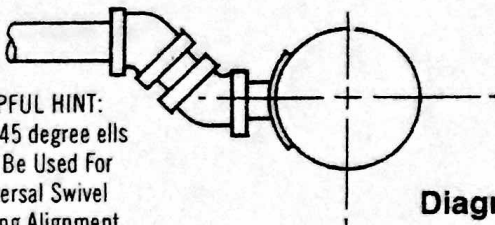


Diagram 3



**4** Taking care to keep all fountain lines free from debris and **DOUBLE CHECKING** that fountain is installed **ABSOLUTELY LEVEL**

Plaster fountain into place.  
(See Diagram 4)


1" Line to Gate Valve on Filter.

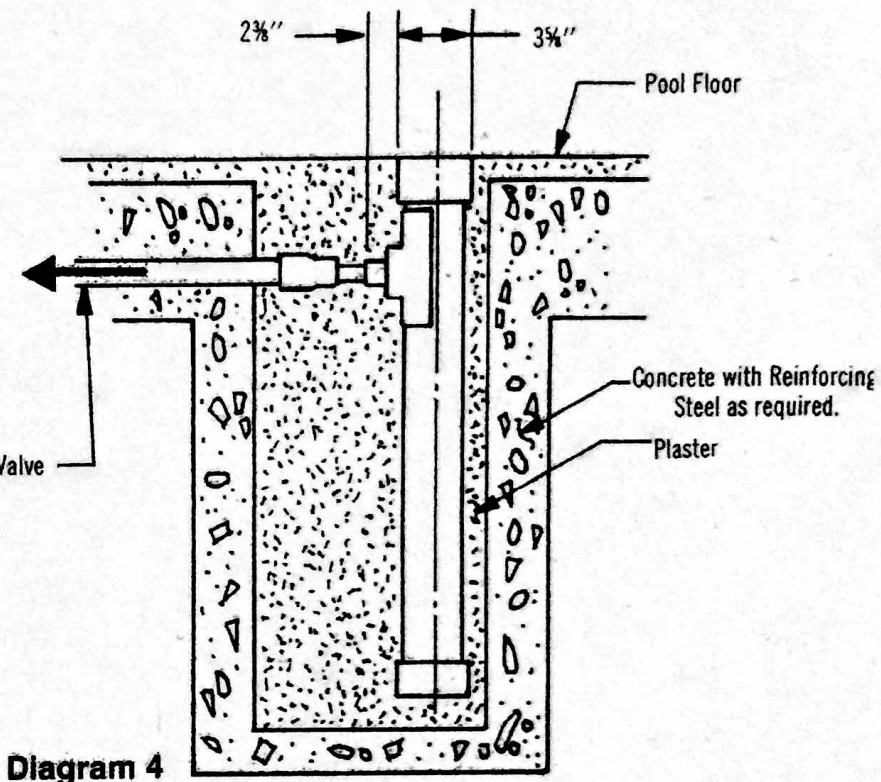

After completion of plastering remove protective label from top of fountain. Run only filtered water thru fountain.

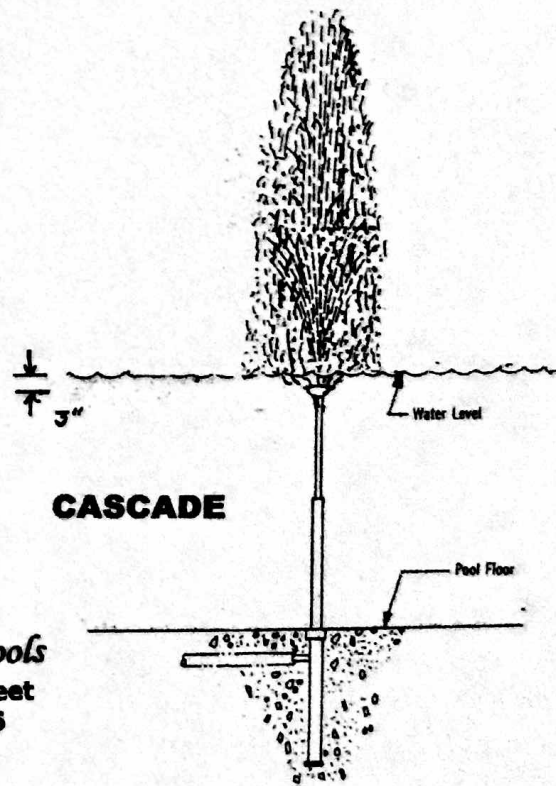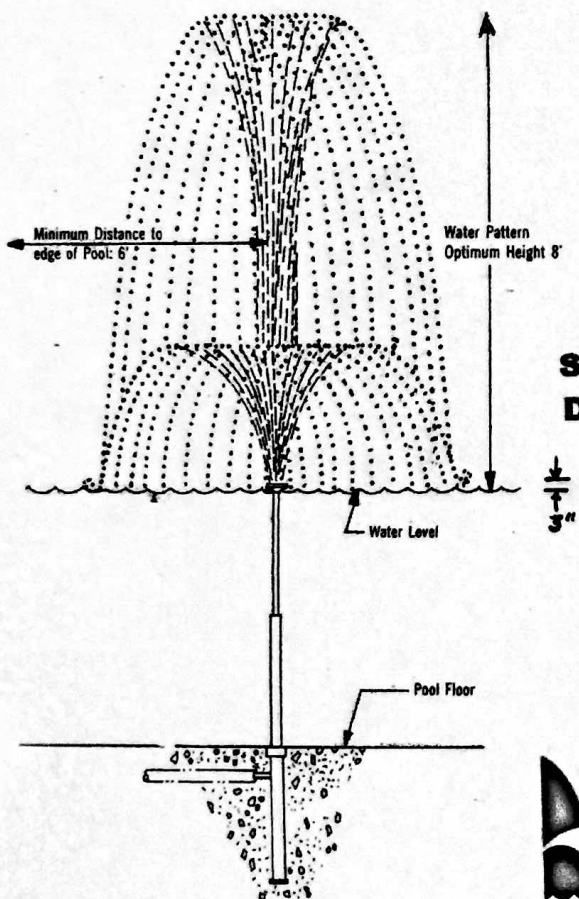

*fountains for pools*  
18300 Oxnard Street  
Tarzana, CA 91356  
(818) 345-6955  
FAX (818) 345-1507

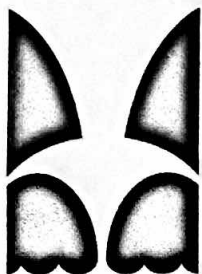

## *fountains for pools*

18300 Oxnard Street  
Tarzana, CA 91356  
(818) 345-6955  
FAX (818) 345-1507

### **INSTALLATION POINTS**

- ✓ When not is use our **AQUASCOPE POOL & SPA FOUNTAINS** retract flush with the bottom of the pool and do not interfere with automatic pool cleaning equipment.
- ✓ Our fountains are designed for use only when the pool or spa is UNOCCUPIED.
- ✓ They are typically installed with a GATE or JANDI valve inline with the fountain to control the water flow.
- ✓ **When ordering a fountain, specify as closely as possible the exact water height/level.** Fountains are manufactured in 1" increments. If you are really in doubt about the water height/level you can order the fountain about 4" taller than needed and ask for a stop ring. When your water height is established you will have to glue the stop ring at the appropriate height with PVC glue. You must take care that the ring is glued absolutely level and no beads of glue seep out the sides of the ring. If done improperly, the fountain will not stand straight or rotate properly. If you elect to glue the stop ring on, **FOUNTAINS FOR POOLS is relieved of any warranty issues should the fountain not work properly.**

#### **THE STOP RING SHOULD BE GLUED SO THE HEAD IS:**

Shower of Diamonds	3" above the water line
Cascade	3" below the water line

#### **WATER FLOW SPECIFICATIONS (aprx)**

Cascade	25-27 gpm
Shower of Diamonds	10-12 gpm
Fleur de Lis	13-15 gpm

#### **PATTERN WIDTH**

Cascade	10 to 15 inches
Shower of Diamonds	8 to 12 feet
Fleur de Lis	4 feet

*fountains for pools*

**HOLE DEPTH CHART**

<b>SHOWER OF DIAMONDS</b>	
TF 6	10"
TF 8	12"
TF 10	13"
TF 12	14"
TF 15	16"
TF 20	18"
TF 24	20"
TF 30	23"
TF 36	26"
TF 42	29"
TF 48	32"
TF 54	35"
TF 60	40"

<b>CASCADE</b>	
TFC 6	8"
TFC 8	10"
TFC 10	12"
TFC 12	13"
TFC 15	14"
TFC 20	16"
TFC 24	18"
TFC 30	21"
TFC 36	24"
TFC 42	26"
TFC 48	31"
TFC 54	33"
TFC 60	35"