

## Visual Y20-6000 re-lamp procedure Lamp removal



**Shut down power** to the illuminator before removing cover



Remove upper Phillips head screws located on the front and back of 6004 cover



Lift off the cover ...



... and set aside.  
The Y20-6000 is the indicated assembly



Locate the indicated 2-wire lamp connector plug



Separate the connector as shown



Using two fingers to support the assembly ...



... unscrew top two Phillips head screws as shown



Carefully remove the old Y20-6000 from the illuminator chassis

## Visual Y20-6000 re-lamp procedure lamp installation



**CAUTION!!**  
**DO NOT TOUCH LAMP GLASS**  
w/ fingers



Carefully place your new Y20-6000  
assembly in the illuminator chassis  
as shown



Make sure not to cross thread the  
assembly mounting screws -  
hand tighten only



Locate both ends of the  
lamp connector ...



... and connect as shown



Slide cover back on chassis and make sure that  
the bottom screw holes line up properly



Secure cover with the screws you  
first removed -  
**Re-apply power and turn unit on.**