



Installation Manual

AquaLink® RS

PDA - Pool Digital Assistant



Pool/Spa Combination Systems and
Pool Only/Spa Only Systems
(Models PS4, PS6, PS8, P4, and P8)

Firmware Revision 4.1

WARNING

FOR YOUR SAFETY - This product must be installed and serviced by a professional pool/spa service technician. The procedures in this manual must be followed exactly. Failure to follow warning notices and instructions may result in property damage, serious injury, or death. Improper installation and/or operation will void the warranty.

ATTENTION

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an electrical source on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Modifications made to this equipment, which are not authorized by the manufacturer, may void the user's authority to operate this equipment.

Table of Contents

<p>Section 1. Important Safety Instructions 4</p> <p>Section 2. System Overview 6</p> <p>2.1 Package Contents 6</p> <p>2.2 System Component Specifications and Dimensions 7</p> <p>2.3 Basic Plumbing 8</p> <p>Section 3. Installation 10</p> <p>3.1 Power Center Mounting 10</p> <p>3.2 High Voltage Wiring 10</p> <p>3.3 Low Voltage Wiring 16</p> <p>3.4 Heater Connection 19</p> <p>3.5 Temperature Sensors 21</p> <p>3.6 Jandy Valve Actuators 21</p> <p>3.7 PDA Transceiver J-box Installation 21</p> <p>Section 4. System Startup 24</p> <p>4.1 Handheld Remote Programming 24</p> <p>4.2 Restarting the System (Clear Memory) Menu .. 27</p> <p>4.3 PDA System Defaults and General Modes 28</p> <p>4.4 Variable Speed Pump Menu 29</p> <p>4.5 PDA Handheld Remote Menu Flow Chart 34</p> <p>Section 5. Troubleshooting 35</p> <p>5.1 PDA Quick Troubleshooting Guide 35</p> <p>Section 6. Power Center Wiring Diagram 37</p>	<p>Section 7. Power Center PCB DIP Switch Settings 38</p> <p>7.1 DIP Switch Functions 38</p> <p>7.2 DIP Switch Settings for Pool and Spa Combination 39</p> <p>7.3 DIP Switch Settings for Pool or Spa Only 40</p> <p>Section 8. General, Water Feature and Light Aux Labels 41</p>
---	---

EQUIPMENT INFORMATION RECORD	
DATE OF INSTALLATION _____	
INSTALLER INFORMATION _____	
INITIAL PRESSURE GAUGE READING (WITH CLEAN FILTER) _____	
PUMP MODEL _____	HORSEPOWER _____
FILTER MODEL _____	SERIAL NUMBER _____
PDA MODEL _____	SERIAL NUMBER _____
NOTES: _____	

Section 1. Important Safety Instructions

READ AND FOLLOW ALL INSTRUCTIONS

LIRE LA NOTICE TECHNIQUE.

All electrical work must be performed by a licensed electrician and conform to all national, state, and local codes. When installing and using this electrical equipment, basic safety precautions should always be followed, including the following:

DANGER

To reduce the risk of injury, do not remove the suction fittings of your spa or hot tub. Never operate a spa or hot tub if the suction fittings are broken or missing. Never replace a suction fitting with one rated less than the flow rate marked on the equipment assembly.

WARNING

Prolonged immersion in hot water may induce hyperthermia. Hyperthermia occurs when the internal temperature of the body reaches a level several degrees above the normal body temperature of 98.6°F (37°C). The symptoms of hyperthermia include dizziness, fainting, drowsiness, lethargy, and an increase in the internal temperature of the body. The effects of hyperthermia include: 1) unawareness of impending danger; 2) failure to perceive heat; 3) failure to recognize the need to exit spa; 4) physical inability to exit spa; 5) fetal damage in pregnant women; 6) unconsciousness resulting in a danger of drowning.

WARNING

To Reduce the Risk of Injury -

- a) The water in a spa should never exceed 104°F (40°C). Water temperatures between 100°F (38°C) and 104°F (40°C) are considered safe for a healthy adult. Lower water temperatures are recommended for young children and when spa use exceeds 10 minutes.
- b) Since excessive water temperatures have a high potential for causing fetal damage during the early months of pregnancy, pregnant or possibly pregnant women should limit spa water temperatures to 100°F (38°C).
- c) Before entering a spa or hot tub, the user should measure the water temperature with an accurate thermometer since the tolerance of water temperature-regulating devices varies.
- d) The use of alcohol, drugs, or medication before or during spa or hot tub use may lead to unconsciousness with the possibility of drowning.
- e) Obese persons and persons with a history of heart disease, low or high blood pressure, circulatory system problems, or diabetes should consult a physician before using a spa.
- f) Persons using medication should consult a physician before using a spa or hot tub since some medication may induce drowsiness while other medication may affect heart rate, blood pressure, and circulation.

WARNING

Risk of electric shock - Install the power center at least five (5) feet (1.52m) from the inside wall of the pool and/or hot tub using non-metallic plumbing. Canadian installations must be at least three (3) meters from the water.

Children should not use spas or hot tubs without adult supervision.

Do not use spas or hot tubs unless all suction guards are installed to prevent body and hair entrapment.

People using medications and/or having an adverse medical history should consult a physician before using a spa or hot tub.

AVERTISSEMENT

Danger d'électrocution - Les installations Canadiennes doivent se trouver à au moins trois (3) mètres de l'eau.

Ne pas laisser les enfants utiliser une cuve de relaxation sans surveillance.

Pour éviter que les cheveux ou une partie du corps puissent être aspirés, ne pas utiliser une cuve de relaxation si les grilles de prise d'aspiration ne sont pas toutes en place.

Les personnes qui prennent des médicaments ou ont des problèmes de santé devraient consulter un médecin avant d'utiliser une cuve de relaxation.

⚠ WARNING

People with infectious diseases should not use a spa or hot tub.
 To avoid injury, exercise care when entering or exiting the spa or hot tub.
 Do not use drugs or alcohol before or during the use of a spa or hot tub to avoid unconsciousness and possible drowning.
 Pregnant or possibly pregnant women should consult a physician before using a spa or hot tub.
 Water temperature in excess of 100°F (38°C) may be injurious to your health.
 Before entering a spa or hot tub measure the water temperature with an accurate thermometer.
 Do not use a spa or hot tub immediately following strenuous exercise.
 Prolonged immersion in a spa or hot tub may be injurious to your health.
 Do not permit any electric appliance (such as a light, telephone, radio, or television) within 5 feet (1.52m) of a spa or hot tub.
 The use of alcohol, drugs or medication can greatly increase the risk of fatal hyperthermia in hot tubs and spas.
 Water temperature in excess of 100°F (38°C) may be hazardous to your health.

⚠ AVERTISSEMENT

Les personnes atteintes de maladies infectieuses ne devraient pas utiliser une cuve de relaxation.
 Pour éviter des blessures, user de prudence en entrant dans une cuve de relaxation et en sortant.
 Pour éviter l'évanouissement et la noyade éventuelle, ne prendre ni drogue ni alcool avant d'utiliser une cuve de relaxation ni quand on s'y trouve.
 Les femmes enceintes, que leur grossesse soit confirmée ou non, devraient consulter un médecin avant d'utiliser une cuve de relaxation.
 Il peut être dangereux pour la santé de se plonger dans de l'eau à plus de 38°C (100°F).
 Avant d'utiliser une cuve de relaxation mesurer la température de l'eau à l'aide d'un thermomètre précis.
 Ne pas utiliser une cuve de relaxation immédiatement après un exercice fatigant.
 L'utilisation prolongée d'une cuve de relaxation peut être dangereuse pour la santé.
 Ne pas placer d'appareil électrique (luminaire, téléphone, radio, téléviseur, etc) à moins de 1.52m de cette cuve de relaxation.
 La consommation d'alcool ou de drogue augmente considérablement les risques d'hyperthermie mortelle dans une cuve de relaxation.
 Il peut être dangereux pour la santé de se plonger dans de l'eau à plus de 38°C (100°F).

⚠ WARNING

To avoid injury ensure that you use this control system to control only packaged pool/spa heaters which have built-in operating and high limit controls to limit water temperature for pool/spa applications. This device should not be relied upon as a safety limit control.

⚠ CAUTION

A terminal bar marked "GROUND" is provided within the power center. To reduce the risk of electrical shock, connect this terminal bar to the grounding terminal of your electric service or supply panel with a continuous copper conductor having green insulation and one that is equivalent in size to the circuit conductors supplying this equipment, but no smaller than no. 12 AWG (3.3mm). In addition, a second wire connector should be bonded with a no. 8 AWG (4.115mm) copper wire to any metal ladders, water pipes, or other metal within five (5) feet (1.52m) of the pool/spa.

⚠ CAUTION

A ground-fault circuit-interrupter must be provided if this device is used to control underwater lighting fixtures. The conductors on the load side of the ground-fault circuit-interrupter shall not occupy conduit, boxes, or enclosures containing other conductors unless the additional conductors are also protected by a ground-fault circuit-interrupter. Refer to local codes for complete details.



Attention installer: Install to provide drainage of compartment for electrical components.

SAVE THESE INSTRUCTIONS

Section 2. System Overview

2.1 Package Contents

All Jandy AquaLink® RS Systems come complete with the appropriate number of 3HP relays needed.

Pool Digital Assistant (PDA) System Sub-Assembly



PDA Handheld Remote



Outdoor Transceiver J-box



Power Center PCB



Two (2) Temp Sensors,
Additional Relays (Model Dependent)




Two (2) JVA's
(With Pool/Spa Combination Only)

Power Centers (Sold Separately)




Foundation and Standard Power Center
(with mounting brackets,
transformer and 4 3HP relays)

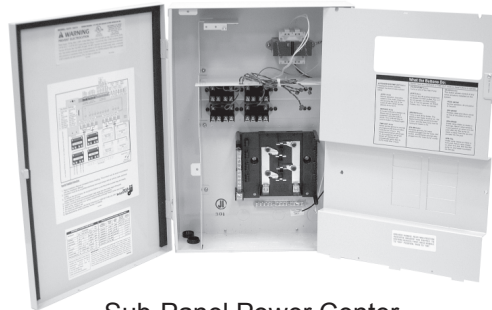

Sub-Panel Power Center
(with mounting brackets, circuit breaker mounting plate,
transformer, GFCI knockout, and 4 3HP relays)



PureLink™ standard power center
(with mounting brackets, transformer, 4 3HP relays,
AquaPure® transformer, and AquaPure® PCB's)

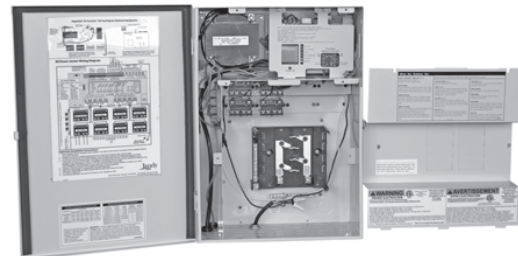

PureLink™ Sub-Panel Power Center
(with mounting brackets, circuit breaker mounting
plate, GFCI knockout, transformer, 4 3HP relays,
AquaPure® transformer, and AquaPure® PCB's)

2.2 System Component Specifications and Dimensions

Table 1

Specifications (USA and Canada)																																																							
Power Supply	120 VAC; 60 Hz; 3 A																																																						
Contact Rating (Relays)	High voltage - 25 A; 3HP @ 240 VAC 1½ HP @120 VAC 1500 Watts Incandescent																																																						
	Low Voltage - Class 2, 1 A @ 24 VAC																																																						
Service Switch	All Circuits (located at Power Center in Service Mode)																																																						
Dimensions																																																							
<table border="1"> <thead> <tr> <th colspan="7">Suitable Listed Breakers (Available Locally)</th> </tr> <tr> <th rowspan="2">Manufacturer</th> <th colspan="5">CIRCUIT BREAKER</th> <th rowspan="2">Filler Plate</th> </tr> <tr> <th>Single</th> <th>Double</th> <th>Twin</th> <th>Quad</th> <th>GFCB</th> </tr> </thead> <tbody> <tr> <td>Cutler-Hammer¹</td> <td>BR</td> <td>BR</td> <td>BR</td> <td>BQC</td> <td>GFCB</td> <td>BRFP</td> </tr> <tr> <td>Murray²</td> <td>MP-T</td> <td>MP-T</td> <td>MH-T</td> <td>MH-T</td> <td>MP-GT</td> <td>LX100FP</td> </tr> <tr> <td>Siemens³</td> <td>QP</td> <td>QP</td> <td>QT</td> <td>QT</td> <td>QPF</td> <td>QF3</td> </tr> <tr> <td>Square D⁴</td> <td>HOM</td> <td>HOM</td> <td>HOMT</td> <td>HOMT</td> <td>HOM</td> <td>HOMFP</td> </tr> <tr> <td>Thomas & Betts⁵</td> <td>TB</td> <td>TB</td> <td>TBBD</td> <td>TBBQ</td> <td>GFB</td> <td>FP-1C-TB</td> </tr> </tbody> </table>		Suitable Listed Breakers (Available Locally)							Manufacturer	CIRCUIT BREAKER					Filler Plate	Single	Double	Twin	Quad	GFCB	Cutler-Hammer ¹	BR	BR	BR	BQC	GFCB	BRFP	Murray ²	MP-T	MP-T	MH-T	MH-T	MP-GT	LX100FP	Siemens ³	QP	QP	QT	QT	QPF	QF3	Square D ⁴	HOM	HOM	HOMT	HOMT	HOM	HOMFP	Thomas & Betts ⁵	TB	TB	TBBD	TBBQ	GFB	FP-1C-TB
Suitable Listed Breakers (Available Locally)																																																							
Manufacturer	CIRCUIT BREAKER					Filler Plate																																																	
	Single	Double	Twin	Quad	GFCB																																																		
Cutler-Hammer ¹	BR	BR	BR	BQC	GFCB	BRFP																																																	
Murray ²	MP-T	MP-T	MH-T	MH-T	MP-GT	LX100FP																																																	
Siemens ³	QP	QP	QT	QT	QPF	QF3																																																	
Square D ⁴	HOM	HOM	HOMT	HOMT	HOM	HOMFP																																																	
Thomas & Betts ⁵	TB	TB	TBBD	TBBQ	GFB	FP-1C-TB																																																	
<p>¹ Cutler-Hammer is a registered trademark of Cutler-Hammer, Inc. ² Murray is a registered trademark of Briggs & Statton Corp. ³ Square D is a registered trademark of Square D Company. ⁴ Thomas & Betts is a registered trademark of Thomas & Betts Corp.</p>																																																							

2.3 Basic Plumbing


2.3.1 Plumbing for Pool and Spa Combination

The following plumbing diagrams illustrate simplified versions of standard plumbing setups for a pool and spa that share the same filter pump, filter, and heater. The intake and return Jandy valve actuators (JVAs) turn simultaneously so when the Spa mode is selected on the AquaLink® RS PDA, water circulation switches between pool and spa (consult the *Jandy Valve Actuator Installation and Operation Manual* to ensure that the JVAs are synchronized and rotate properly).


Please consult the Jandy Valve Plumbing Manual for further examples of pool/spa plumbing.

Please note that if you have a pool only or a spa only, the diagram does not apply.


NOTE When the filter system is shared (a Pool/Spa Combo), the spa water must be able to overflow into the pool.

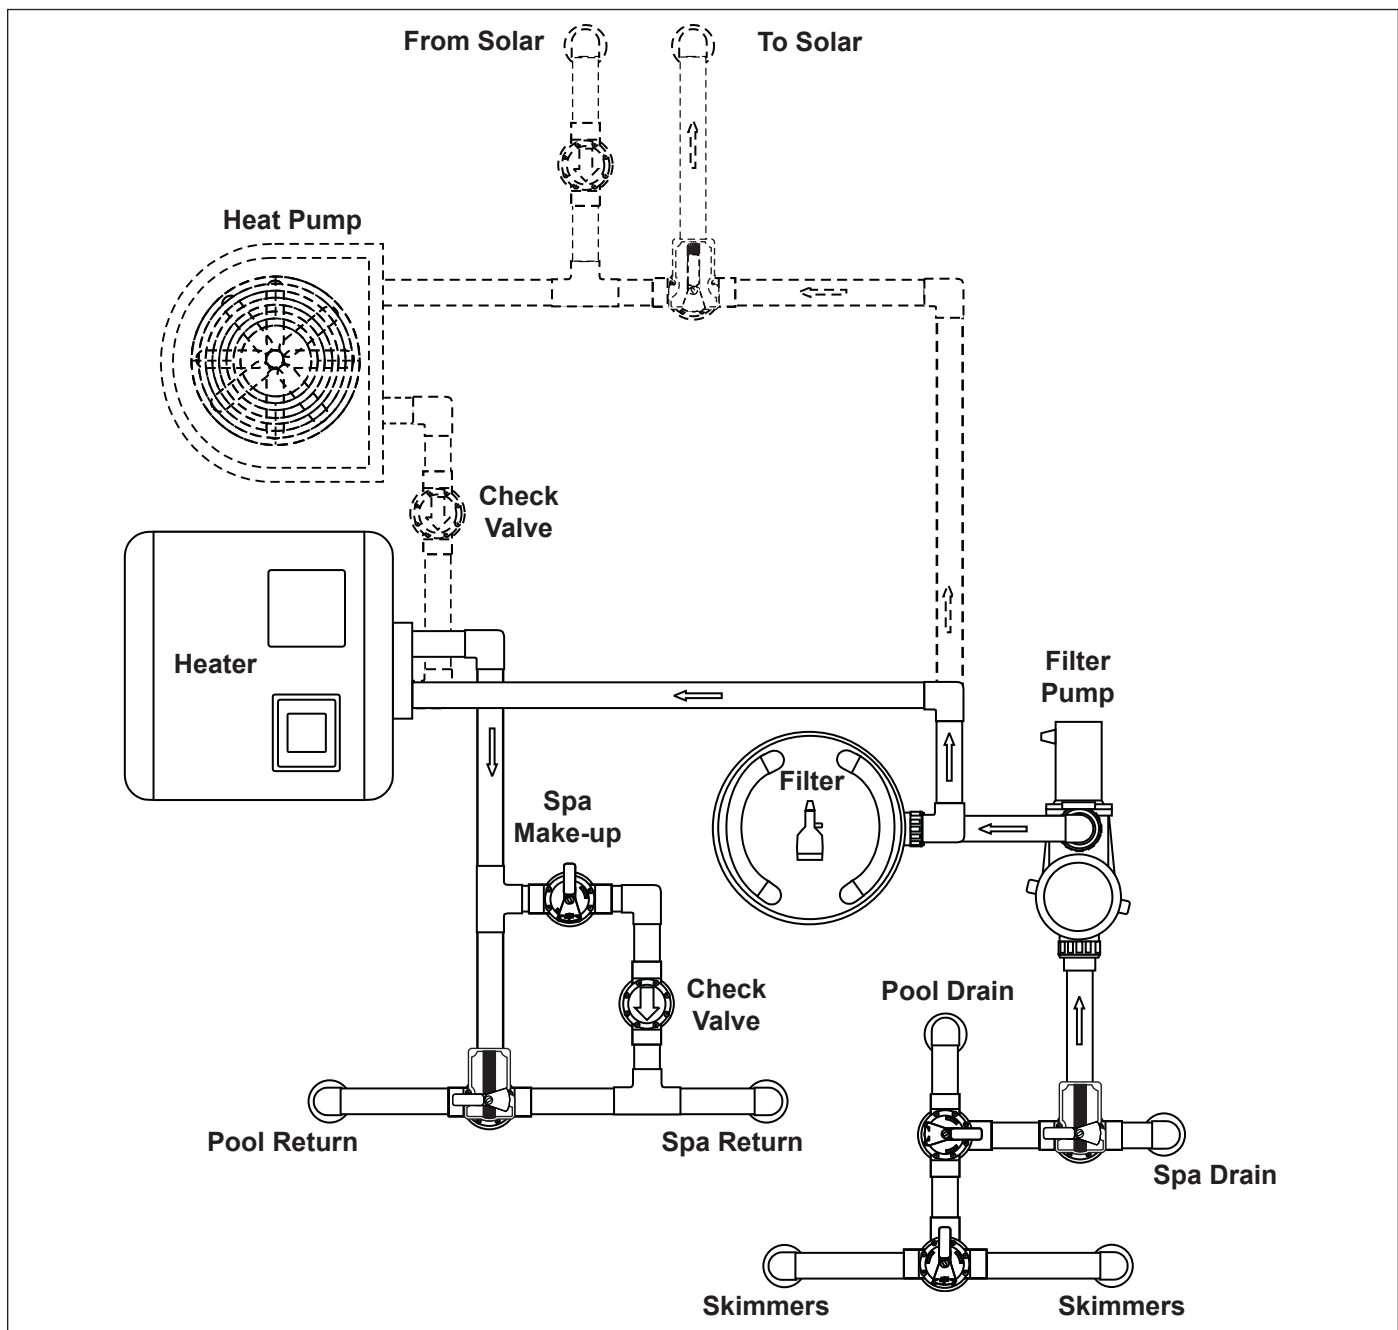

2.3.2 Booster Pump Pool Cleaner Plumbing

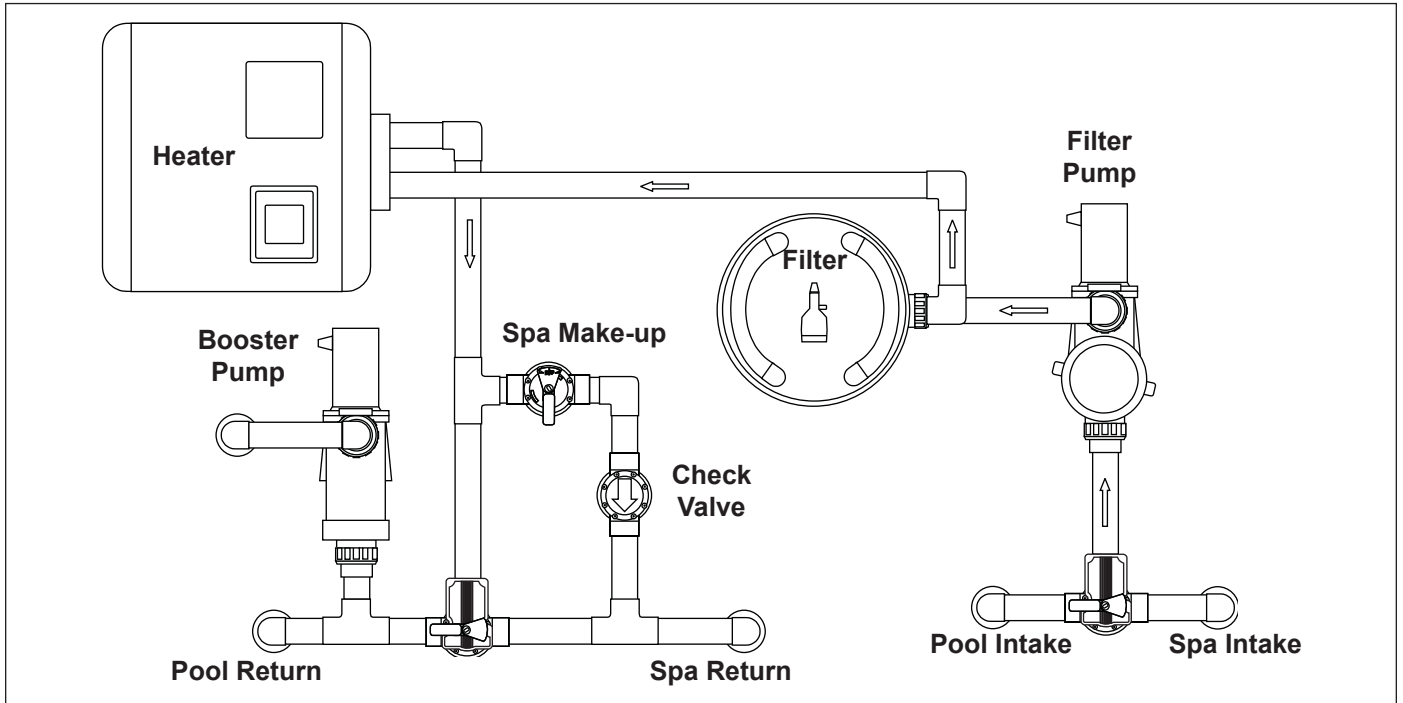

2.3.3 Non-Booster Pump Pool Cleaner Plumbing

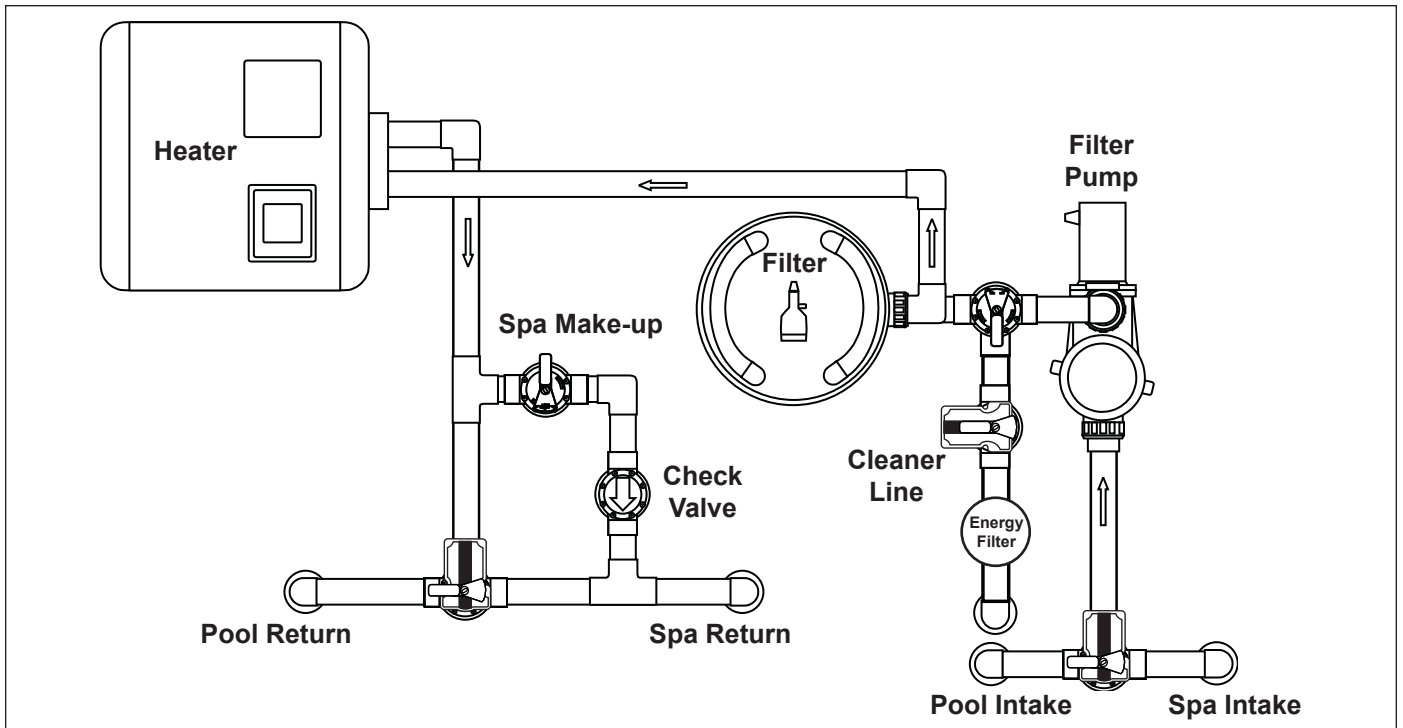

Section 3. Installation

3.1 Power Center Mounting

1. The power center should be located at or near the equipment pad. Locate the power center at least five (5) feet or more away from pool/spa and five (5) feet off the ground. All applicable national, state, and local codes must be followed.

NOTE For Canadian installations, the power center must be at least three (3) meters (9.8 feet) away from the pool/spa and 1.5 meters (5 feet) above the ground.

2. Use the mounting brackets and instructions provided with the standard power center and/or sub-panel power center.
3. Sub-panel power centers have special code requirements. Be sure to follow all applicable local and state codes to insure safe installation.

NOTE The power center is not to be considered as suitable for use as service equipment. Therefore, it is required to have the appropriate means of disconnection, circuit isolation, and/or branch circuit protection installed *upstream* of the power center.

3.2 High Voltage Wiring

3.2.1 System Power

WARNING

Potentially high voltages in the AquaLink® RS power center can create dangerous electrical hazards, possibly causing death, serious injury or property damage. Before performing any service to the system, turn off power at the main circuit feeding the AquaLink® RS power center to disconnect the power center from the system.

Depending on the amount of equipment being controlled, run ½" or larger conduit from the power supply panel to the bottom of the power center. If you are using the sub-panel power center, wire power to the appropriate breakers. Pull in appropriate wire for equipment. Each piece of equipment requires its own high voltage relay. Connect 120 volts to the power center terminals. Connect equipment ground(s). See Figures 1 and 2.

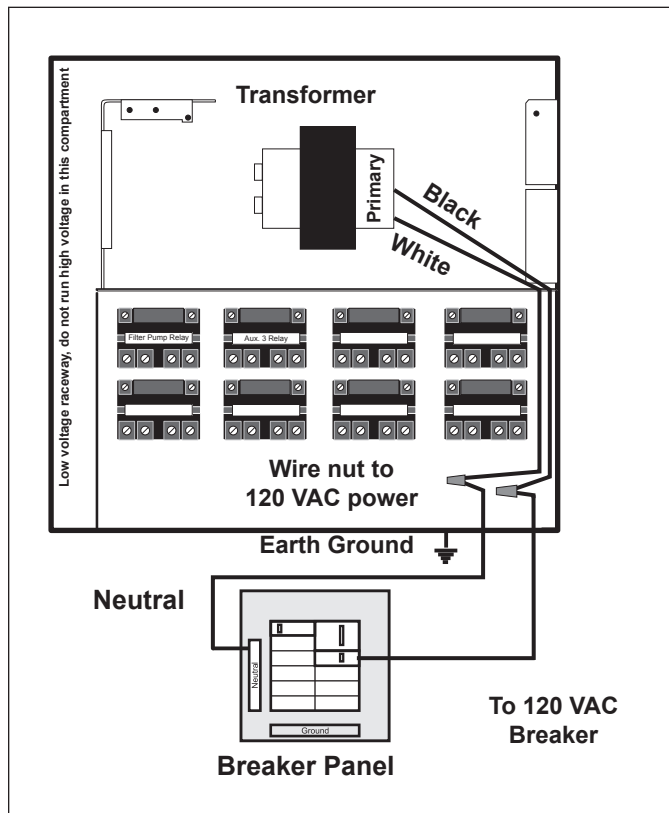


Figure 1. Standard Power Center

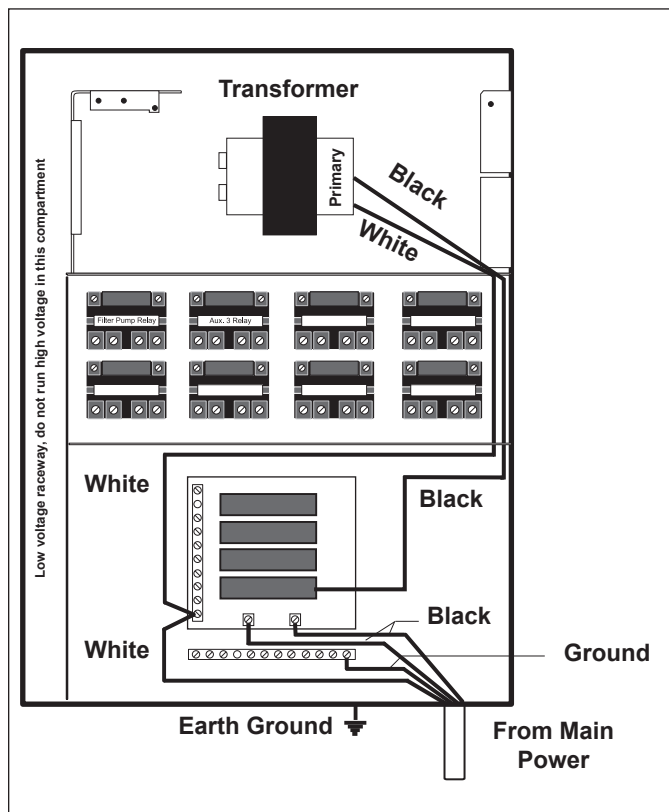


Figure 2. Sub-Panel Power Center

3.2.2 3HP (Standard) Relays

For each piece of **240 volt** equipment to be controlled, *connect line power to the two (2) line terminals and connect equipment power to the two (2) load terminals on the same relay.*

For each piece of **120 volt** equipment, *connect power to a line terminal and connect equipment to a load terminal on the same relay.*

NOTE The following are the contact ratings for 3HP (Standard) Relay. DO NOT exceed any ratings. 3 HP @ 240 VAC; 1½ HP @ 120 VAC; 25 Amps; 1500 Watts.

3.2.3 Bonding the Power Center

Install a bonding lug to the power center enclosure. Connect the bond lug, using a #8 solid copper core wire, to an approved earth ground (an approved ground stake, grid, or conducting metal water pipe buried to a sufficient depth). See Figure 3.

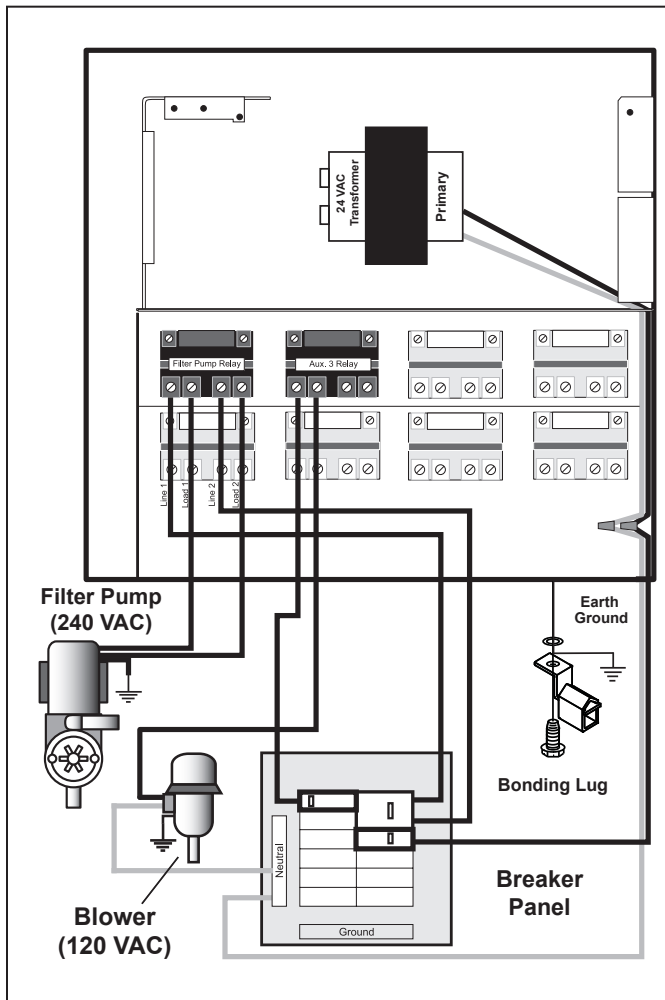


Figure 3. Standard Power Center - Bonding

3.2.4 Underwater Lighting GFCI Wiring

⚠ CAUTION

A Ground Fault Circuit Interrupter (GFCI) *must* be provided for high voltage pool/spa lights. The conductors on the load side of the GFCI device shall not occupy conduit, boxes, or enclosures containing other conductors unless the other conductors are also on the load side of a GFCI device or are reliably segregated from the GFCI protected conductors. Refer to local codes for complete details.

1. For a standard power center, install an appropriately rated GFCI receptacle next to the breaker panel. For a sub-panel power center install an appropriately rated GFCI receptacle in the power center (use the knockout provided on the right side of the sub-panel power center). See Figure 4.
2. Connect neutral and hot wire (from circuit breaker) to the LINE side of the GFCI.
3. Connect neutral (white wire) and the hot (black wire) from the light to the LOAD side of the GFCI.
4. Connect ground from the light to the grounding bar inside the power center.

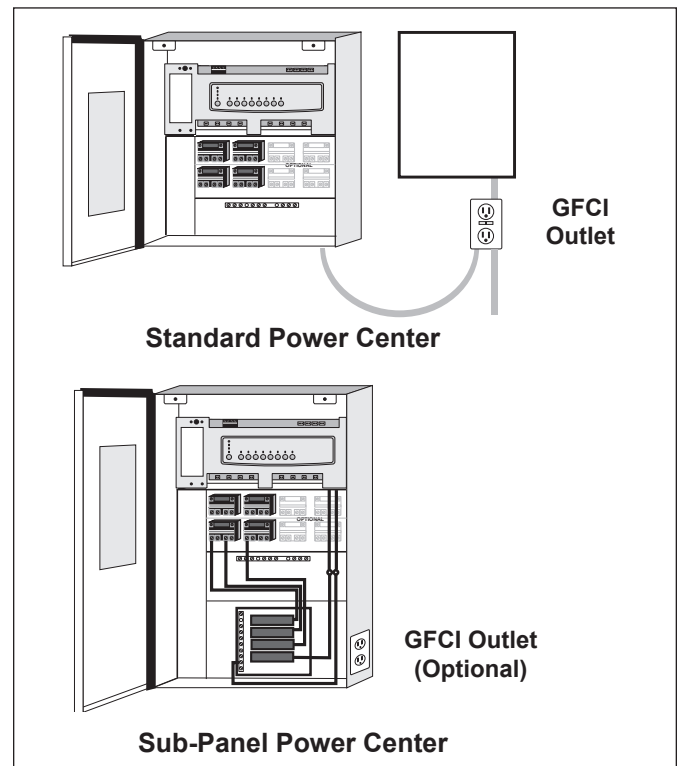


Figure 4. GFCI Installation for Underwater Lighting

3.2.5 Jandy Pool and Spa Lights Wiring

The **Jandy Pool and Spa Lights** can be wired into the Jandy AquaLink® RS control system to ensure simplified operation of the lights, as well as a means to synchronize the color change function. Connect the lights to one of the auxiliary relays in the power center.

NOTE It is recommended to connect one (1) light per relay so each light can be controlled separately. However, up to four lights can be connected on a single relay. If there are more than four (4) lights installed on one AquaLink® RS system, ensure there is more than one (1) auxiliary relay available in the Power Center.

Refer to Figures 5 and 6 to connect the Jandy Pool and Spa Lights to the power center.

NOTE The Jandy Pool and Spa Lights are available in 120-volt and 12-volt versions. If installing a 12-volt light, a 120-volt/12-volt step-down (AC) transformer, listed/certified for the application must be used. For more information about 12-volt installations, refer to the *Pool and Spa Lights Installation and Operation Manual for Jandy White Lights, Jandy Color Lights, and Jandy Watercolors LED Lights*.

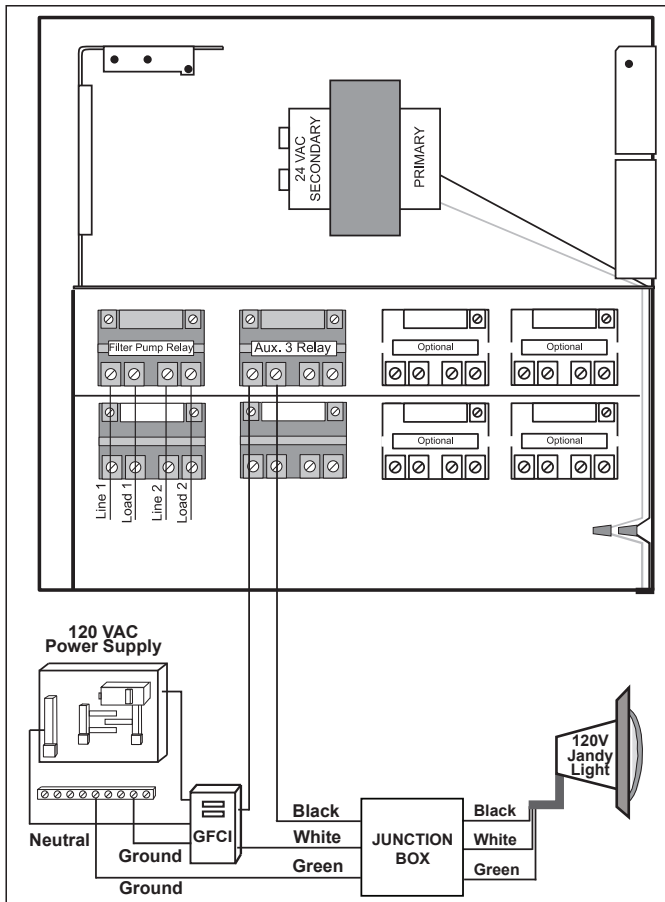


Figure 5. 120-Volt Jandy Pool and Spa Light Wiring Diagram

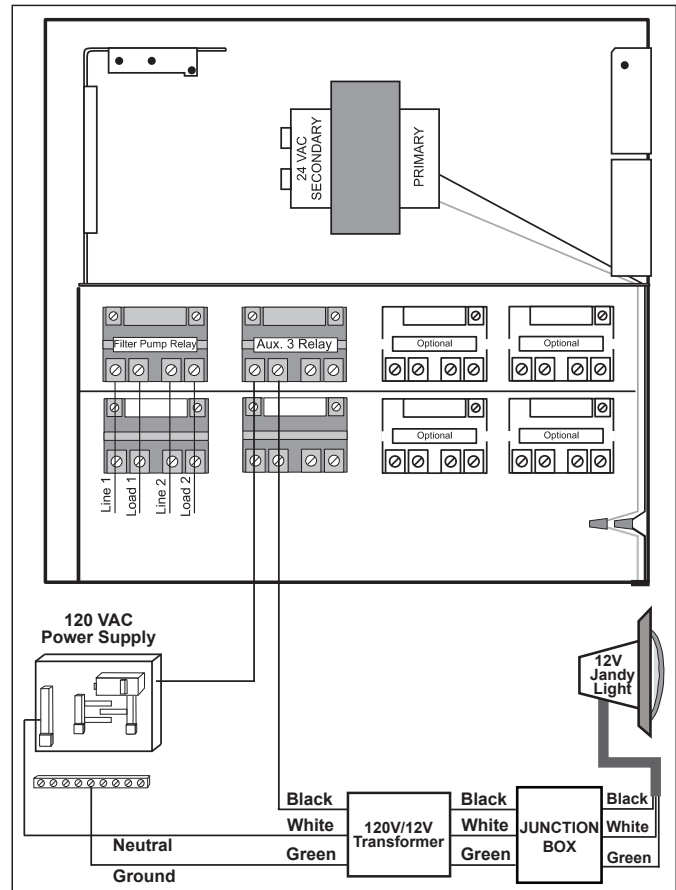


Figure 6. 12-Volt Jandy Pool and Spa Light Wiring Diagram

3.2.6 Variable Speed Pump Wiring (High Voltage)

With the PDA it is possible to control four different types of variable speed pumps. This section describes how to supply AC power to the pumps. For instructions on how to connect the low voltage communications wiring (RS485) see Section 3.3.3. It is recommended to connect any variable speed pump to a relay.

3.2.7 Pentair®¹ Variable Speed/Flow Pumps

⚠ WARNING

Potentially high voltages in the PDA power center can create dangerous electrical hazards, possibly causing death, serious injury or property damage. Turn off power at the main circuit of the PDA power center to disconnect the power center from the system. To properly and safely wire the system, be sure to carefully follow the applicable requirements of the National Electrical Code (NEC), NFPA 70 or the Canadian Electrical Code (CEC), CSA C22.1. All applicable local installation codes must also be adhered to.

To connect a Pentair variable speed/flow pump to the AC power.

1. Make sure all electrical breakers and switches are turned off before wiring the motor.
2. Make sure that the wiring voltage is 230 VAC.
3. Use #12 AWG for wire runs up to 100 feet and #10 AWG for lengths longer than 100 feet. When in doubt use a heavier gauge (larger diameter) wire. Heavier gauge will allow the motor to run cooler and more efficient.

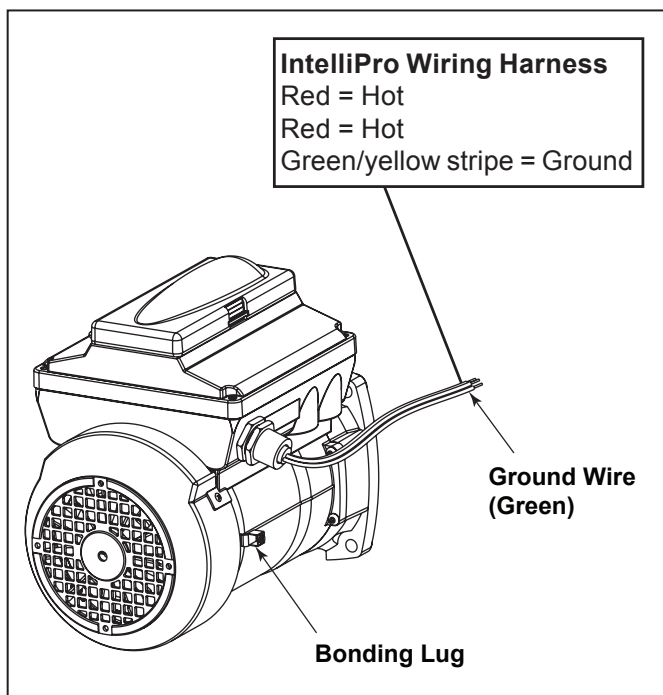


Figure 7. Pentair External Bonding

¹ Pentair is a registered trademark of Pentair, Inc.

4. Make sure all electrical connections are clean and tight.
5. Cut the wires to the appropriate length so they do not overlap or touch when connected.
6. Permanently ground the motor using the green ground wire, as shown in Figure 7. Use the correct wire size and type specified by National Electrical Code (NEC) and the Canadian Electrical Code (CEC). Make sure the ground wire is connected to an electrical service ground.
7. Bond the motor to the pool structure in accordance with the National Electrical Code (NEC) and the Canadian Electrical Code (CEC). Use a solid No. 8 AWG or larger copper conductor. Run a wire from the external bonding lug to the pool bonding structure, as shown in Figure 7.
8. Connect the two red hot wires of the pump to the two load side connections on the filter pump relay as shown in Figure 7.

3.2.8 Jandy ePump™ DC Variable Speed Pump

⚠ WARNING

Potentially high voltages in the PDA power center can create dangerous electrical hazards, possibly causing death, serious injury or property damage. Turn off power at the main circuit of the PDA power center to disconnect the power center from the system. To properly and safely wire the system, be sure to carefully follow the applicable requirements of the National Electrical Code (NEC), NFPA 70 or the Canadian Electrical Code (CEC), CSA C22.1. All applicable local installation codes must also be adhered to.

To connect a Jandy variable speed pump to the AC power.

1. Make sure all electrical breakers and switches are turned off before wiring the motor.
2. Make sure that the wiring voltage is 230 VAC.

3. Use #12 AWG for wire runs up to 100 feet and #10 AWG for lengths longer than 100 feet. When in doubt use a heavier gauge (larger diameter) wire. Heavier gauge will allow the motor to run cooler and more efficient.
4. Make sure all electrical connections are clean and tight.
5. Cut the wires to the appropriate length so they do not overlap or touch when connected.
6. Permanently ground the motor using the green ground wire, as shown in Figure 8. Use the correct wire size and type specified by National Electrical Code (NEC) and the Canadian Electrical Code (CEC). Make sure the ground wire is connected to an electrical service ground.
7. Bond the motor to the pool structure in accordance with the National Electrical Code (NEC) and the Canadian Electrical Code (CEC). Use a solid No. 8 AWG or larger copper conductor. Run a wire from the external bonding lug to the pool bonding structure, as shown in Figure 8.
8. Connect the red and black wires of the pump to the two load side connections on the filter pump relay as shown in Figure 8.

3.2.9 Jandy ePump™ AC Variable Speed Pump

⚠ WARNING

Potentially high voltages in the PDA power center can create dangerous electrical hazards, possibly causing death, serious injury or property damage. Turn off power at the main circuit of the PDA power center to disconnect the power center from the system. To properly and safely wire the system, be sure to carefully follow the applicable requirements of the National Electrical Code (NEC), NFPA 70 or the Canadian Electrical Code (CEC), CSA C22.1. All applicable local installation codes must also be adhered to.

This section describes how to connect a Jandy ePump™ AC variable speed pump to the power. As shown in Figure 9, the 230VAC single phase power is supplied to the motor drive. The motor drive supplies the motor with 230VAC three phase power. Low voltage RS485 communications cable from the PDA power center is supplied to the motor drive as well.

1. Make sure all electrical breakers and switches are turned off before wiring the motor.
2. Make sure that the wiring is 230VAC single phase.
3. Use #12 AWG for wire runs up to 100 feet and #10 AWG for lengths longer than 100 feet. When in doubt use a heavier gauge (large diameter) wire. Heavier gauge will allow the motor to run cooler and more efficient.
4. Make sure all electrical connections are clean and tight.
5. Cut the wires to the appropriate length so they do not overlap or touch when connected.
6. Permanently ground the motor using green ground wire, as shown in Figure 9. Use the correct wire size and type specified by the National Electrical Code (NEC) and the Canadian Electrical Code (CEC).

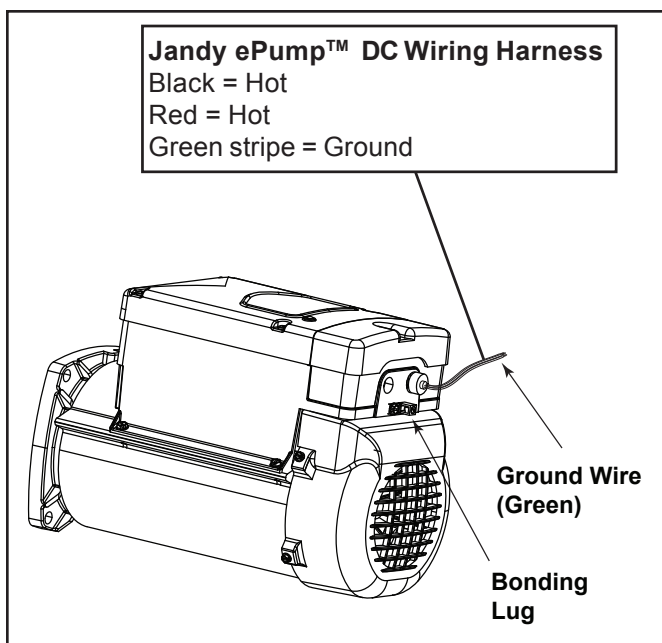


Figure 8. Jandy External Bonding

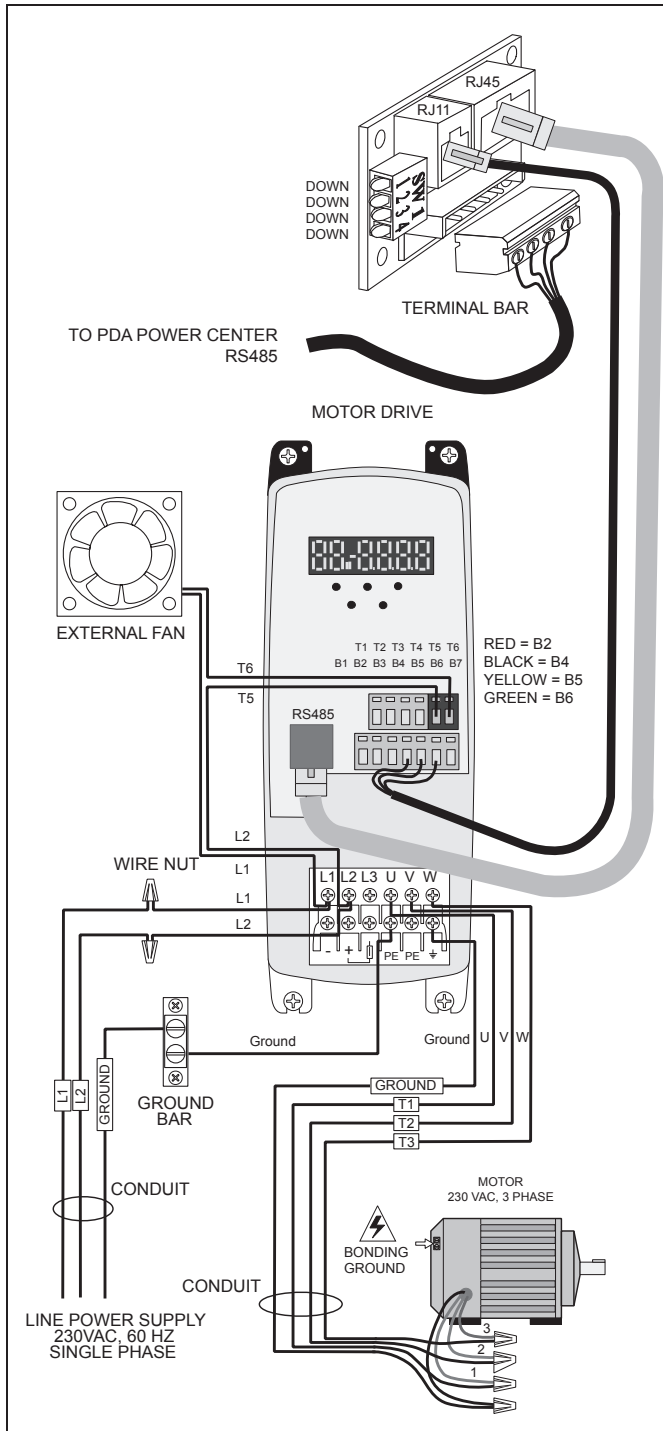


Figure 9. Wiring of the Jandy ePump™ AC Variable Speed Pump to the Motor Drive

7. Bond the motor to the pool structure in accordance with the National Electrical Code (NEC) and the Canadian Electrical Code (CEC). Use a solid No. 8 AWG or larger copper conductor. Run a wire from the external bonding lug to the pool bonding structure, as shown in Figure 9.
8. Connect the red and black wires (L1 and L2) of the motor drive to the two load side connections on the filter pump relay as shown in Figure 10. If the pump is not to be used for filtration then you would connect the red and black wires to the load side connections of an AUX relay.
9. Connect the black (U), red (V), blue (w), and green wires from the motor drive to the pump motor.

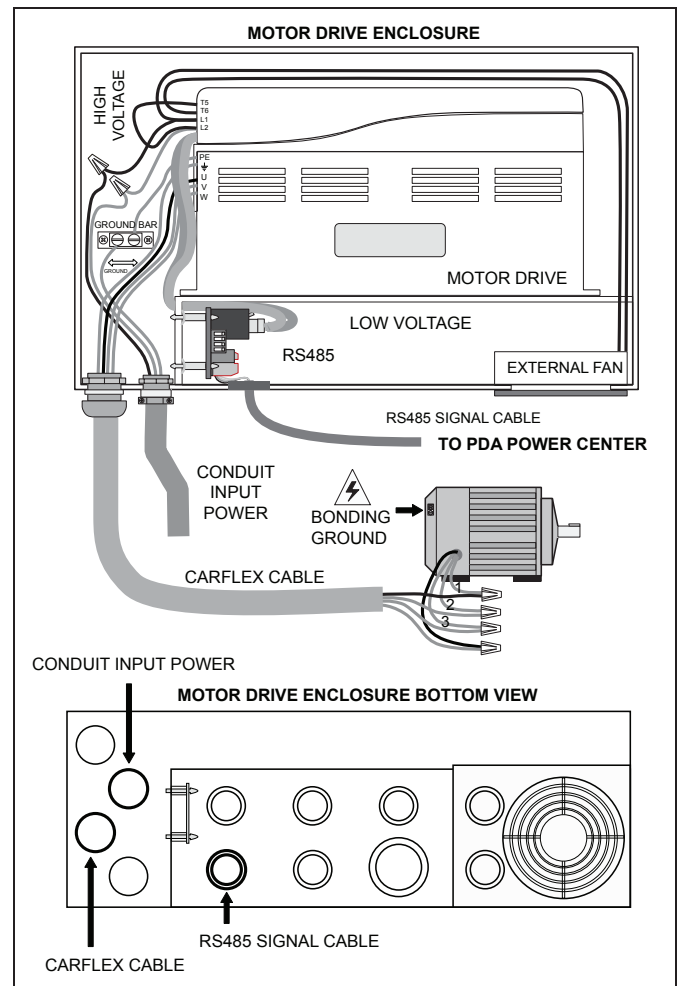


Figure 10. Wiring of the Jandy ePump™ AC Variable Speed Pump to the Power Center

3.3 Low Voltage Wiring

3.3.1 Bezel Connection

Plug the 24 VAC power plug from the transformer into its 3-pin terminal on the back of the power center PCB (see Figure 11). Mount the Bezel to the power center using the screws provided. Ensure that battery wires are kept from being pinched or damaged.

3.3.2 PDA J-Box Cable Connection to Power Center PCB

Make provision for the cable to be run between the PDA J-box and the power center. *Never run high voltage and low voltage in the same conduit.* Pull cable through the knockout with the Heyco[®] ¹ fitting and into the low voltage compartment.

Strip back jacket 6". Strip each wire a 1/4" and connect to the red, 4-pin connector on the power center PCB. A multiplex kit may be required if there are more than two cables running to a red, 4-pin connector (see Figure 12).

NOTE For detailed transceiver installation, see Section 3.7.1.

CAUTION

DO NOT INSTALL BATTERY until ready to power up system.

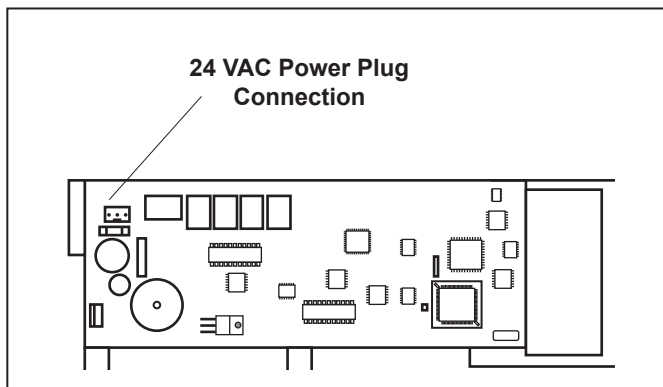


Figure 11. Power Center PCB (back view)

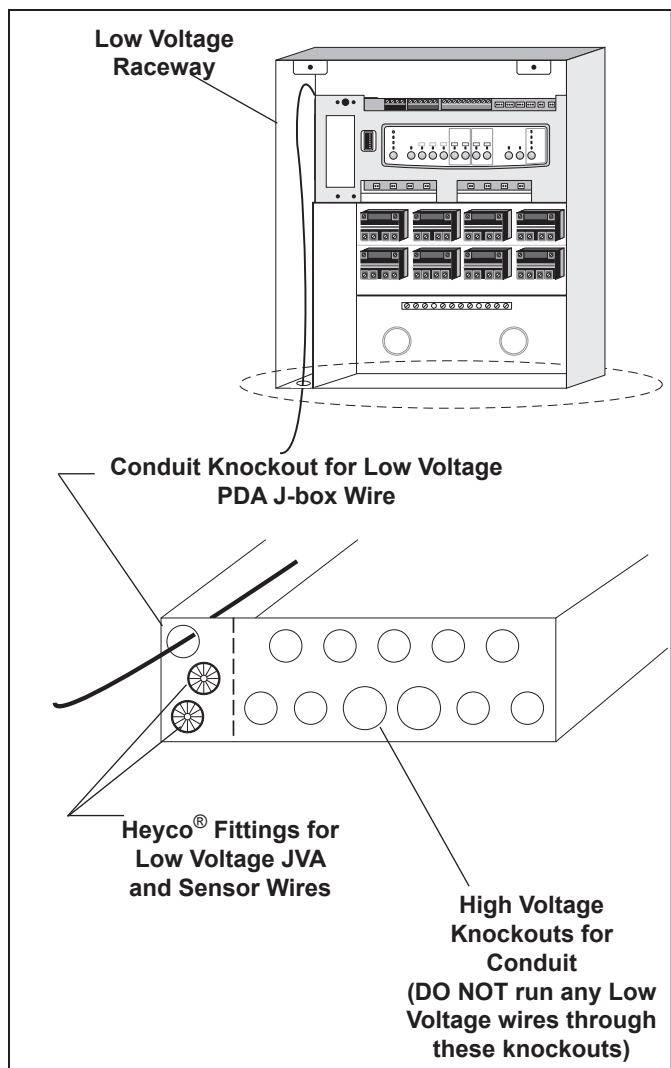


Figure 12. PDA J-Box Cable Connection to Power Center PCB

¹ Heyco is a registered trademark of Heyco, Inc.

3.3.3 Variable Speed Pump to Power Center PCB Cable

The low voltage wiring for the variable speed pumps consists of the RS485 communications cable. Make provision for the cable to be run between the pump and the power center. **Never run high voltage and low voltage in the same conduit.** Pull cable through the knockout with the Heyco® fitting and into the low voltage compartment. Strip back jacket 6". Strip each wire a ¼" and connect to the red, 4-pin connector on the power center PCB. A multiplex kit may be required if there are more than two cables running to each of the red, 4-pin connectors on the power center PCB. See Figure 13.

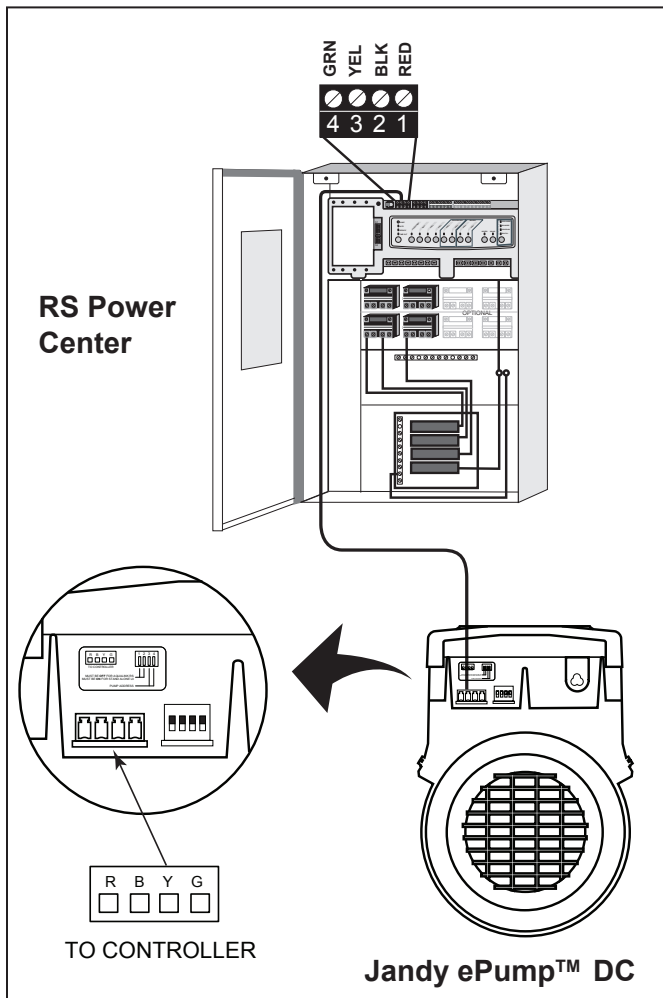


Figure 13. Low Voltage Wiring for Jandy ePump™ DC

3.3.4 Wiring the Pentair® Pump

The Pentair IntelliFloVF®¹ LCD control panel is disabled when communicating with the AquaLink® RS system and "DISPLAY NOT ACTIVE" will be displayed. Note that PDA will not start communicating with the Pentair IntelliFloVF® until it has been configured accordingly. See the AquaLink® RS Owner's Manual (P/N 6593L) for more information.

Connection from the PDA power center PCB to the Pentair variable speed/flow pumps is via the two-wire cable (Pentair P/N 350122). The cable pin out is shown in Figure 14.

Jandy RS485 (RED) Connector	Pentair® RS485 Cable Assembly
Pin 1 (no connection)	
Pin 2	Yellow Wire
Pin 3	Green Wire
Pin 4 (no connection)	

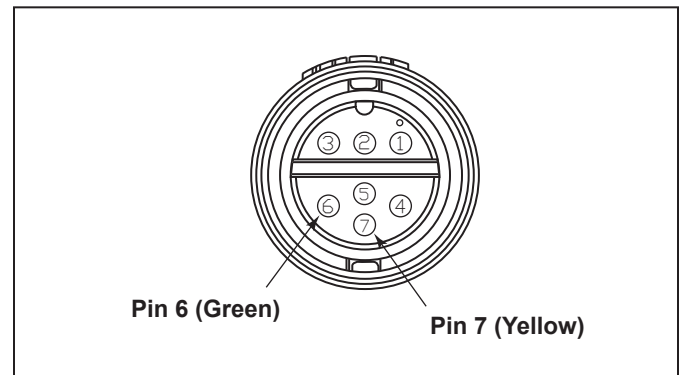


Figure 14. Cable Connector at the Pump Side

3.3.5 Wiring the Jandy ePump™ DC

Connection from the PDA power center PCB to the Jandy ePump™ is via the RS485 cable. The cable pin out is shown below.

RS485 Wire Connections for Jandy ePump DC	
This side connects to J1 or J4 of power center PCB or to the multiplexer PCB.	This side of the cable connects to the Jandy ePump™.
Pin 1 (no connection, not used)	Pin 1 (no connection, not used)
Pin 2 (SD+)	Pin 2 (SD+)
Pin 3 (SD-)	Pin 3 (SD-)
Pin 4 (no connection, not used)	Pin 4 (no connection, not used)

¹ IntelliFlo is a registered trademark of Pentair Pool Products, Inc.

3.3.6 Jandy ePump™ DC DIP switch settings

As shown in Figure 15, the 4-position dip switch is located at the rear of the ePump™ DC. This dip switch serves two functions, it determines what type of control will be used with the pump and it selects the pump address.

The SW 1 (switch 1) and SW 2 are turned ON if the pump is to be controlled by a stand alone controller or OFF if the pump is to be controlled by the AquaLink® RS.

SW 1	SW 2	CONTROL
OFF	OFF	PDA Power Center
ON	OFF	
OFF	ON	
ON	ON	Stand Alone

The SW 3 and SW 4 are turned ON/OFF to select the Pump address.

SW 4	SW 3	PUMP No.
OFF	OFF	1
OFF	ON	2
ON	OFF	3
ON	ON	4

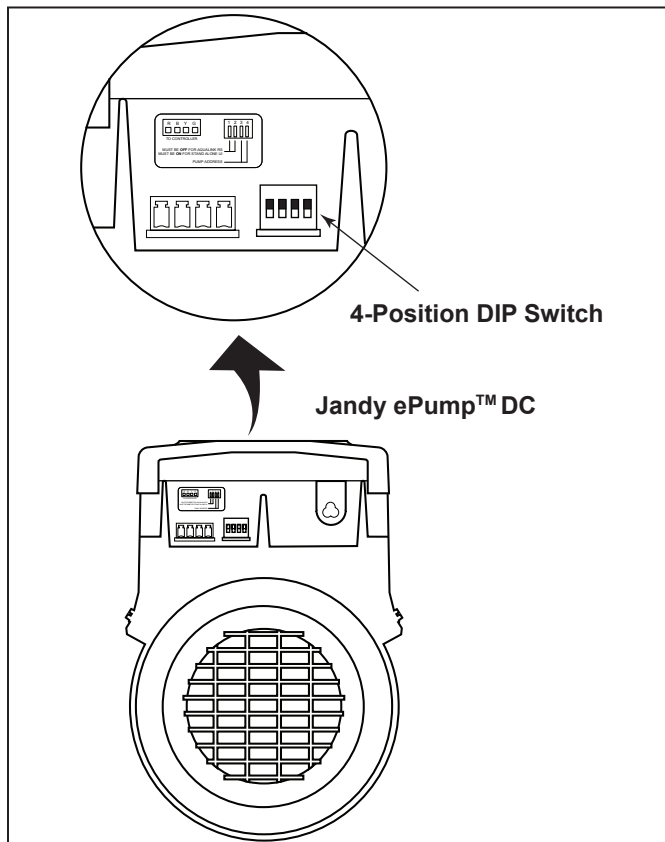


Figure 15. Jandy ePump™ DC Dip Switch

3.3.7 Wiring the Jandy ePump™ AC

RS485 Wire Connections for Jandy ePump AC	
This side connects to J1 of power center PCB or the multiplexer PCB.	This side of the cable connects to J1 of the Jandy VFD regulator PCB. (Mounted in the motor drive enclosure)
Pin 1 (Not used)	Pin 1 (Not used)
Pin 2 (SD+, Black wire)	Pin 2 (SD+, Black wire)
Pin 3 (SD-, Yellow wire)	Pin 3 (SD-, Yellow wire)
Pin 4 (GND, Green wire)	Pin 4 (GND, Green wire)

3.3.8 Jandy ePump™ AC Switch DIP Settings

As shown in Figure 9, the 4-position dip switch is located on the VFD voltage regulator PCB inside of the motor drive enclosure. This dip switch serves two different functions - it determines what type of control will be used with the pump and it selects the pump address. The SW 1 (switch 1) and SW 2 are turned ON if the pump is to be controlled by stand alone controller or OFF if the pump is to be controlled by the PDA power center.

SW1	SW2	Control
OFF	OFF	PDA Power Center
ON	OFF	
OFF	ON	
ON	ON	Stand Alone Controller

The SW3 and SW4 are turned ON/OFF to select the pump address.

SW3	SW4	Pump Number
OFF	OFF	1
ON	OFF	2
OFF	ON	3
ON	ON	4

NOTE: UP = ON
DOWN = OFF
Refer to Figure 9.

3.4 Heater Connection

The heater connection section applies to all heaters or heat pumps with thermostatic circuitry of 24 VAC or less.

NOTE If you are connecting a heater with thermostatic circuitry of 120 VAC or greater, do not connect to the green, 10-pin Terminal Bar. Instead, connect the heater to a high voltage relay in the power center and plug the spare relay into the Electric Heater relay socket located on the upper right hand corner of the power center PCB.

3.4.1 Jandy Brand Heater Connections

1. Connect two #14 gauge wires, designed for use in hot environments, to the #1 and #2 terminals on the green, 10-pin Terminal Bar.
2. Connect the other ends of the #14 gauge wires from Step 1 to the Fireman's Switch terminal bar in place of the factory installed wire loop.
3. Do not disconnect high limit or pressure switches.
4. Turn the heater thermostat(s) to maximum setting.
5. Turn the heater switch to the ON position. For dual thermostat heaters turn switch to Spa position.

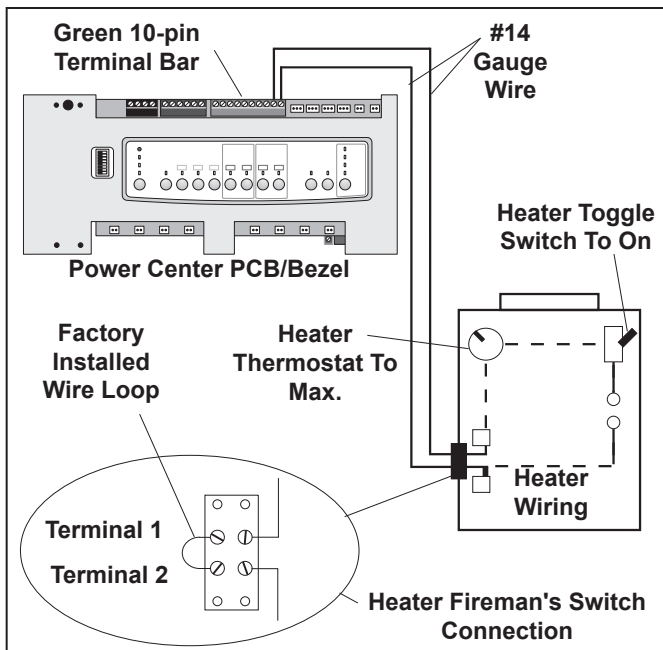


Figure 16. Lite2™ Heater Connection

3.4.2 Guidelines for Sophisticated Diagnostic Communication to LX Heaters

1. Remove the LX GUI from the heater.
2. Confirm the LX and AquaLink® RS software revisions are compatible (see table).
3. Run a 4-conductor cable from the LX GUI red, 4-pin connector to the RS power center red, 4-pin connector (see Figure 17).

LX Software Revision	AquaLink® RS Software Revision
C10, C11 or later	PDA 1.0 or later

NOTE If connecting more than two (2) items to the RS power center red, 4-pin connector, a Multiplex PCB is required.

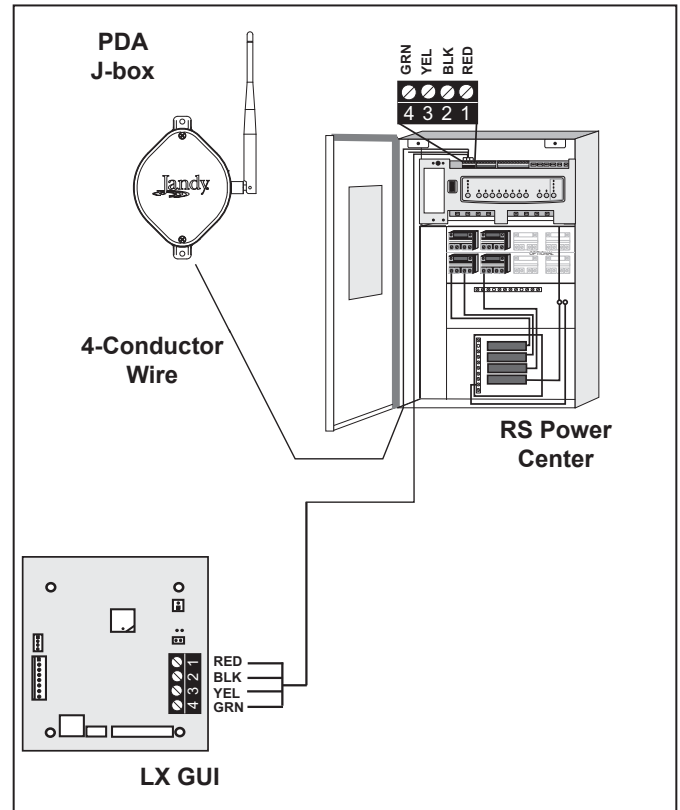


Figure 17. LX™ Heater Connection to Power Center

3.4.3 Other Brands Heater Connections

To set up heater connections on heaters manufactured by Hayward®¹, Pentair®, and Raypak®², please refer to the Installation Manual provided with these heaters.

¹ Hayward is a registered trademark of Hayward Industries, Inc

² Raypak is a registered trademark of Raypak, Inc.

3.4.4 Guidelines for a Gas Heater and a Jandy AE Series Heat Pump/Chiller Installation

NOTE The following steps provide the procedure for installing a Jandy AE Series Heat Pump.

1. Install a fixed resistor, with a value of 2.2K Ohms, in the solar sensor terminals #3 and #4 of the green, 10-pin terminal bar of the AquaLink® RS power center (see Figure 18).
2. To run the wires from the heat pump, remove the 5 screws that attach the service/wiring cover panel to the heat pump (see Figure 18).

NOTE One end of the wiring reserved to run into the conduit connection labeled "Low Voltage Connection", located on the lower right hand side of the heat pump (see Figure 18).

3. Run the wires from the heat pump control panel through the wiring conduit located on the outer right hand side of the heat pump.

4. Connect the heat pump to a standard relay, then connect the relay to the solar pump output on the PCB. Set the time to 11:59 PM; at 12:00 AM, the AquaLink® RS will auto-relabel solar as heat pump. Otherwise, the AquaLink® RS will auto-relabel solar as heat pump within 24 hours.
5. The solar button will activate the heat pump/chiller and the pool and/or spa heater buttons will activate the gas heater. In this manner the pool or spa can be heated or chilled by the heat pump, the gas heater or both.

NOTE To program the heat pump control panel, refer to the *Jandy AE Series Heat Pump Manual*.

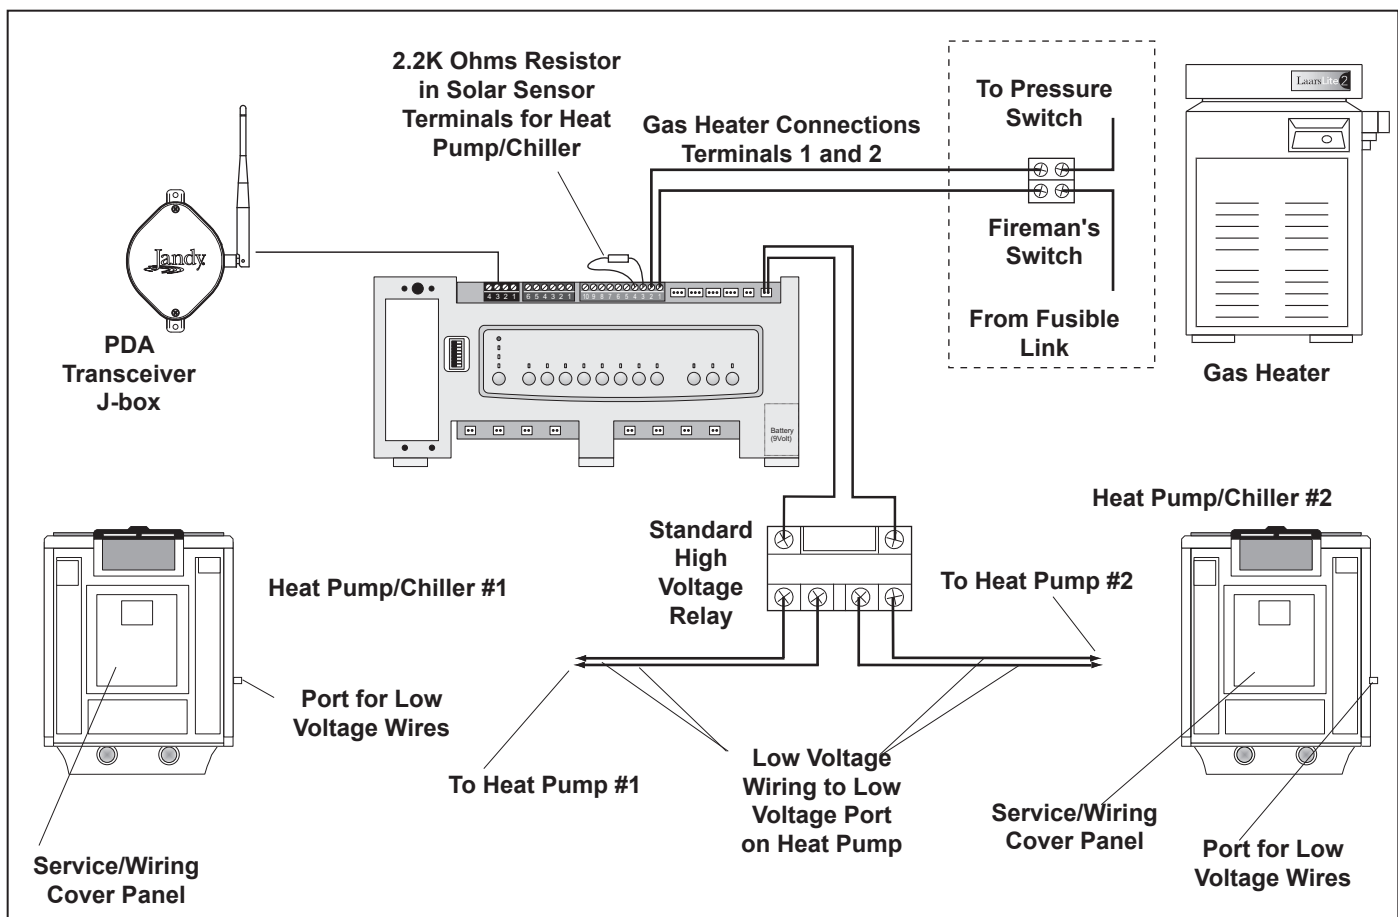


Figure 18. Heater and Heat Pump/Chiller Wiring

3.5 Temperature Sensors

1. Drill 3/8" hole in pipe between filter pump and filter and install the **Water Temperature Sensor** per instructions (make certain the o-ring is in place).
2. Install **Air Temperature Sensor** outside the power center can, not in direct sunlight and away from motors and other heat sources.
3. Install **Solar Temperature Sensor** (optional) adjacent to solar panels.
4. Run the wire to the power center, through the low voltage raceway. Cut off excess wire. Strip the wire jacket back 6", then strip each wire 1/4". Connect sensor wires to the green, 10-pin terminal bar (see Figure 19).

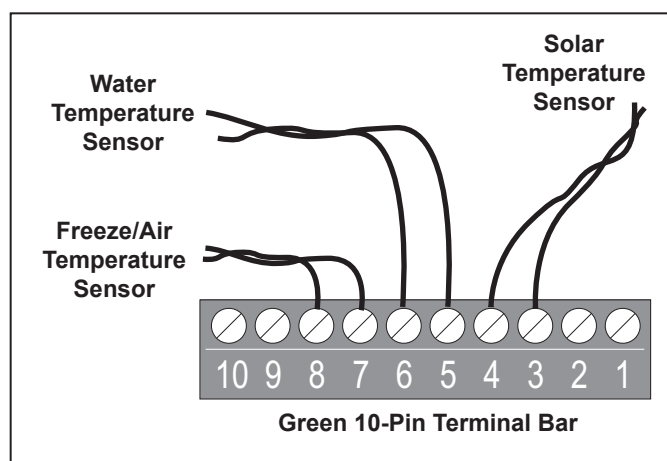


Figure 19. Temperature Sensor Wiring for a Pool/Spa Combination

3.6 Jandy Valve Actuators

NOTE Mount the JVAs according to the **Jandy Valve Actuator Installation and Operation Manual**.

JVA cable is type SJW-A marked water resistant class 3 cable and does not require conduit. Knockouts and Heyco® fittings are provided in the low voltage raceway.

1. Route the JVA wire to the power center.
2. Run the wire through the low voltage raceway and plug the JVA connectors into their proper sockets (see *Section 6. Power Center Wiring Diagram*). Verify that the JVA on the suction plumbing is connected to the Intake JVA Socket, and the discharge plumbing is connected to the return JVA socket.

NOTE Do not coil the JVA wires inside power center. To shorten the wire, remove the JVA cover and disconnect the wire. Shorten, strip, and reconnect.

3. For alternate plumbing configurations the JVA cam settings can be adjusted as needed. See the *Jandy Valve Actuator Installation and Operation Manual, Cam Setting Chart* for proper settings.

3.7 PDA Transceiver J-box Installation

Installation Considerations. The transceivers will transmit through walls and around corners. Steel framing, aluminum siding, wrought iron, cyclone fences, leaded glass, and other 900 MHz frequency items may inhibit/prevent communication between the AquaLink® RS PDA handheld remote and the power center. **The transceivers do not require line of sight to communicate.** To optimize communication, install transceivers in a location that minimizes interference.

3.7.1 Outdoor Transceiver J-box Installation

1. Turn off all power to the power center.
2. Mount the outdoor transceiver J-box at least 6' above the ground and at least 8' from an air blower (see Figure 20).

NOTE To improve performance of the transceiver, mount the J-box more than 6' above the ground.

3. Open the door to the power center and remove the dead panel.
4. Feed the four conductor wire into the power center through the low voltage raceway.
5. Cut off the excess wire. Strip the jacket back 6" and strip the individual wires approximately ¼". Connect the four conductor wire to the red terminal bar on the power center PCB.
6. Install the dead panel to the power center and restore all power.

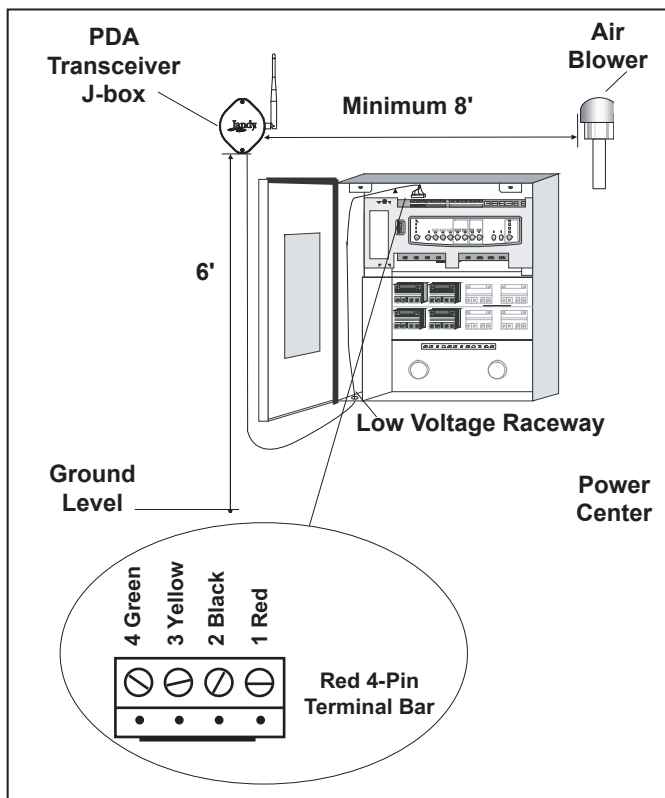


Figure 20. Outdoor Transceiver J-box Installation

3.7.2 PDA Handheld Remote Installation

1. Remove the handheld remote from the packaging.
2. On the back of the handheld remote, loosen and remove the two (2) screws that secure the cover for the battery chamber (see Figure 21).
3. Install two (2) AA batteries. Ensure that the polarity is correct.
4. Re-install the cover for the battery chamber and secure with the two (2) screws removed in Step 2.

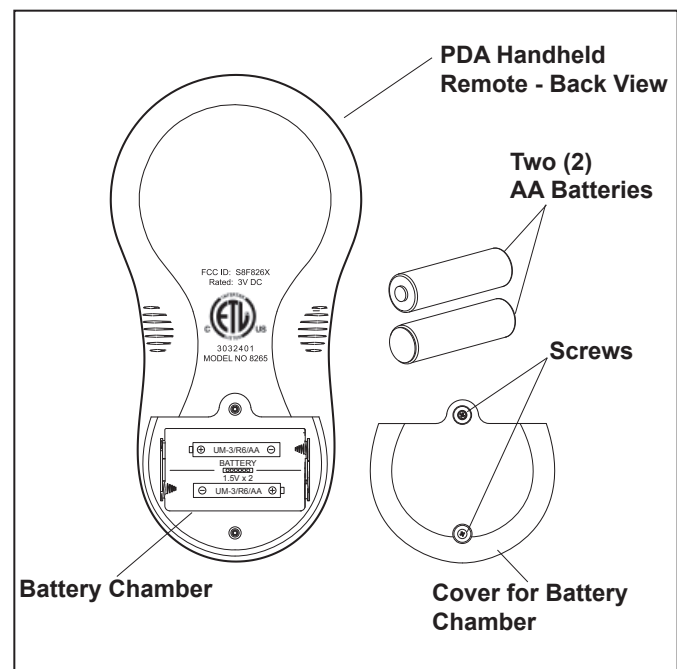


Figure 21. Battery Installation on Handheld Remote

3.7.3 Changing the Frequency Channel

If your AquaLink® RS PDA system is turning items on or off at undesigned times, another AquaLink® RS PDA system may be in close proximity using the same or similar frequency channel. To prevent unwanted operation the channel for your AquaLink® RS PDA system can be changed. The power center transceiver and the PDA transceiver J-box **must be set to the same RF channel**.

1. At the Transceiver J-box, remove the cover to expose the PCB (see Figure 22).

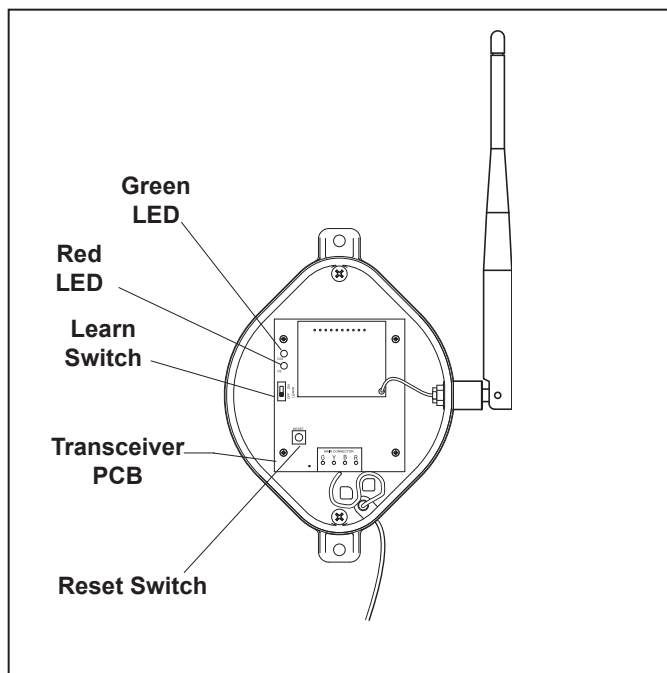


Figure 22. PDA Transceiver J-Box - Internal View

2. On the PDA handheld remote, press and hold both the UP and DOWN arrows simultaneously for three (3) seconds. After three (3) seconds, the CHANNEL SETUP screen appears (see Figure 23). Select a channel.
3. Use the UP and DOWN buttons to highlight the desired RF channel. Then press SELECT.

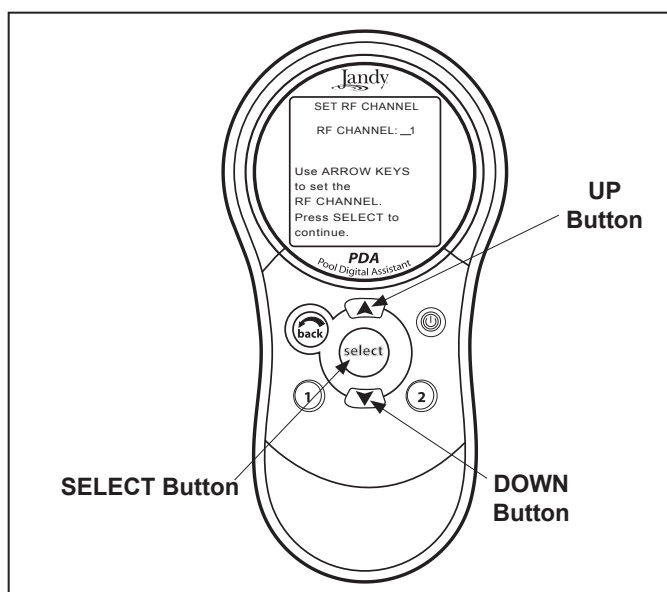


Figure 23. PDA Handheld Remote Channel Setup and Buttons

4. When the RF channel is selected, the following message appears on the PDA display screen:
Set slide switch on J-Box PCB to the LEARN MODE.
5. At the PCB in the Transceiver J-box, slide the Learn Switch to LEARN (ON). See Figure 24.
6. On the PDA Handheld Remote display screen, a prompt will appear with instructions to slide the J-box Learn Switch out of LEARN (OFF) and to press the J-box Reset Switch.
7. At the PCB in the Transceiver J-box, slide the Learn Switch out of LEARN and press the Reset Switch. The Red and Green LEDs on the J-box will blink simultaneously (see Figure 24).

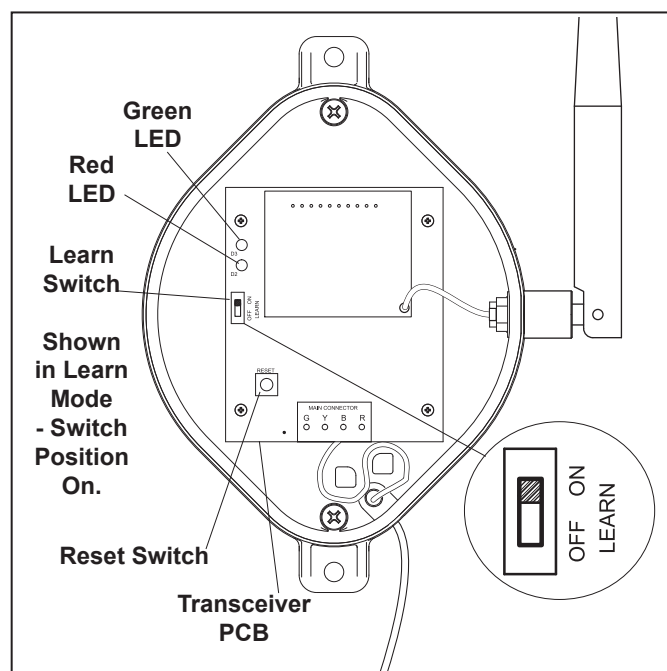


Figure 24. Transceiver J-box PCB Learn Switch

Section 4. System Startup

4.1 Handheld Remote Programming

4.1.1. Basic Programming Menu

To set a particular piece of equipment to turn on and off at predetermined times, highlight MENU and press SELECT (see Figure 25). Highlight PROGRAM and press SELECT. Use the UP or DOWN buttons to highlight the equipment (for example, Filter Pump) then press SELECT. Follow the on-screen prompts. Use the UP or DOWN buttons to pick each number, starting with ON hours, press SELECT to enter and move on to the next item to change, including picking what day(s) the program will run. If you make a mistake, use the BACK button to return to a number. If the program is already entered, highlight CHANGE PROGRAM and step through to the entry that should be corrected.

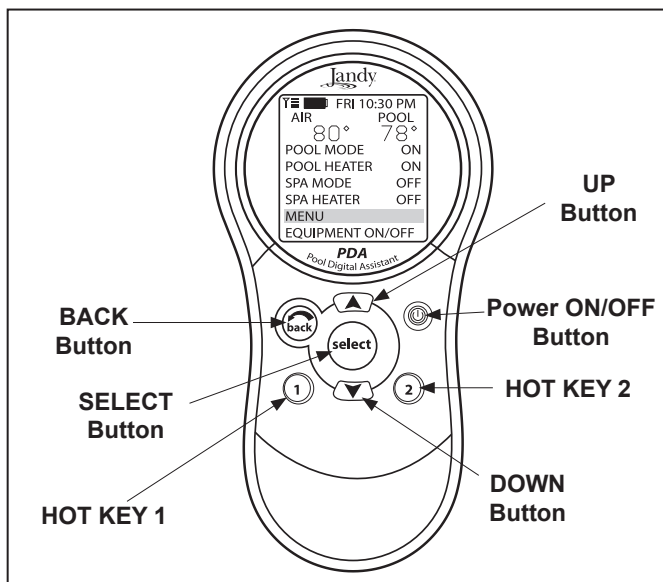


Figure 25. PDA Handheld Remote Buttons

4.1.1.1 Variable Speed Pump Programming

A variable speed pump can be programmed to run at any one of its eight (8) speeds. Power to the variable speed pump is switched on/off by a relay. Therefore, to program the pump you need to set a program time for the relay and for any speeds that you wish to run during the pumps on cycle.

In the example shown below the variable speed pump is used for pool filtration, so it will be powered from the FILTER PUMP relay. Therefore, to program the variable speed pump you must first set a program time for the FILTER PUMP relay, then you need to program the desired pump speeds to turn on/off during the FILTER PUMP cycle. If you do not program any speeds to run during the filtration cycle, then by default the variable speed pump will run at the POOL speed setting during its filtration cycle.

Example:

1. The total length of the filtration cycle is to be from 8am to 5pm. Program the FILTER PUMP to turn on at 8am and to turn off at 5pm
2. To run the variable speed pump at the SPEED3 setting from 8am to 1pm, highlight and select VSP SPD1 PGM, then highlight and select SPEED3, program it to turn on at 8am and off at 1pm.
3. To run the variable speed pump at the SPEED4 setting from 1pm to 5pm, highlight and VSP SPD1 PGM, then highlight and select SPEED4, program it to turn on at 1pm and off at 5pm.

	ON	OFF	DESCRIPTION
FILTER PUMP	8AM	5PM	Total duration of filtration cycle
SPEED3	8AM	1PM	Pump runs at the SPEED3 setting
SPEED4	1PM	5PM	Pump runs at the SPEED4 setting

4.1.2 Set the Time Menu

To set the time, highlight the MENU and press SELECT. Highlight SET TIME and press SELECT (see Figure 26). Use the UP or DOWN button to set the values. Press SELECT to continue.

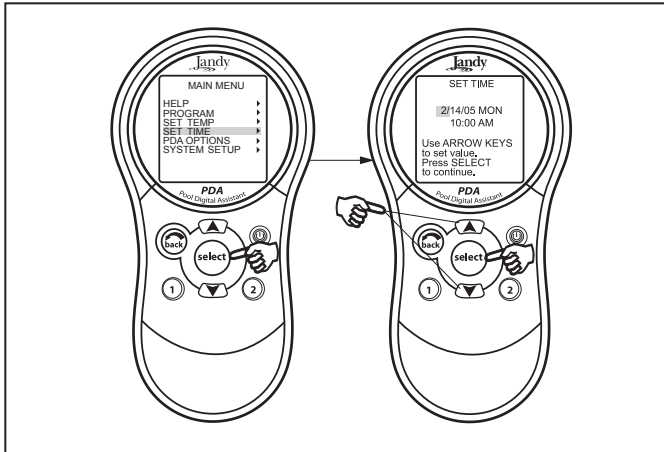


Figure 26. Set Time Menu

4.1.3 Set the Temperature Menu

Pool/Spa Combination - Highlight MENU and press SELECT. Highlight SET TEMP and press SELECT (see Figure 27). Use the UP or DOWN button to highlight either POOL or SPA and press SELECT. Use the UP or DOWN button to increase or decrease the temperature and press SELECT. Use the BACK button to return to the main screen.

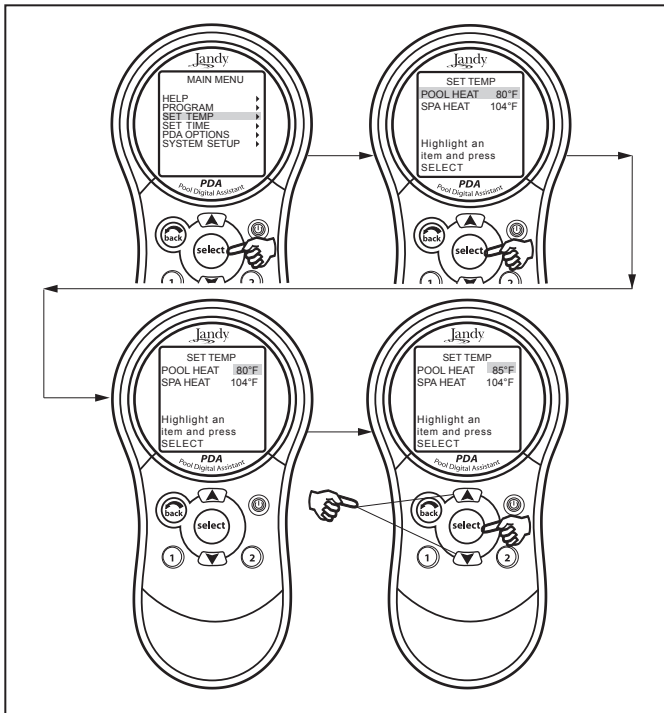


Figure 27. Set Temperature Menu - Pool/Spa Combination

Pool/Spa Only - Highlight MENU and press SELECT. Highlight SET TEMP and press SELECT (see Figure 28). The message *TEMP1 must be higher than TEMP2* is displayed. Highlight TEMP1 and press SELECT. Use the UP or DOWN button to increase or decrease the temperature and press SELECT. Highlight TEMP2 and press SELECT. Use the UP or DOWN button to increase or decrease the temperature and press SELECT. Use the BACK button to return to the main screen.

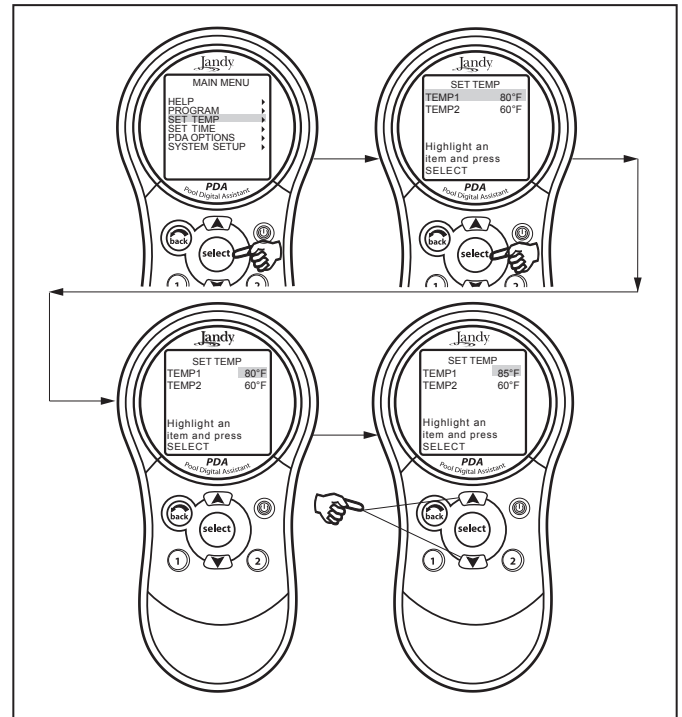


Figure 28. Set Temperature Menu - Pool/Spa Only

4.1.4 Label Auxiliary Functions Menu

Highlight MENU and press SELECT. Highlight SYSTEM SETUP and press SELECT (see Figure 29). Highlight LABEL AUX and press SELECT. Highlight the AUX you want to label and press SELECT. Highlight GENERAL, LIGHT, WATERFALL or CUSTOM LABEL and press SELECT. Choose a name within these categories by using the UP or DOWN button. Press SELECT when you find the correct label. Choose CUSTOM to type in your own labels.

NOTE The Auxiliary labels AIR BLOWER and FILL LINE have an automatic 30 minute runtime. If DIP switch 1,2 or 3 are on, auxiliaries 1, 2 and 3 are labeled CLEANER, LOW SPEED and SPILLOVER respectively and cannot be relabeled.

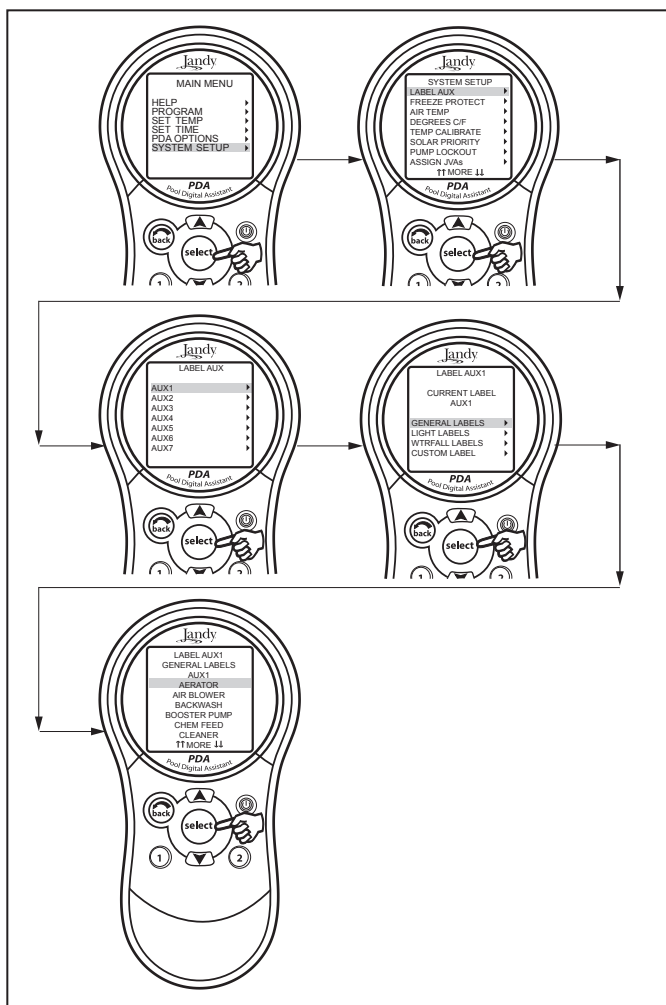


Figure 29. Label Aux Menu

4.1.5 Set Freeze Protection Menu

Highlight MENU and press SELECT. Highlight SYSTEM SETUP and press SELECT (see Figure 30). Highlight FREEZE PROTECT and press SELECT. Use the UP or DOWN button to change the temperature. Once the temperature is set press the SELECT button to move to the next screen to assign freeze protection to a selected piece of equipment. Highlight a device and press SELECT. "X" means the device has been assigned.

NOTE The filter pump is always assigned to freeze protection.

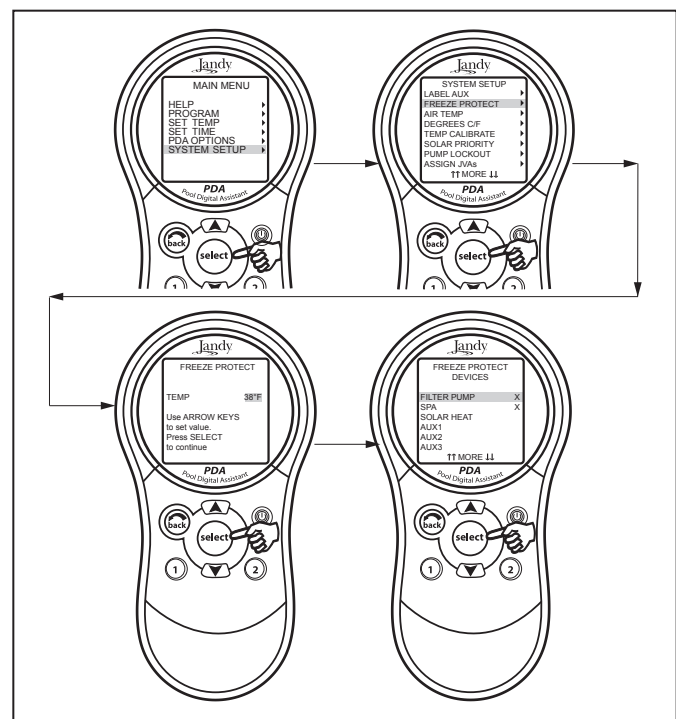


Figure 30. Freeze Protection Menu

4.1.6 Assign JVAs Menu

Highlight MENU and press SELECT. Highlight SYSTEM SETUP and press SELECT (see Figure 29). Highlight ASSIGN JVA and press SELECT. Highlight the JVA you wish to assign and press SELECT.

NOTE If a solar sensor is installed, the Solar JVA will automatically be assigned and will be marked as USED.

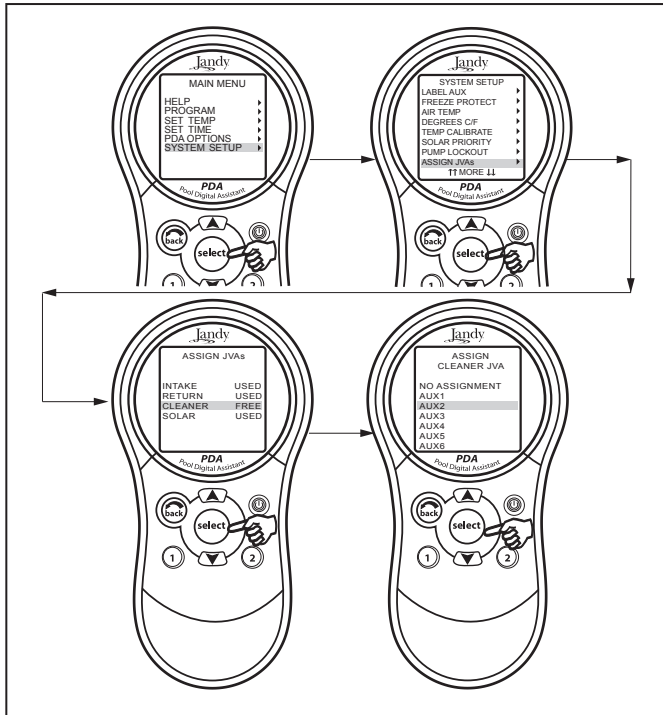


Figure 31. Assign JVA Menu

4.2 Restarting the System (Clear Memory) Menu

To remove all labeling, programming, assignments and temperature settings, highlight MENU and press SELECT. Highlight SYSTEM SETUP and press SELECT (see Figure 32). Highlight CLEAR MEMORY and press SELECT. Use the UP or DOWN button to highlight YES or NO and press SELECT. There will be about a 15 second delay before you see the FINISHED screen. Highlight CONTINUE and press SELECT to return to the SYSTEM SETUP.

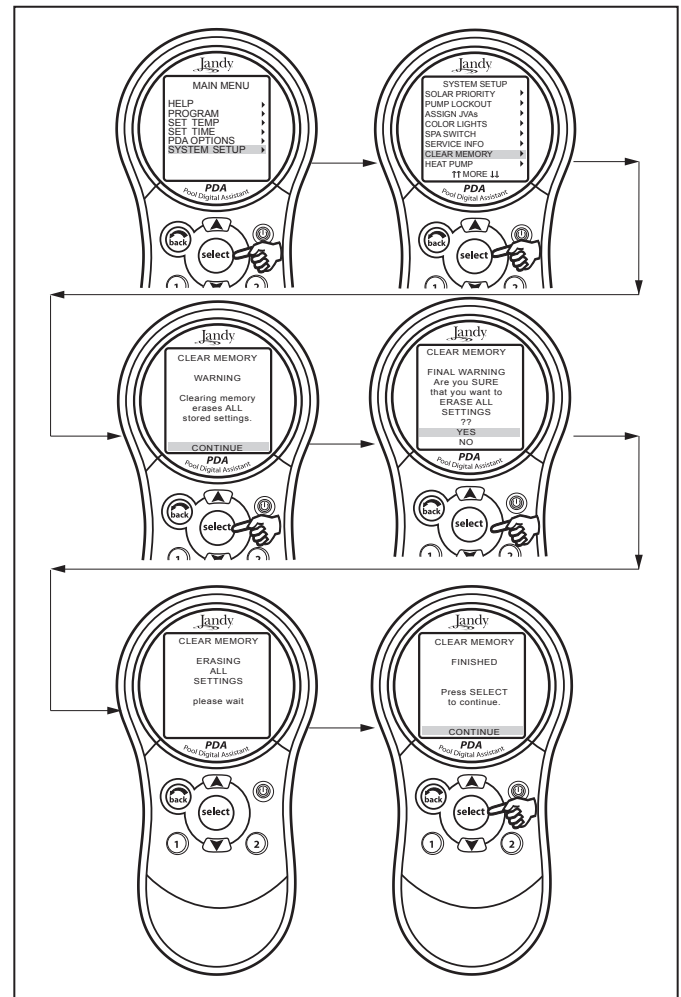


Figure 32. Clear Memory Menu

4.3 PDA System Defaults and General Modes

Default Temperature (Pool/Spa Combination)

Default Pool Temp = 80°F (27°C)

Default Spa Temp = 102°F (39°C)

Default Temperature (Pool/Spa Only)

Default TEMP1 = 80°F (27°C)

Default TEMP2 = 60°F (16°C)

Default Spa Side Switch Settings

Button 1 = Spa (Filter Pump for pool/spa only models)

Button 2 = Spa Heater (Temp1 pool/spa only models)

Button 3 = AUX1

Button 4 = AUX2

Default Freeze Protection Settings

Filter Pump: Freeze Protection ON.

All Other Equipment: Freeze Protection OFF

Default Activation Temperature: 38°F (4°C)

Variable Speed Pump

Not Installed

NOTE If you select SPA to be freeze protected, water circulation will switch between pool and spa every 30 minutes during freezing conditions once freeze mode is active.

4.3.1 Power Center Service Switch

AUTO Mode (automatic)

1. The PDA handheld remote has complete control of all functions.
2. All programmed settings will operate.
3. All safety delays and equipment protection interlocks are operational.

SERVICE Mode

1. The power center has complete control of all functions.

CAUTION

In service mode, equipment protection safety interlocks are overridden.

2. Service mode must be turned on/off at the power center.
3. No programmed settings will work.

TIMEOUT Mode

1. The power center has complete control for three (3) hours.
2. After three (3) hours the system will return to AUTO mode.

3. Programmed on/off times will be overridden during the three (3) hours.
4. After the three (3) hour "time out", the system will resume any programmed items that were overridden.

Battery Backup

A nine-volt battery is located at the power center. The battery keeps the clock running during a power outage so the time and date will be correct when power is restored. Programming will not be lost even if the battery is dead. **Do not** install the battery in the power center until the system is ready to operate. Battery will drain if power is left off. Review **DIAGNOSTICS** in the **SYSTEM SETUP** section of the menu. The **DIAGNOSTICS** will indicate when the battery needs replacement.

ATTENTION

Special Note to Startup Person: The AquaLink® RS PDA allows two (2) options for operating the pool equipment on the first day of operation:

Option #1 - Once all programming of equipment is completed, the AquaLink® RS PDA will automatically review all programs and turn on any equipment which is programmed to be on.

Option #2 - To operate the filter pump or cleaner continually for the first day, leave the power center service button in AUTO mode. Using the PDA Handheld Remote, turn on the filter pump or the equipment you want to run.

NOTE If the equipment has already been turned on by a program time, turn the equipment off and then back on.

The equipment that is activated will run continuously, ignoring the first programmed off time, and will turn off at the programmed off time for the next day (only if a program has been entered).

4.4 Variable Speed Pump Menu

NOTE This equipment may not be part of your system. Please check with your installer.

The VAR SPEED PUMP menu is used to select the variable speed pump type and to select the various pump settings. The user has the option to control one of five types of variable speed pumps, the Jandy ePump™ DC, Jandy ePump™ AC, the Pentair® IntelliFlo® VF, Pentair® IntelliFlo® VS, or Pentair® IntelliPro® VS. To control the IntelliPro® VS, select the IntelliFlo® VS.

4.4.1 To select the Pump Type

Highlight MENU and press SELECT, highlight SYSTEM SETUP and press SELECT, highlight VAR SPEED PUMP and press SELECT, highlight PUMP MODEL and press SELECT. Use the UP/DOWN arrow keys to highlight the desired model, then press SELECT. An X will appear next to the selection.

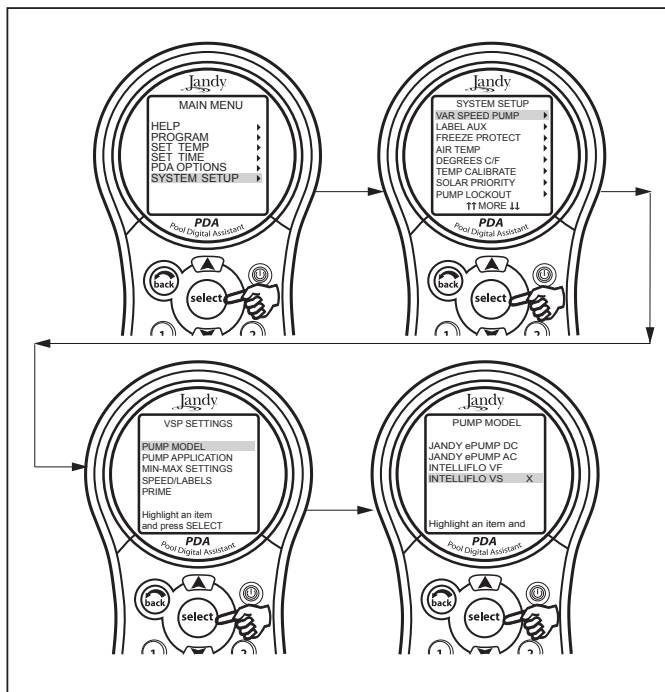


Figure 33. Pump Type Menu

4.4.2 To Set the Pump Application

The PDA can control up to 4 variable speed pumps. The default application setting for each pump is NOT INSTALLED. If the system is not going to control a variable speed pump then leave the application set to NOT INSTALLED. If the system is going to control a variable speed pump, then you would set the application to FILTRATION or AUX. PUMP. In the example below we are telling the system that it will be controlling one variable speed pump.

In the VSP SETTINGS menu, highlight PUMP APPLICATION and press SELECT. Use the UP/DOWN arrow keys to highlight the desired pump, then press SELECT. Use the UP/DOWN arrow keys to highlight the desired setting, then press SELECT. An X will appear next to the selection. Use the UP/DOWN arrow keys to highlight SAVE SETUP, then press SELECT.

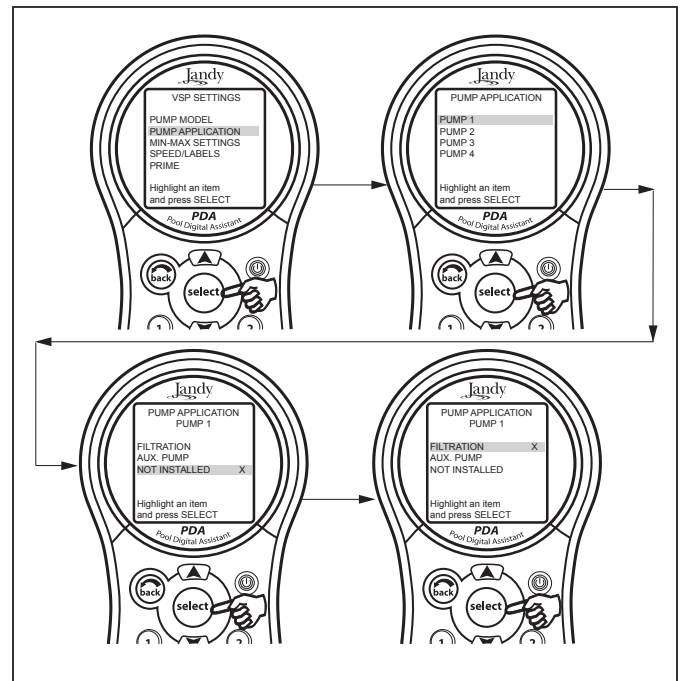


Figure 34. Pump Application Menu

4.4.3 To Set SCALE/MIN-MAX Parameters

This screen allows the user to set a global minimum and maximum speed or flow for the indicated pump. The SCALE setting is fixed to RPM for the Jandy ePump™ and the Pentair® IntelliFlo®. The SCALE setting is fixed to GPM for the Pentair® IntelliFlo®.

In the VSP SETTINGS menu, highlight MIN-MAX SETTINGS and press SELECT. Use the UP/DOWN arrow keys to highlight the desired pump, then press SELECT. Use the UP/DOWN arrow keys to highlight the desired speed, then press SELECT.

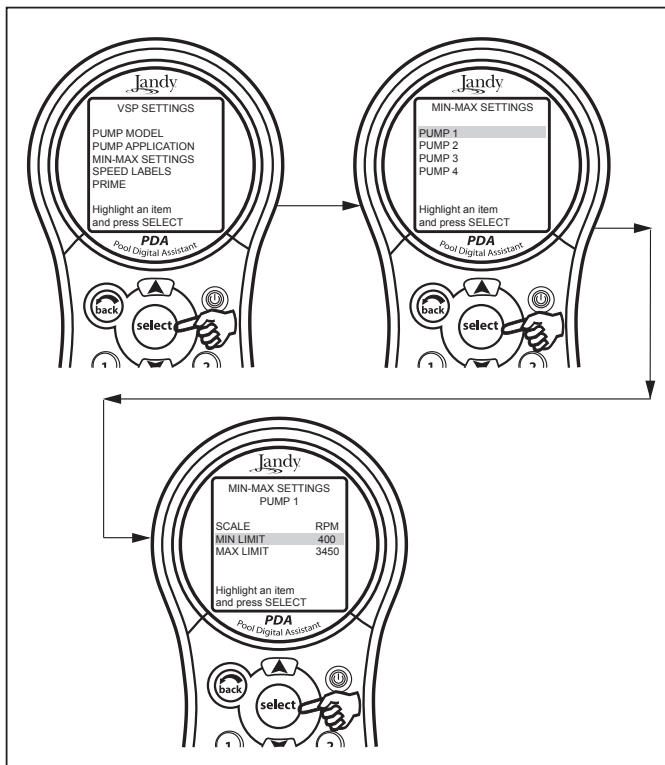


Figure 35. Scale/Min-Max Parameter Menu

4.4.4 To set the Pump Speed

There are eight (8) default speed presets for each variable speed pump.

In the VSP SETTINGS menu, highlight SPEED and press SELECT. Use the UP/DOWN arrow keys to highlight the desired pump, then press SELECT. Use the UP/DOWN arrow keys to highlight SET SPEEDS, then press SELECT. Use the UP/DOWN arrow keys to highlight the desired speed preset, then press SELECT. Use the UP/DOWN arrow keys to adjust the speed value, then press SELECT.

NOTE The FREEZE PROTECT speed is also set from this menu.

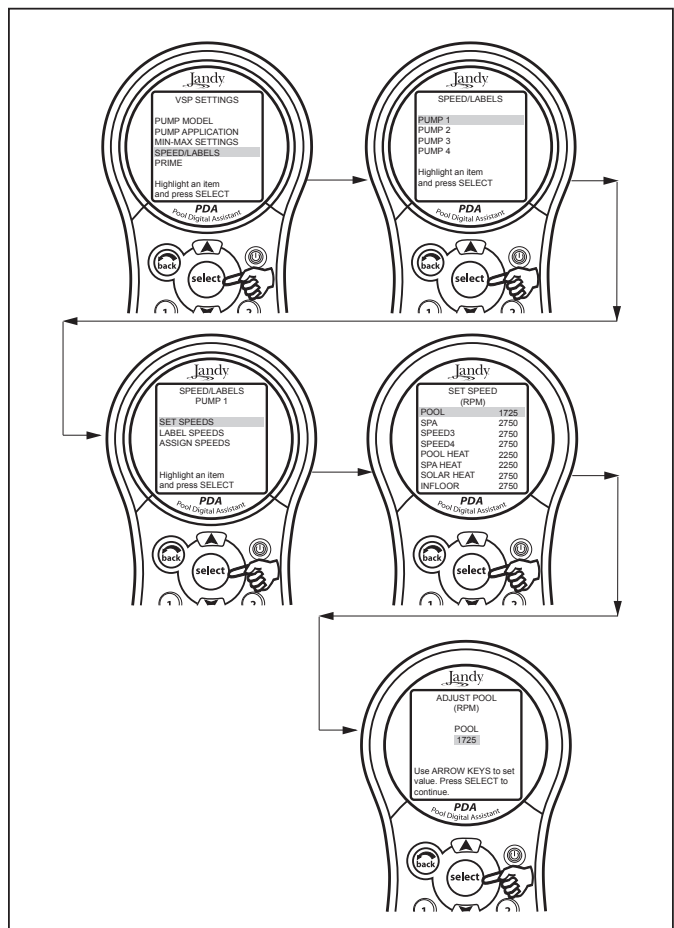


Figure 36. Pump Speed Menu

4.4.5 To re-label the Speed Preset

Each of the eight (8) default speed presets has a label and each of those labels can be changed from the default value.

In the SPEED SETTINGS menu, highlight LABEL SPEEDS and press SELECT. Use the UP/DOWN arrow keys to highlight the desired label, then press SELECT. Use the UP/DOWN arrow keys to highlight either GENERAL LABELS or CUSTOM LABELS, then press SELECT.

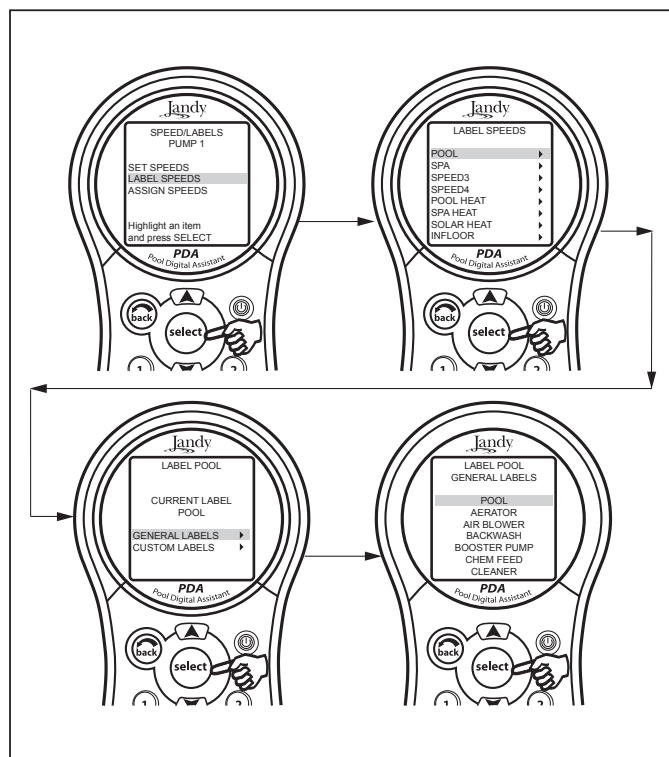


Figure 38. Re-label the Speed Preset Menu

4.4.6 Default Preset Speed Labels

The default speed preset labels are shown in the table below. The presets can be relabeled but the operation of the pump may be changed by doing so.

Default labels when Pump is configured for FILTRATION			
PRESET #	POOL/SPA COMBO	POOL/SPA ONLY	SPEED (RPM)
1	POOL	POOL	1725
2	SPA	SPEED2	2750
3	SPEED3 or CLEANER (if dip S1-1 is on)	SPEED3 or CLEANER (dip S1-1 is on)	2750
4	SPEED4 or SPILLOVER (if dip S1-3 is on)	SPEED4	2750
5	POOL HEAT	TEMP1	2250
6	SPA HEAT	TEMP2	2250
7	SOLAR HEAT (if dip S1-7 is on) or HEATPUMP (if dip S1-7 is on) or SPEED7	SOLAR HEAT (if dip S1-7 is on) or HEATPUMP (if dip S1-7 is on) or SPEED7	2750
8	SPEED8	SPEED8	2750

Preset 1:

The default label for preset #1 is POOL. This label is tied to the pool filtration mode. Anytime the pool pump is supposed to turn on, this preset is selected.

Preset 2:

On combo systems the default label for preset #2 is SPA. This label is tied to the spa filtration mode. Anytime the spa pump is supposed to turn on, this preset is selected.

Preset 3:

If dip switch S1-1 is ON, then the default label for this preset is CLEANER. Anytime the cleaner mode is turned on the pump will run at the speed setting of this preset.

If dip switch S1-1 is OFF, then the default label for this preset is SPEED3.

Preset 4:

On combo systems if dip switch 3 is ON, then the default label for this preset is SPILLOVER. Anytime the spillover mode is turned on the pump will run at the speed setting of this preset.

On a combo system if dip switch 3 is OFF, then the default label for this preset is SPEED4.

On a pool/spa only system the default label is SPEED4.

Preset 5:

On Pool/Spa Combo systems the default label is POOL HEAT. When the pool heater is enabled the pump will run at this speed.

On Pool/Spa Only systems the default label is TEMP1. When the pump is running and the heater set point TEMP1 is enabled, then the pump will run at this preset.

Preset 6:

On Pool/Spa Combo systems the default label is SPA HEAT. When the system is in the SPA mode and the SPA HEATER is enabled then the pump will run at this speed.

On Pool/Spa Only systems the default label is TEMP2. When the pump is running and the heater set point TEMP2 is enabled, then the pump will run at this preset.

Preset 7:

If the system is in the SOLAR HEAT mode or the HEAT PUMP mode then the pump will run at this preset speed. If the system is not configured for solar heat or a heat pump then the default label will be SPEED7.

Preset 8:

The default label for preset #8 is SPEED8.

4.4.7 To Assign Speeds to Auxiliaries

This menu allows the user to assign a speed to an auxiliary. When the assigned auxiliary is turned on the pump will switch to the speed that was assigned to the aux. If more than one auxiliary is on and if both of them have speeds assigned, the pump will operate at the higher of the two speeds.

In the VSP SETTINGS menu, highlight SPEED/LABELS and press SELECT. Use the UP/DOWN arrow keys to highlight the desired pump, then press SELECT. Use the UP/DOWN arrow keys to highlight ASSIGN SPEEDS, then press SELECT. Use the UP/DOWN arrow keys to highlight the desired auxiliary, then press SELECT. Use the UP/DOWN arrow keys to highlight the desired speeds, then press SELECT.

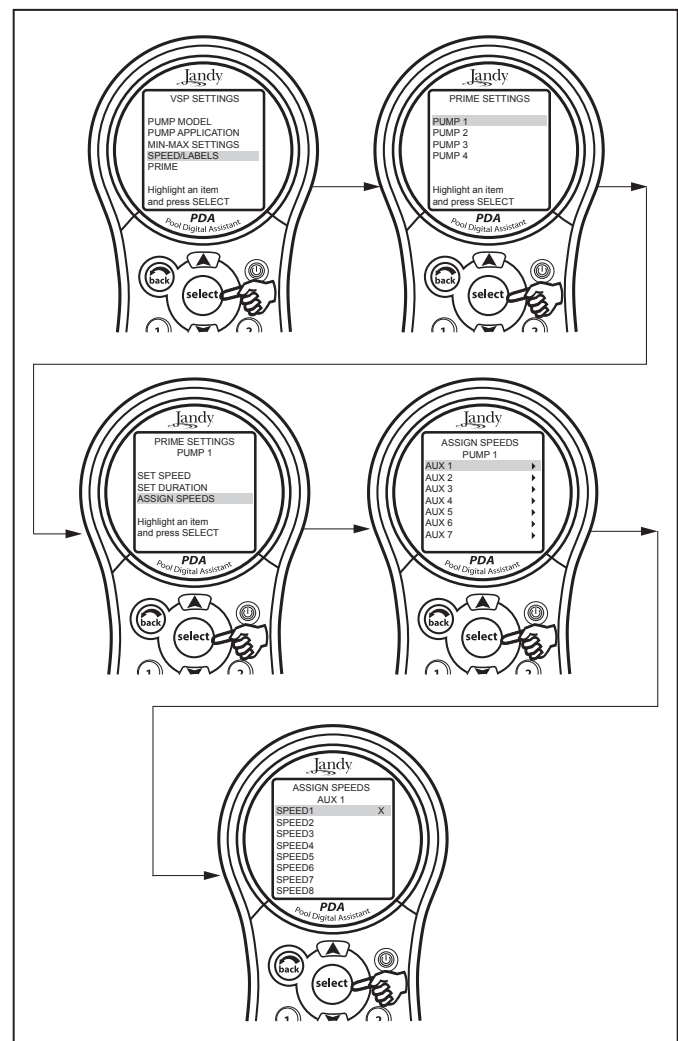


Figure 39. Assign Speeds to Auxiliaries

4.4.8 To Set the Priming Speed

Whenever the variable speed pump is turned on it will go into the priming mode for a predetermined amount of time (1-5 minutes). This menu allows for the priming speed to be adjusted.

NOTE The priming parameters for the IntelliFlo® are set at the pump.

In the VSP SETTINGS menu, highlight PRIME and press SELECT. Use the UP/DOWN arrow keys to highlight the desired pump, then press SELECT. Use the UP/DOWN arrow keys to highlight SET SPEED, then press SELECT. Use the UP/DOWN arrow keys to set value, then press SELECT.

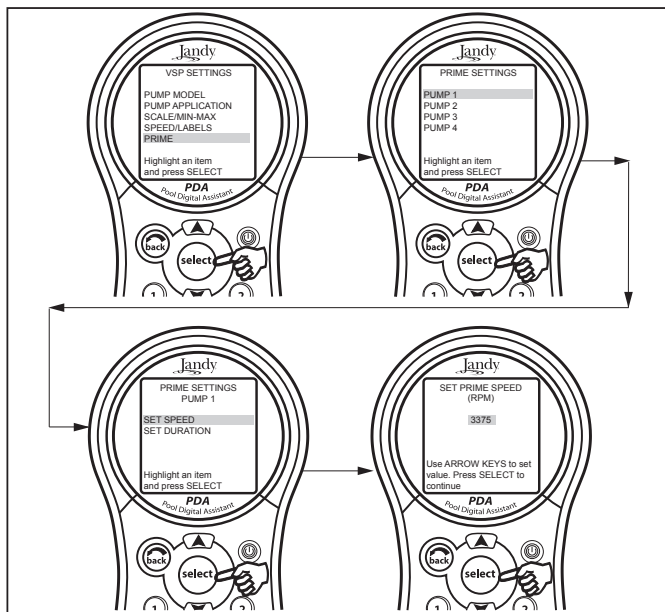


Figure 40. Priming Speed Menu

NOTE The FREEZE PROTECTION speed can be adjusted, the default speed is 2500 (RPM).

4.4.9 To Set the Priming Duration

This menu allows for the user to set the length of time the priming takes place (1-5 minutes).

In the VSP SETTINGS menu, highlight PRIME and press SELECT. Use the UP/DOWN arrow keys to highlight the desired pump, then press SELECT. Use the UP/DOWN arrow keys to highlight SET DURATION, then press SELECT. Use the UP/DOWN arrow keys to set value, then press SELECT.


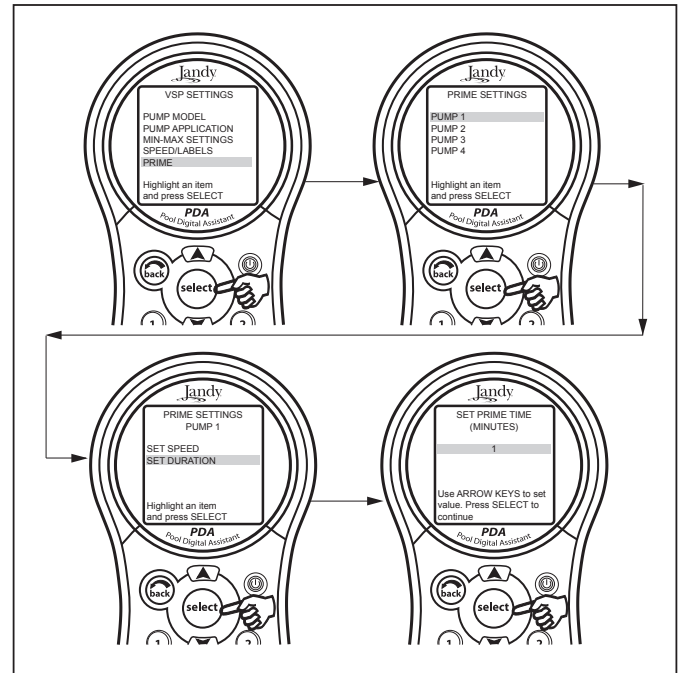


Figure 41. Priming Duration Menu

4.5 PDA Handheld Remote Menu Flow Chart

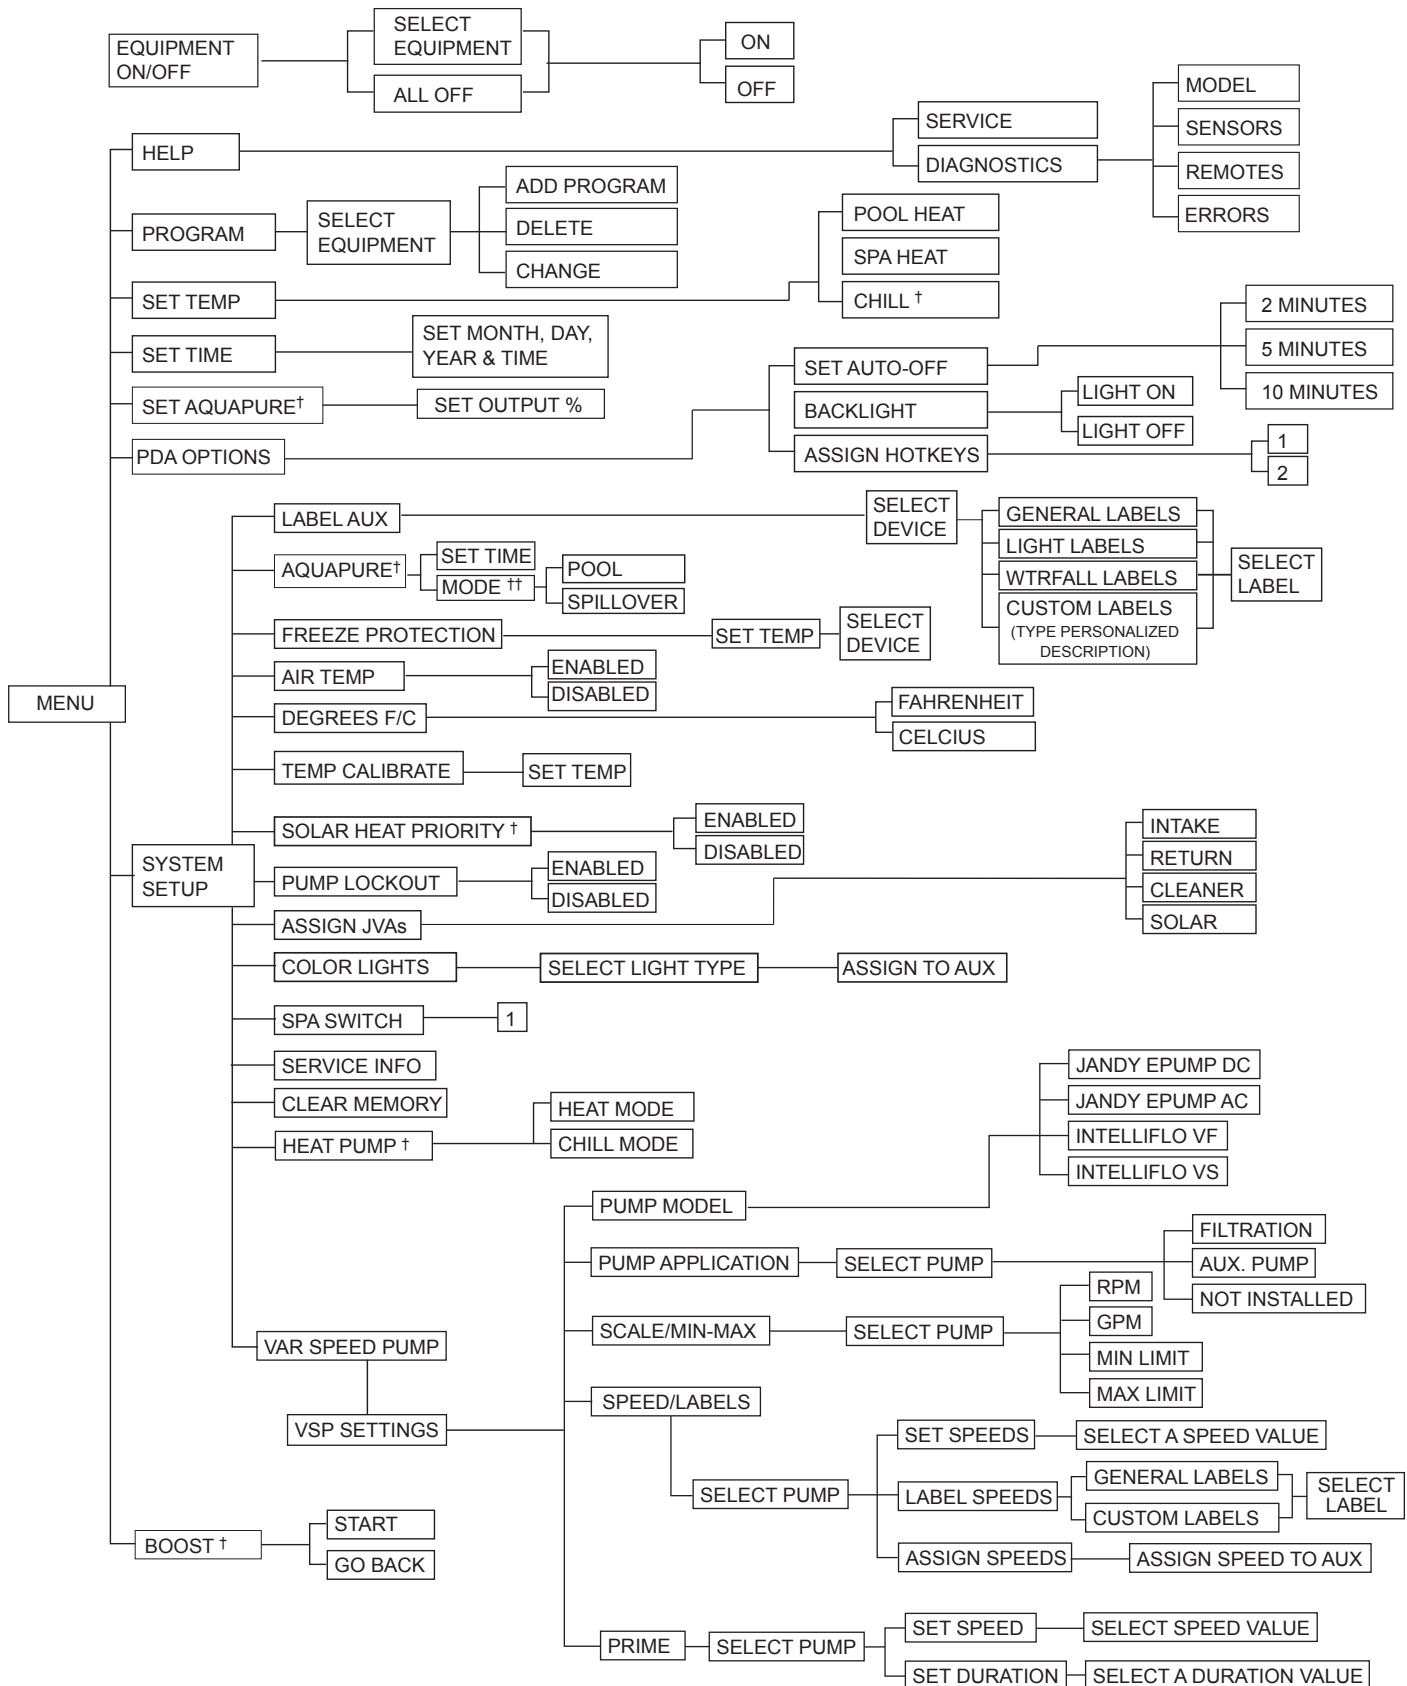

† Items Seen Only With Optional Equipment
 †† Mode Only Displayed When DIP Switch #3 is Set to ON

Section 5. Troubleshooting


5.1 PDA Quick Troubleshooting Guide

The AquaLink® RS PDA will stop communicating anytime interference (such as a 900 MHz device) prevents a valid signal transmission. When communication is lost the PDA handheld remote will lock on the startup screen until a good link is again achieved, usually within a few seconds. If communication is not reestablished within a few seconds or this happens often, use the troubleshooting information in the following table for suggestions.

Symptom	Problem	Possible Solution
Power center override switches operate when in Service or Time Out Mode, but the PDA Handheld Remote is completely dead (no backlight on or display).	Dead batteries in the PDA Handheld Remote.	Replace batteries.
PDA Handheld Remote backlight is on and the startup screen is displayed. The override switches at the power center operate as they should.	PDA is not communicating with the power center PCB.	Check the two center wires (black & yellow) of the four conductor cable to the transceiver J-box. Also check the installation of the PPD on the power center PCB. If the PPD is not seated correctly the system will not communicate.
PDA Handheld Remote backlight is on and the startup screen is displayed, but override switches at the power center do not operate at all.	<ol style="list-style-type: none"> 1. Damaged or improperly installed PPD. 2. Wrong PPD. 3. Damaged power center PCB. 	<ol style="list-style-type: none"> 1. Check alignment of the PPD. 2. Make sure that the PPD is for a PDA. 3. If PPD is installed correctly, replace the power center PCB.
Some buttons do not operate from the PDA Handheld Remote, nor from the power center override switches.	Wrong PPD chip installed at the power center PCB.	Ensure that the PPD revision number is the correct revision required for the application.
System locked up.	Microprocessor locked.	Turn off power to the system. Disconnect battery at the Power Center and turn on power. Reconnect the battery and reset time and date.
Programs do not run at the correct time.	AquaLink® RS does not display correct time and date.	At the PDA Handheld Remote, set correct time and date. In Diagnostics, check battery level. If LOW BATTERY is displayed, replace battery at the Power Center to ensure correct time and date are maintained.

Symptom	Problem	Possible Solution
<p>One button on the Four Function Remote does not operate.</p>	<p>Check programming first. If the Four Function Remote is programmed correctly, the button may be shorted.</p> <p>NOTE If dip switch 1 (CLEANER) is on, button # 3 on the Four Function Remote will not operate when in spa mode <i>unless</i> this button is programmed to a circuit other than Aux 1.</p>	<p>Replace the Four Function Remote. Use MENU, REVIEW, SPA SWITCH to check programming.</p>
<p>Pool cleaner booster pump turns on without the filter pump being on, and can run with the spa on.</p>	<p>System is not recognizing DIP switch #1 is on.</p> <p>NOTE Before turning on any DIP switches, first turn off all equipment. Do not program any auxiliaries until all DIP switches are set.</p>	<p>Turn off all equipment buttons, then turn off power to the system, finally turn off, then on, DIP switch #1. Turn on power and test system.</p>
<p>System comes on at times that are not programmed.</p>	<p>Phantom programs.</p>	<p>At the PDA press MENU, then select PROGRAM. Make note of all programs (the Four Function Remote setting, labels, and temperature settings) then turn off all DIP switches and go to the PDA. CLEAR MEMORY, reprogram and try system again.</p>
<p>Heater will not fire. Heater LED will not light in "Service Mode".</p>	<p>Water temperature sensor not installed or defective.</p>	<p>Check water temperature sensor.</p>
<p>LCD screen display stays on startup screen.</p>	<p>No communication between PDA Handheld Remote and Power Center J-box.</p>	<p>Change the Frequency Channel. See Section 3.7.3.</p>

Section 6. Power Center Wiring Diagram

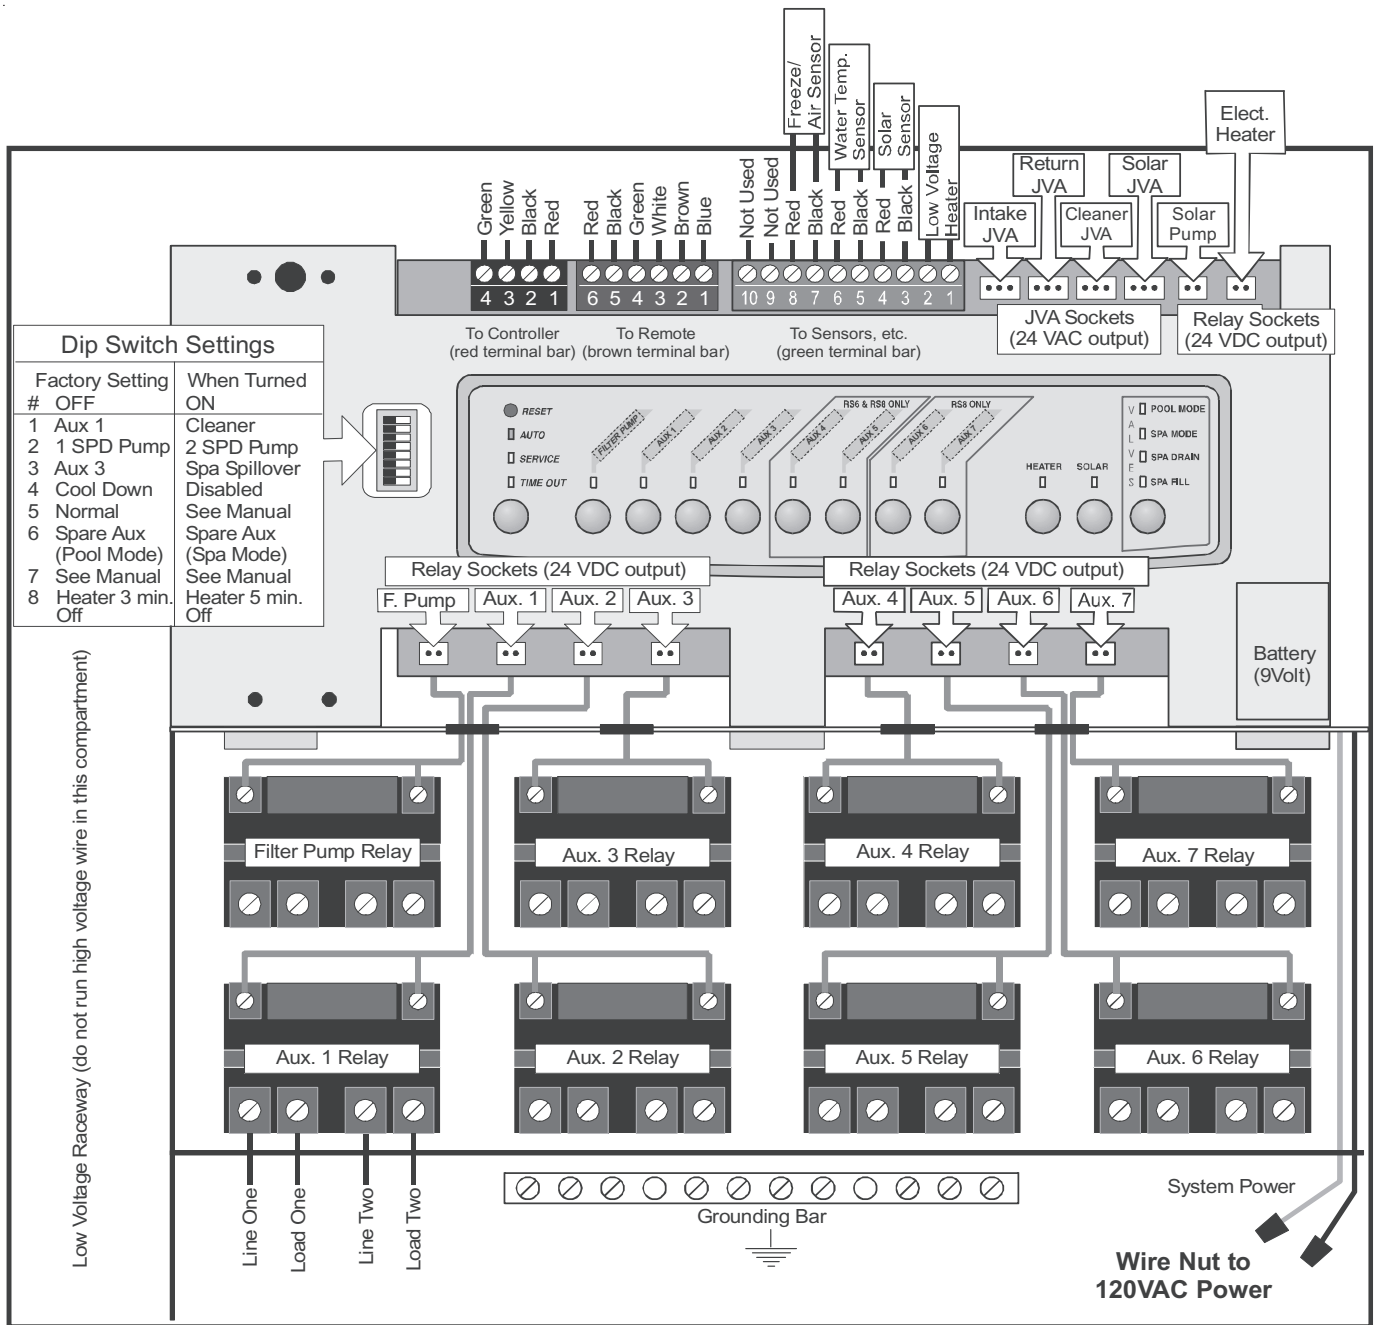

Section 7. Power Center PCB DIP Switch Settings

IMPORTANT Do not program equipment ON/OFF times until all DIP switches are set.

7.1 DIP Switch Functions

DIP #1 ON- AUX 1 Controls Pool Cleaner

If you installed a booster pump for a pool cleaner, the relay coil for the booster pump must be plugged into the AUX 1 relay socket. If a non-booster pump cleaner is installed, plug the JVA into the cleaner JVA socket. Turn ON DIP Switch #1.

- Main filter pump turns on whenever cleaner turns on.
- Cleaner will not turn on until filter pump has been on for three (3) minutes (to ensure priming of system).
- Cleaner turns off when water circulation is to spa.
- Cleaner turns off when spa spillover feature is activated.
- Cleaner turns off for three (3) minutes when solar is activated (to ensure air is purged from the system).
- AquaLink® RS PDA handheld remote display reads "CLEANER" rather than "AUX 1".

DIP #2 ON- AUX 2 Controls Low Speed of Filter Pump

Turn this switch ON if you want to control both speeds of a two-speed filter pump. With this switch on, the filter pump button on the AquaLink® RS PDA will control high speed and the HOT KEY 2 (default) button will control low speed.

IMPORTANT You must also install a Jandy Two-Speed Relay.

DIP #3 ON- AUX 3 Controls Spa Spillover (Operates with Pool/Spa Combination)

Turn this switch ON, and when the AUX 3 button on the AquaLink® RS PDA (or Spa Side Switch) is pressed, the return valve actuator will rotate to spa circulation. Because the intake valve actuator does not rotate, the spa will fill with water and overflow into the pool.

NOTE Leave AUX 3 relay socket empty.

DIP #4 ON- Heater Cool Down Disabled

Turn this switch ON to disable the heater cool down safety feature on the AquaLink® RS.

CAUTION

Turn this DIP Switch ON only if you are using an electric heater or a heat pump that does not retain residual heat. If you are turning this switch ON for service purposes, be sure to turn it back off.

DIP #5 ON- Factory Use Only

This switch is used for calibration by Jandy certified technicians only. Please leave this switch in the OFF position.


DIP #6 ON - Pool/Spa Combination Systems Only

Change spare AUX to activate when Filter Pump is on and system is in spa mode. Spare AUX socket is on the back side of the power center PCB.

DIP #7 ON- Not Used

Dip #8 ON- Heat Pump Instead of Gas Heater

Turn this switch ON if you have installed a heat pump instead of a gas heater. After thermostat setting has been reached, heater will remain OFF for five (5) minutes.

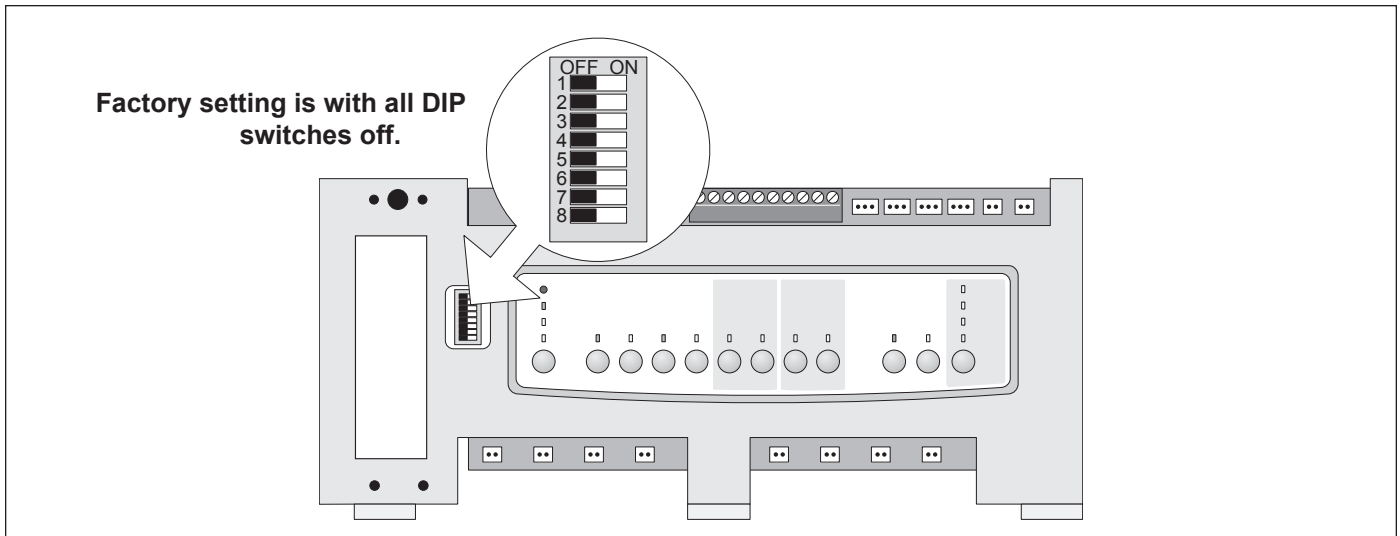

7.2 DIP Switch Settings for Pool and Spa Combination

DIP Switch #	OFF	ON
1	AUX1= any equipment	AUX1= Pool Cleaner
2	AUX2= any equipment	AUX2= Low Speed for a two-speed filter pump. Filter pump circuit becomes High Speed.
3	AUX3= any equipment	AUX3= Spa Spillover effect- Combination controls only.
4	Heater cool down operates.	Heater cool down disabled.
5	Normal operation	Factory adjustment- when this switch is on, temperature delays are eliminated. Do not leave this switch in the ON position.
6	Spare Aux activates with Filter Pump when Spa OFF.	Spare Aux activates with Filter pump with Spa on.
7	Spare	No change on Combination or Only Controls.
8	After thermostat setting has been reached, heater will remain OFF for three (3) minutes.	After thermostat setting has been reached, heater will remain OFF for five (5) minutes.

7.3 DIP Switch Settings for Pool or Spa Only

DIP Switch #	OFF	ON
1	AUX1= any equipment	AUX1= Pool Cleaner
2	AUX2= any equipment	AUX2= Low Speed for a two-speed filter pump. Filter pump circuit becomes High Speed.
3	AUX3= any equipment	No change
4	Heater cool down operates.	Heater cool down disabled.
5	Normal operation	Factory adjustment- when this switch is on, temperature delays are eliminated. <i>Do not leave this switch in the ON position.</i>
6	Spare	No change
7	Spare	No change
8	After thermostat setting has been reached, heater will remain OFF for three (3) minutes.	After thermostat setting has been reached, heater will remain OFF for five (5) minutes.

Section 8. General, Water Feature and Light Aux Labels

General Labels	Light Labels	Waterfall Labels
Aerator	#1	Waterfall
Air Blower	#2	Waterfall 1
Backwash	#3	Waterfall 2
Booster Pump	Back	Waterfall 3
Chem Feed	Basement	Sheer Dscnt
Cleaner	Beach	Rockfall
Color Wheel	Bedroom	Laminar Jet
Drain Line	Bug	
Fan	Cabana	
Fiber Optic	Color Wheel	
Fill Line	Deck	
Filter Pump	Dock	
Floor System	Drive	
Fogger	East	
Fountain	Entry	
Heat Pump	Equipment	
Heater	Fan	
Hi-E2	Fence	
High Speed	Flood	
Home A/C	Fountrn	
Home Heat	Front	
Jet Pump	Garage	
Lite	Garden	
Lamp	Gazebo	
Low Speed	Hall	
Mist	House	
Music	Kitchen	
Not Used (see note)	Laminar Plsr	
Ozonator	Left	
Pond	North	
Ray-Vac	Path	
Slide	Patio	
Solar Pump	Perimeter	
Spa	Pond	
Spillway	Pool	
Sprinkler 1	Porch	
Sprinkler 2	Right	
Sprinkler 3	Room	
Stereo	Sauna	
Stream	Security	
Swim Jet	Shower	
Timed Aux	Shrub	
Valve(s)	South	
Wtr Feature	Spa	
Whirlpool	Statue	
	Steps	
	Table	
	Tier	
	Tree	
	Walk	
	Water Ftr	
	Wtrfil	
	West	
	Yard	

NOTE Please be aware that if the label NOT USED from the GENERAL LABEL menu is used on an AUX relay, the relay will not engage.

NOTE

NOTE

LIMITED WARRANTY

Thank you for purchasing Jandy® pool and spa products. Jandy Pool Products, Inc. warrants all parts to be free from manufacturing defects in materials and workmanship for a period of one (1) year from the date of retail purchase, with the following exceptions:

- AquaLink® RS units installed with Jandy Surge Protection Kits will be covered for two (2) years.
- Never Lube® valves are warranted for the life of the pool and/or spa on which they were originally installed.
- AquaPure® Electronic Chlorine Generator Electrolytic Cells carry a five (5) year limited warranty on a prorated basis.
- Heat pumps are covered for two (2) years. There is a lifetime warranty on titanium tubing.
- The heat pump compressor is covered for five (5) years.

This warranty is limited to the first retail purchaser, is not transferable, and does not apply to products that have been moved from their original installation sites. The liability of Jandy Pool Products, Inc. shall not exceed the repair or replacement of defective parts and does not include any costs for labor to remove and reinstall the defective part, transportation to or from the factory, or any other materials required to make the repair. Refrigerant or other expendables are not covered by the warranty. This warranty does not cover failures or malfunctions resulting from the following:

1. Failure to properly install, operate, or maintain the product(s) in accordance with our published Installation, Operation and Maintenance Manuals, which are provided with the product(s).
2. The workmanship of any installer of the product(s).
3. Not maintaining a proper chemical balance in your pool and/or spa [pH levels between 7.2 and 7.8, with ideal ranges being between 7.4 and 7.6, Total Alkalinity (TA) between 80 to 120 ppm, Total Dissolved Solids (TDS) less than 2000, not including salt ppm].
4. Abuse, alteration, accident, fire, flood, lightning, rodents, insects, negligence, or acts of God.
5. Scaling, freezing, or other conditions causing inadequate water circulation.
6. Operating the product(s) at water flow rates outside the published minimum and maximum specifications.
7. Use of non-factory authorized parts or accessories in conjunction with the product(s).
8. Chemical contamination of combustion air or improper use of sanitizing chemicals, such as introducing sanitizing chemicals upstream of the heater and cleaner hose or through the skimmer.
9. Overheating; incorrect wire runs; improper electrical supply; collateral damage caused by failure of O-rings, DE grids, or cartridge elements; or damage caused by running the pump with insufficient quantities of water.

LIMITATION OF LIABILITY:

This is the only warranty given by Jandy Pool Products, Inc. No one is authorized to make any other warranties on behalf of Jandy Pool Products, Inc. **THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF FITNESS FOR A PARTICULAR PURPOSE AND MERCHANTABILITY. JANDY POOL PRODUCTS, INC. EXPRESSLY DISCLAIMS AND EXCLUDES ANY LIABILITY FOR CONSEQUENTIAL, INCIDENTAL, INDIRECT, OR PUNITIVE DAMAGES FOR BREACH OF ANY EXPRESSED OR IMPLIED WARRANTY.** This warranty gives you specific legal rights. You may also have other rights that vary by state or province.

WARRANTY CLAIMS:

For prompt warranty consideration, contact your dealer and provide the following information: proof of purchase, model number, serial number, and date of installation. The installer will contact the factory to obtain instructions regarding the claim and to determine the location of the nearest designated service center. If the dealer is not available, you can locate a service center in your area by visiting www.jandy.com or by calling our technical support department at 1.707.776.8200, extension 260. All returned parts must have a Returned Material Authorization number to be evaluated under the terms of this warranty.



ETL LISTED
CONFORMS TO
UL STD 1563

CERTIFIED TO
CAN/CSA C22.2 NO. 218.1

PDA HANDHELD REMOTE
FCC ID: S8F826X

PDA TRANSCEIVER
FCC ID: S8F8252

H0572200D

Jandy®