


CHANGING TIRES ON YOUR SUCTION POOLCLEANER™


BEFORE YOU DO ANYTHING, TURN THE PUMP OFF. SUCTION CAN BE DANGEROUS!!!

1 Remove the POOL-CLEANER™ from the pool, making sure to place the hoses straight. Separate the POOLCLEANER™ from the Leader Hose.


2 The tires must be replaced when the tires are worn down to the tread wear indicators!

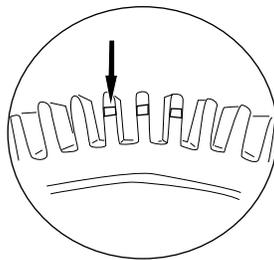

3 Place the cleaner on a work surface. **TO REMOVE THE 2X POOLCLEANER™ TIRES OR 4X POOLCLEANER™ FRONT TIRES**, using only your hands (other objects may damage the POOLCLEANER™) simply fold the tire off from top to bottom.

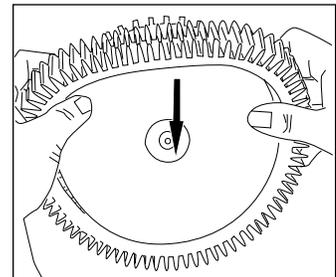


4 **TO REMOVE THE 4X POOLCLEANER™ BACK TIRES** you will need to remove the Shroud with a Phillips screwdriver (see pg. 11 step 3) and then remove the Wheel Hubs with a 5/32" or 4 mm Allen wrench turning the wrench counterclockwise.

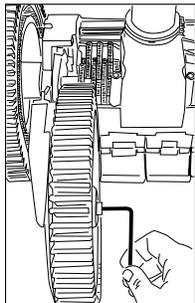

Once off, fold the tire off the Wheel Hub (step 3 above). To replace stretch the tire over the



Wheel Hub (starting from one side and folding it back on). Make sure the tire is on correctly.

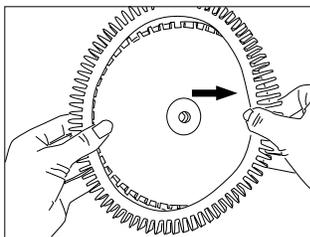

If need be do this closer to your body for better leverage.

Note: The front tires **ALWAYS** have **HUMPS** (raised treads) [2X & 4X POOLCLEANER™]. The back tires on the 4X **DO NOT** have humps!

5 Place the bolt through the Wheel Hub and line it up with the threaded hole, making sure the gear protruding from the POOLCLEANER™ engages with the gears on the Wheel Hub. Tighten bolt with Allen wrench clockwise.

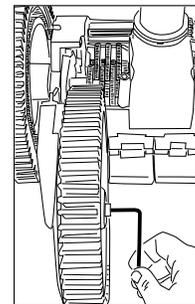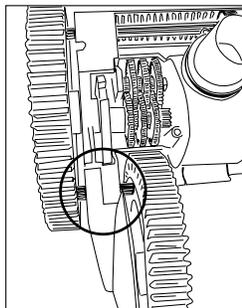


6 Place the Shroud back onto the POOL-CLEANER™ making sure it's on correctly. Drop the three screws into the screw holes and secure.

CHANGING TIRES ON YOUR PRESSURE POOLCLEANER™


BEFORE YOU DO ANYTHING, TURN THE PUMP OFF. SUCTION CAN BE DANGEROUS!!!

1 Remove the POOL-CLEANER™ from the pool. Place the hoses straight. Separate the POOLCLEANER™ from the hose.


2 The tires must be replaced when the tires are worn down to the tread wear indicators!

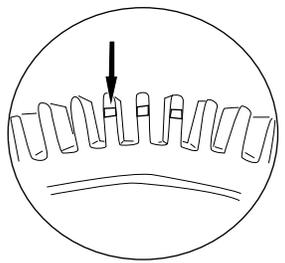

3 Place the cleaner on a work surface. **TO REMOVE THE POOL-CLEANER™ FRONT TIRES**, use only your hands (other objects may damage the POOLCLEANER™) simply fold the tire off from top to bottom.

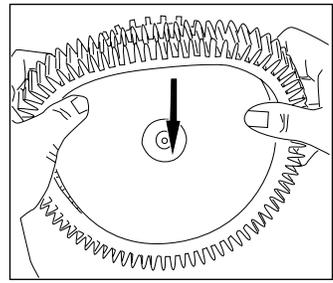


4 **BACK TIRES** remove the Wheel Hubs with a 5/32" or 4mm allen wrench turning the wrench counterclockwise.

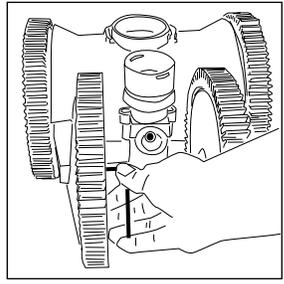



Note: The front tires **ALWAYS** have **HUMPS** (raised treads) The back tires **DO NOT** have humps!

Once off, fold the tire off the Wheel Hub (step 3 above). To replace stretch the tire over the Wheel Hub (starting from one side and folding it back on). Make sure the tire is on correctly.

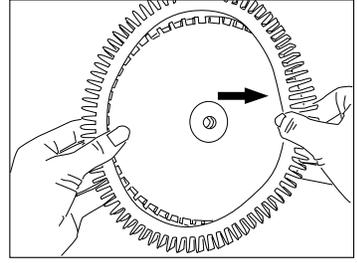

If need be do this closer to your body for better leverage.

5 Place the bolt through the Wheel Hub line it up with the threaded hole, making sure the gear protruding from the POOLCLEANER™ engages with the gears on the Wheel Hub. Tighten bolt with Allen wrench clockwise.

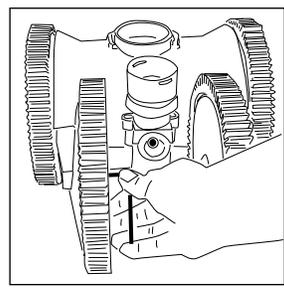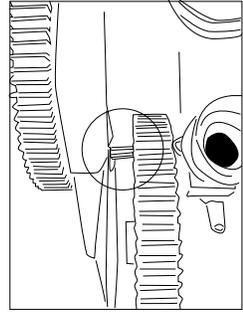

6 Rotate the right front tire forward to ensure that it moves smoothly. If not you fastened the wheel hub incorrectly.