



Step 1.

Using the drill location points highlighted, using a hole saw to suit 1/2" USA conduit adaptor cut out the required number of holes to suit the installation. With a maximum of 10.

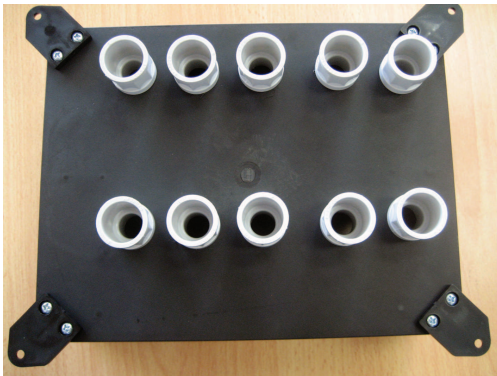

Step 2.

Fit the 1/2" USA conduit adaptors as shown.

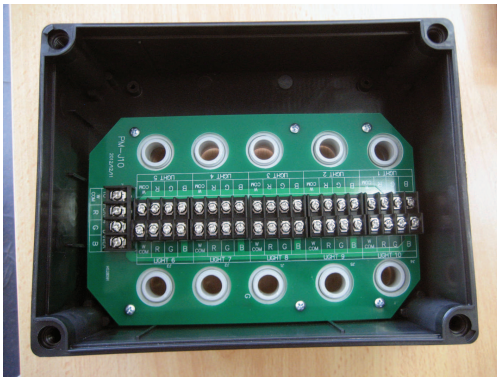

Step 3.

Connect the 4 Core Cables to the 4 pole terminals shown from the PAL Mini's and then run the single 4 core cable from the end output terminal to the PCR-4 Driver.

