


# Step Jet Kits

CMP# 25591-910, 25591-911, 25591-930, 25591-931

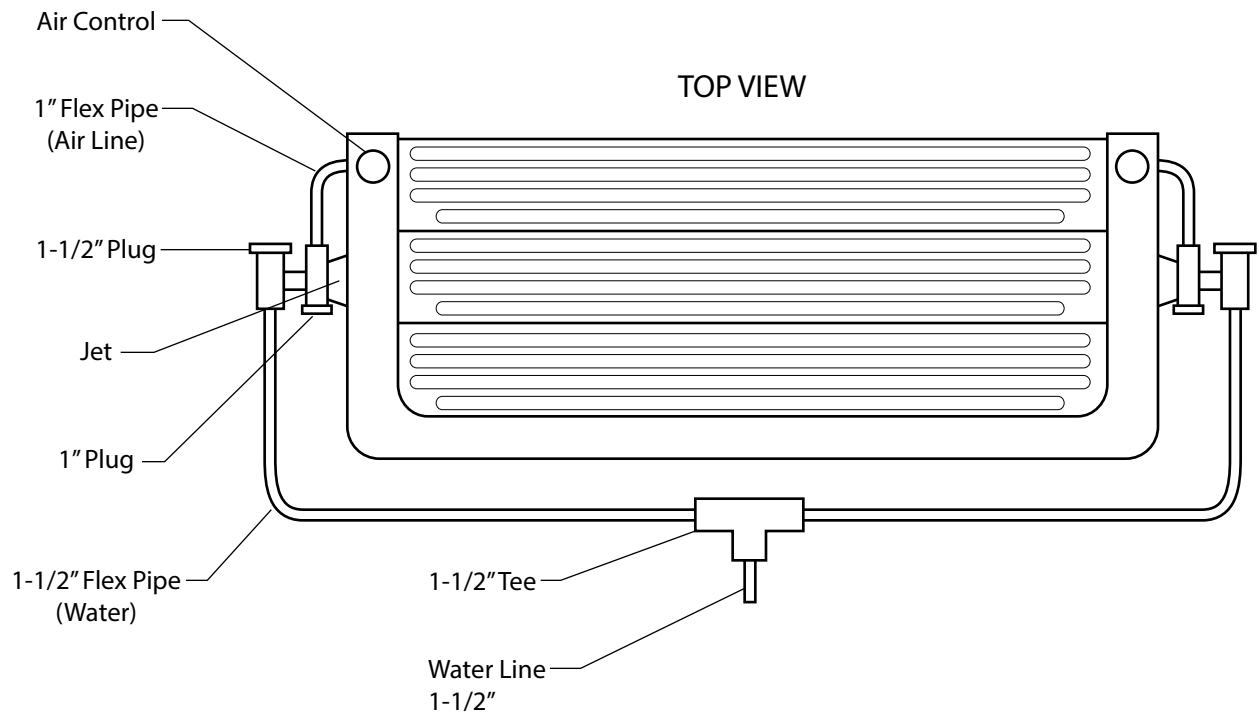

## IMPORTANT:

Install air line so that it angles up from the jet without sag. Any sag at all can cause the line to waterlog and impair the performance considerably.

To install jet, place L-Gasket over threads of wall fitting with the "L" lip away from the wall fitting flange. Place fitting in a 2-5/8" hole on step with flange on inside of pool. Run a bead of silicone around hole on outside of pool then thread body onto fitting. Turn body as desired then finish tightening by using the fitting wrench on the fitting. Clean off any silicone left inside the pool.

## PARTS INCLUDED:

- 1) Jets (2)\*
- 2) Air Controls (2)
- 3) 1-1/2" Plugs (2)
- 4) 1" Plugs (2)
- 5) 1-1/2" Tee (1)
- 6) 3 feet of 1" Flex Pipe (2)
- 7) Winterizing Plugs & Fitting Wrenches (2)
- 8) Glue (1 can)

\* Jet assembly is made up of a Body, Wall Fitting, L-Gasket, and a Jet Internal.  
Install the Jet Internal after plumbing is completed.

