


# Pouralid Channel Drain System

Remove Pouralid trays during construction. Use clear ABS glue to assemble channel drains and couplings together. Establish elevations and secure Pouralid channel drains and add channel drain spacers as shown. Cover channel drain with card board for easy clean up. Pour or set stone to finished edge outside of channel drain and inside of Pouralid trays and clean up channels and match up Pouralid trays.

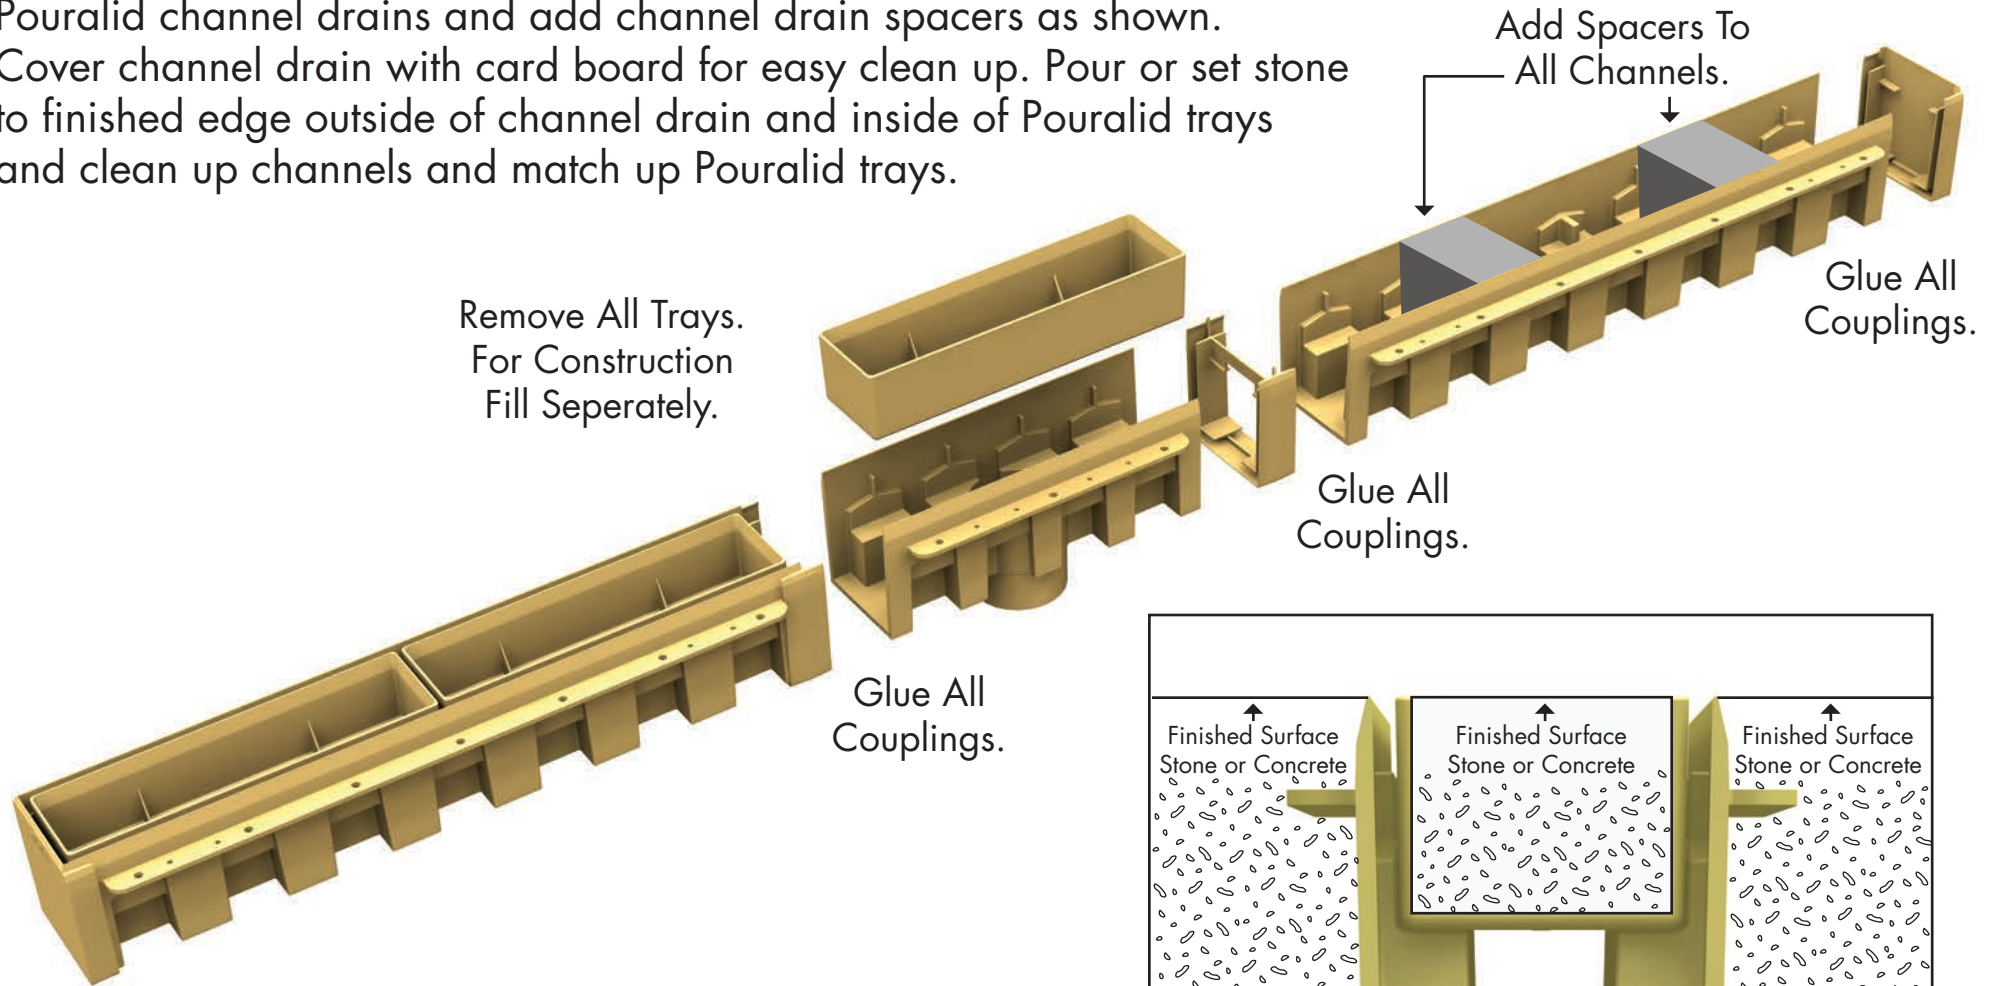


Remove All Trays.  
For Construction  
Fill Separately.

Glue All  
Couplings.

Glue All  
Couplings.

Add Spacers To  
All Channels.

Glue All  
Couplings.

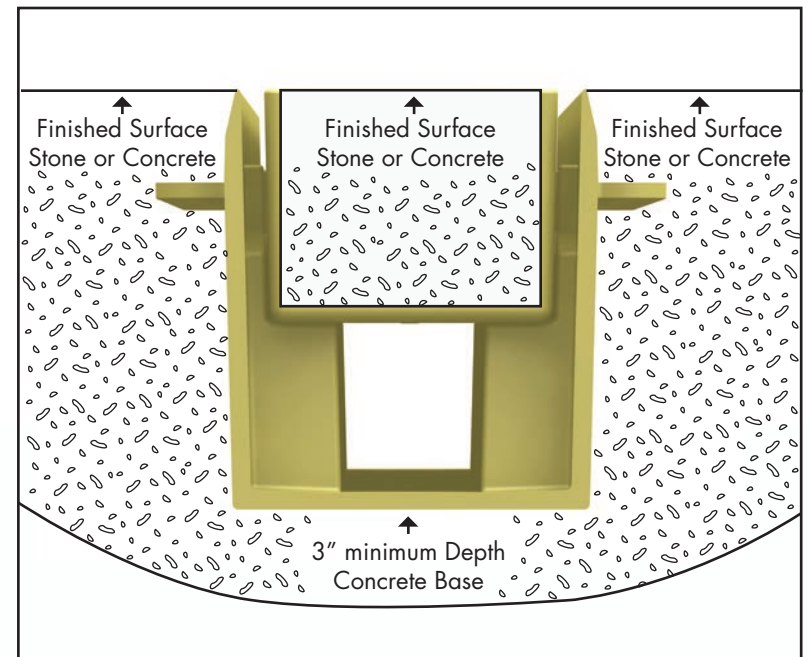

**Product of Stetson Development, Inc.**  
**Pouralid.com**      **1-800-532-8215**