




INTELLICENTER™ AUTOMATION SYSTEM FOR POOL AND SPA

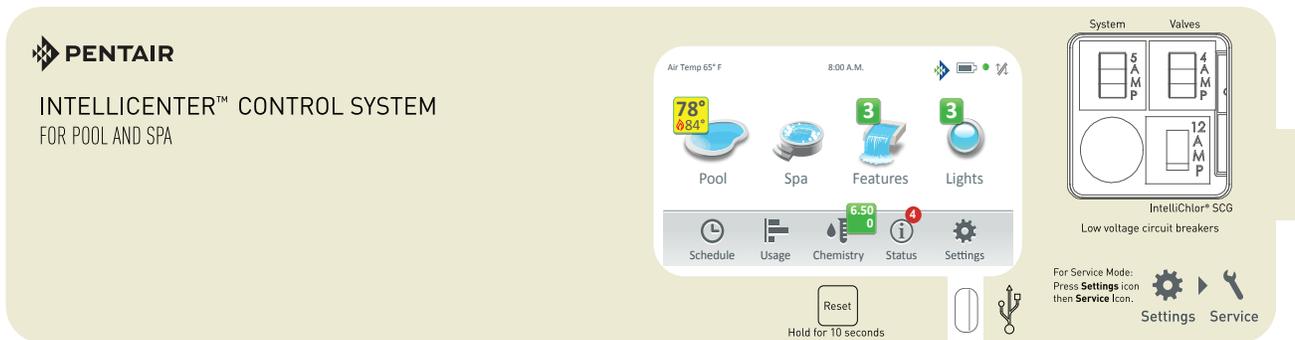

INSTALLATION GUIDE

IMPORTANT SAFETY INSTRUCTIONS
READ AND FOLLOW ALL INSTRUCTIONS
SAVE THESE INSTRUCTIONS



Contents

IMPORTANT WARNING AND SAFETY INSTRUCTIONS	iii
General Installation Information	v
Section 1: IntelliCenter Control System Overview.....	1
Load Center and Power Center Installation Overview	2
Load Center with built-in sub panel	3
Power Center without built-in sub panel	4
Preparing the Load Center and Power Center Enclosure	7
Mounting the Load Center and Power Center.....	8
Load Center Conduit Knockout Locations.....	9
Power Center Conduit Knockout Locations.....	9
Installing Conduit and Conductors to the Enclosure	11
Electrical Wiring High Voltage Connections	12
Main AC Power Connection (Load Center Circuit Breaker Sub panel)	12
Grounding and Bonding Connections	12
Circuit Breakers (Load Center with sub panel)	12
Load Center and Power Center High Voltage Connections	13
GFCI and GFCB Connections	13
Rewiring the IntelliCenter Control System Transformer for 240VAC	13-14
Accessing the IntelliCenter Control System Circuit Boards and Electronics.....	15
Connecting IntelliCenter Control System Load Center Relays	16
Installing Valve Actuators	18-20
Installing IntelliValve Valve Actuator.....	21-25
Installing the Water Temperature Sensor	26
Installing the Ambient Air Temperature Sensor (for freeze protection).....	26
Installing the Solar Temperature Sensor (Optional)	27
Temperature vs. Resistance Data	28
Connecting a Standard Gas Heater to the Load Center	29
Connecting an IntelliFlo Pump to the Load Center	30
Connecting a Pentair UltraTemp Heat Pump to the Load Center.....	31
Connecting a Pentair Hybrid Heat Pump to the Load Center	31
Connecting the IntelliChlor (SCG) Power Cord to the Enclosure	32
Connecting the IntelliChlor (SCG) Communication Cable to a COM Port	33
Connecting a Salt Chlorine Generator to the Load Center or Power Center	34
Wiring Description (Hayward or Jandy Load Center COM Port)	34
Wiring the IntelliChem Controller to the Load Center	34
Wiring the IntelliChlor SCG Transformer to Load Center Filter Pump Relay.....	35
Rewiring the IntelliChlor SCG Transformer for 120VAC	37
Connecting the Wireless Client Bridge Antenna to the Load Center	39
Installing the Wireless Client Bridge Antenna and Power Module	41

Contents (continued)

Section 2: IntelliCenter Control System Start Up.....	42
System Start-Up.....	42
Power on the Load Center and or Power Center	42
Start the Setup Wizard	42
IntelliCenter Control System Menu	52
IntelliCenter Control System Test.....	53
Installing the Outdoor Control Panel in the Load Center or Power Center	55
IntelliCenter Control System Personality Boards	56
IntelliCenter Control System Outdoor Control Panels.....	57
IntelliCenter Control System Load Center Wiring Diagram.....	58
IntelliCenter Control System Power Center Wiring Diagram.....	59
IntelliCenter Control System Wireless Connections Diagram	60
IntelliCenter Control System Personality Cards	61
IntelliCenter Control System Kits	63
IntelliCenter Control System Components.....	64
Load Center or Power Center	64
IntelliCenter Control System Personality Kit Descriptions	64
IntelliCenter Control System Expansion Kits	65
Optional IntelliCenter Control System Expansion Enclosure	65
IntelliCenter Control System Personality Kit Contents	66
Optional IntelliCenter Control System Kit Contents	66
IntelliCenter Control System Replacement Parts List	67
IntelliCenter Control System Accessory Equipment	67
IntelliCenter Control System Configurations and Models	68
Plumbing Requirements.....	69
Equipment Location	70
Glossary.....	72

CUSTOMER SERVICE / TECHNICAL SUPPORT

Customer Service
 8 A.M. to 8 P M — Eastern and Pacific Times
 Phone: (800) 831-7133
 Fax: (800) 284-4151
 Visit www.pentairpool.com

Technical Support
 Sanford, North Carolina (8 A.M. to 8 P M ET)
 Phone: (919) 566-8000
 Fax: (919) 566-8920
 Moorpark, California (8 A.M. to 5 P.M. PT)
 Phone: (805) 553-5000 (Ext. 5591)
 Fax: (805) 553-5515

IMPORTANT WARNING AND SAFETY INSTRUCTIONS

READ AND FOLLOW ALL WARNING AND SAFETY INSTRUCTIONS

⚠ DANGER SERIOUS BODILY INJURY OR DEATH CAN RESULT IF THIS PRODUCT (UNIT) IS NOT INSTALLED AND USED CORRECTLY.

⚠ DANGER INSTALLERS, POOL OPERATORS AND POOL OWNERS MUST READ THESE WARNINGS AND ALL INSTRUCTIONS BEFORE USING THIS PRODUCT. This Guide provides installation and operation instructions for the product. Consult Pentair Water Pool and Spa, Inc. (“Pentair”) with any questions regarding this product.

⚠ WARNING This product is intended for use in swimming pool applications only.

⚠ WARNING Most states and local codes regulate the construction, installation, and operation of public pools and spas, and the construction of residential pools and spas. It is important to comply with these codes, many of which directly regulate the installation and use of this product. Consult your local building and health codes for more information.



This guide provides installation and operation instructions for the IntelliCenter™ Control System. Consult Pentair Water Pool and Spa, Inc. with any questions regarding this equipment (see “Customer Service/Technical Support”, page ii).



Attention Installer: This guide contains important information about the installation, operation and safe usage of this product. Give this guide to the owner and/or operator of this equipment after installation.

⚠ WARNING **Attention User:** This manual contains important information that will help you in operating and maintaining this filter. Please save it for future reference.

Attention User: This Guide contains important information that will help you in operating and maintaining this product. Please retain it for future reference. Read the entire Installation Guide and all related warning labels before installing this product or attempting to use, service or adjust the IntelliCenter™ Control System. Read the operating instructions and warnings for all equipment in the pool circulating system before operating. Failure to follow safety warnings and instructions can result in severe injury, death, or property damage. Call (800) 831-7133 for additional free copies of this Guide or replacement safety labels.

This product is designed and manufactured for safe and reliable service when installed, operated and maintained according to the information and installation codes referred to in this Guide.



This is a safety alert symbol. When you see this symbol in this manual or on the product, look for one of the following signal words; **DANGER, WARNING, CAUTION** and **NOTICE** and comply with the information. Be alert to the potential hazard. Ensure to read and comply with all of the warnings and cautions in this manual.

NOTICE



⚠ DANGER



Risk of Electrical Shock or Electrocution!

- Always disconnect power at the circuit breaker before servicing the load center. Improper installation can create an electrical shock hazard that can result in death or serious injury.

This product must be installed by a licensed or certified electrician or a qualified pool professional in accordance with the current National Electrical Code (NEC), NFPA 70 or the Canadian Electrical Code (CEC), CSA C22.1. All applicable local installation codes and ordinances must also be adhered to. Improper installation will create an electrical hazard which could result in death or serious injury to pool users, installers or others due to electrical shock, and may also cause damage to

property. Always disconnect the power to the pool light at the circuit breaker before servicing the light. Failure to do so could result in death or serious injury to serviceman, pool users or others due to electrical shock.

IMPORTANT WARNING AND SAFETY INSTRUCTIONS

⚠ DANGER



Water temperature in excess of 100° F (37.7° C) may be hazardous to your health. Prolonged immersion in hot water may induce hyperthermia. Hyperthermia occurs when the internal temperature of the body reaches a level several degrees above normal body temperature of 98.6° F (37° C.). Effects of hyperthermia include: (1) Unawareness of impending danger. (2) Failure to perceive heat. (3) Failure to recognize the need to leave the spa. (4) Physical inability to exit the spa. (5) Fetal damage in pregnant women. (6) Unconsciousness resulting in danger of drowning. The use of alcohol, drugs, or medication can greatly increase the risk of fatal hyperthermia in hot tubs and spas.

⚠ WARNING

A pool or spa pump must be installed by a qualified pool and spa service professional in accordance with the current National Electrical Code and all applicable local codes and ordinances. Improper installation may create an electrical hazard which could result in death or serious injury to pool users, installers, or others due to electrical shock, and may also cause damage to property.

⚠ WARNING

The use of alcohol, drugs, or medication can greatly increase the risk of fatal hyperthermia in hot tubs and spas. This product is intended to control heaters with built-in high limit circuits **ONLY**. Failure to do so may cause property damage or personal injury.

⚠ WARNING

Do not use this product to control an automatic pool cover. Swimmers may become entrapped underneath the cover.

⚠ WARNING

For units intended for use in other than single-family dwellings, a clearly labeled emergency switch shall be provided as part of the installation. The switch shall be readily accessible to the occupants and shall be installed at least five (5) feet (1.52 m) away, adjacent to, and within sight of, the unit.

⚠ WARNING

Except for listed spa-side remote controls, install a minimum of five (5) feet (1.52 m) from the inside wall of the pool and spa.

⚠ WARNING

The electrical supply for this product must include a suitably rated switch or circuit breaker to open all ungrounded supply conductors to comply with the current National Electrical Code (NEC), NFPA 70 or the Canadian Electrical Code (CEC), CSA C22.1. All applicable local installation codes and ordinances must also be adhered to. The disconnecting means must be readily accessible to the tub occupant but installed at least five 5ft. (1.52 m), (Canada 3 m (9.75 ft) from the inside wall of the pool.

⚠ WARNING

Use only copper supply conductor's rated for 60C/75C sized based on ampacity to support all loads (refer to NEC tables). Load center input supply to be protected by 150 Amp Maximum, 240 VAC Main Circuit Breaker.

For information about the Virginia Graeme Baker Pool and Spa Safety Act, contact the Consumer Product Safety Commission at (301) 504-7908 or visit www.cpsc.gov.

NOTE: Always turn off all power to the pool pump before installing the cover or working on any suction outlet.

Two Speed Pump Controls Notice (Title 20 Compliance)

Please read the following important Safety Instructions - When using two-speed pumps manufactured on or after January 1, 2008, the pump's default circulation speed **MUST** be set to the **LOWEST SPEED**, with a high speed override capability being for a temporary period not to exceed one normal cycle, or two hours, whichever is less.

IMPORTANT WARNING AND SAFETY INSTRUCTIONS

FCC Standard - 47 CFR Part 15, Subpart C (Section 15.247). This version is limited to chapter 1 to chapter 11 by specified firmware controlled in the U.S.A.

Notice: In order to comply with FCC RF Exposure requirements, a minimum separation distance of 8 in (20 cm) must be maintained between the equipment and all persons during normal operation.

Canada - Industry Canada (IC) - The IntelliCenter™ Control System and IntelliChlor® SCG device complies with RSS210 of Industry Canada. (1999). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

The device complies with industry Canada's License Exempt RSSs. Operation is subject to the following: (1) This device may not cause interference; and (2) This device must accept interference that may cause undesired operation of the device.

Le dispositif est conforme à la licence d'Industrie Canada Exempt CNR. Le fonctionnement est soumis à la suivante. (1) Ce ne doit pas provoquer d'interférences ; et (2) Cet appareil doit accepter les interférences qui peuvent causer un mauvais fonctionnement de l'appareil.

This Class B digital apparatus complies with Canadian ICES-003. Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada. The term "IC" before the certification / registration number only signifies that the Industry Canada technical specifications were met.

Instruction to user - The IntelliCenter Control System and IntelliChlor SCG device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. The IntelliCenter Control System and IntelliChlor SCG product device generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception, which can be determined by switching the device off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

General Installation Information

1. All work must be performed by a licensed electrician, and must conform to all national, state, and local codes.
2. Install to provide drainage of compartment for electrical components.
3. If this system is used to control underwater lighting fixtures, a ground-fault interrupter (GFCI) must be provided for these fixtures. Conductors on the load side of the ground-fault circuit-interrupter shall not occupy conduit, junction boxes or enclosures containing other conductors unless such conductors are also protected by a ground-fault circuit-interrupter. Refer to local codes for details.
4. A terminal bar stamped  is located inside the supply terminal box. To reduce the risk of electric shock, this terminal must be connected to the grounding means provided in the electric supply service panel with a continuous copper wire equivalent in size to the circuit conductors supplying this equipment (no smaller than 12 AWG or 3.3 mm). The bonding lug(s) provided on this unit are intended to connect a minimum of one No. 8 AWG for US installation and two No. 6 AWG for Canadian installations solid copper conductor between this unit and any metal equipment, metal enclosures or electrical equipment, metal water pipe, or conduit within 5 feet (1.5 m) of the unit.
5. The electrical supply for this product must include a suitably rated switch or circuit breaker to open all ungrounded supply conductors to comply with in accordance with the current National Electrical Code (NEC), NFPA 70 or the Canadian Electrical Code (CEC), CSA C22.1. All applicable local installation codes and ordinances must also be adhered to. The disconnecting means must be readily accessible to the tub occupant but installed at least 10 ft. (3.05 m) from the inside wall of the pool.
6. **GAS HEATER:** This automation control system is designed to supply high voltage (120 VAC / 240 VAC) to a gas heater and override the thermostat in the heater's control circuit. This automation control system is intended to control gas heaters with a high temperature limit switch(s) safety circuit.

Pentair Water Pool and Spa IMPORTANT SAFETY INSTRUCTIONS

For Installation of Electrical Controls at Equipment Pad (ON/OFF Switches, Timers, and Automation Control Systems)

WARNING



Install all electrical controls at equipment pad, such as on/off switches, timers, and control systems, etc. to allow the operation (start-up, shut-down, or servicing) of any pump or filter so the user does not place any portion of his/her body over or near the pump strainer lid, filter lid or valve closures. This installation should allow the user enough space to stand clear of the filter and pump during system start-up, shut down or servicing of the system filter.

CAUTION



CAUTION! INSTALL POWER CENTER TO ALLOW USER ENOUGH SPACE TO STAND CLEAR OF PUMP AND FILTER WHEN SERVICING.

WARNING



HAZARDOUS PRESSURE: STAND CLEAR OF PUMP AND FILTER DURING START-UP

Qualifications for Installers and Users

This product must be installed by a qualified pool technician in accordance with all applicable local codes and ordinances. It must be serviced by someone who fully understands its operation. Improper installation or servicing could result in death or serious injury to pool users, installers, servicers, or others and may also cause damage to property.

If you are not familiar with your pool filtering system and/or heater, do NOT attempt to adjust or service without consulting your dealer or a qualified pool technician.

Do not permit children to use this product.

IntelliCenter™ Control System Overview

Welcome! Your Pentair IntelliCenter™ Control System will change the way you view pool and spa controls. This innovation in pool and spa automation offers complete freedom for you while having full automation control over your pool, spa, lights, heater, cleaners and much more. You can now schedule multiple start and stop times to control your lights, heater, spa jets, and filter pumps. The historical usage data feature provides a convenient way to help you conserve energy. Using an iPhone®, iPad® mobile digital device or an Android® wireless device, you can now control your pool and spa from anywhere inside or outside your home. The IntelliCenter Control System is a scalable system that can be used with popular home automation systems.

This manual describes how to install the IntelliCenter Control System and associated equipment.

Features

- 4" x 3" capacitive touch sensitive color touch screen.
- Day Time and Night Time color screen modes
- Multifunction Schedules/Programs
- Adjustable schedule timer for easy system scheduling
- 100 Schedules/Programs
- 32 Feature Circuits: Allow additional speeds on a variable speed pump or an actuator to be assigned without using an existing auxiliary circuit.
- 16 Groups: Assign groups of lighting and AUX circuits to be controlled by a single button.
- Supports up to 16 IntelliFlo® VF and VS Pumps
- Supports up to four Spa Command® and iS10 Spa Side Remotes, and two iS4 and one QuickTouch® II Wireless Spa Side Remotes
- Supports IntelliBrite® LED Color lights
- Valves: Intake/Return plus A and B valve circuits. Expandable up to 10 valves (shared equipment).
- Indoor Control Panel, Wireless Hand-Held Remote, Outdoor Control Panel
- IntelliChem® Controller: Supports one per body.
- IntelliChlor® Salt Chlorine Generator: Supports one per body.
- 40 Auxiliary Circuits (up to three Expansion Enclosures)
- Spa Manual Heat Function
- Support for two Bodies of Water
- Spa Side Control Enable/Disable
- Solar Heating Option/Support
- 16 Heat Pump Support: RS-485 Support, Heat Pump Cooling Support.
- Real Time Clock
- Assignable Circuit Names and Custom Circuit Names
- Special Circuit Types/Function
- Two Speed Pump Support
- English/Metric Support
- Sensor Calibration
- Passcode Protection
- USB port for use with a standard flash drive. Save the system's configuration and upgrade the system's firmware.
- WiFi Wireless Connection: Supports wireless Internet connection for remote system control

Note: See page 63 for IntelliCenter Control System models, part numbers, and replacement kits.

Section 2

IntelliCenter™ Control System Installation

Overview



RISK OF ELECTRICAL SHOCK. BEFORE REMOVING THE HIGH VOLTAGE COVER PANEL FROM THE ENCLOSURE SWITCH OFF THE MAIN POWER AT THE HOME AT THE MAIN CIRCUIT BREAKER BOX.


This manual describes how to install, configure and operate the IntelliCenter Control System. Please take time to read through this manual to familiarize yourself with the IntelliCenter Control System.

Please read the following guidelines carefully:

- The IntelliCenter Control System Load Center and/or Power Center must be installed at the equipment pad.
- AC power for the Load Center must be provided from the main circuit breaker panel located at the house.
- All electrical equipment, except for UL Listed spa-side remote switches, must be installed no less than five (5) feet (1.5 m), (Canada, 3 m (9.75 ft) from pool and/or spa, and comply with all national, state, and local codes (UL Listed spa-side remote switches may be installed at near waterline).
- Install the Load Center no less than five (5) feet (1.5 m) from pool, spa, and hot tub. Additionally, the installation shall allow the user enough space to stand clear of the filter and pump during system start-up, as explained on page vi.
- The TYPE 3R “Rainproof” enclosure can be mounted outside or inside of a pool equipment shed or other enclosure.
- Before choosing the final location for the enclosure, consider the length of all of the conductors that will have be connected to the enclosure. Make sure to consider cable lengths for the sensors to the Load Center location. The air temperature sensor cable is three (3) feet (91.44 cm) long and the water temperature sensor cable is 25 feet (7.62 m) long.
- Mount the Load Center on a flat vertical surface so the conduit knockouts are located at the bottom of the enclosure. Upper and lower brackets are provided to mount the enclosure.
- DO NOT mount the enclosure horizontally. Water can enter the conduit knockouts and cause damage to the system and an electrical shock hazard. Install with conduit knockouts down.
- Consider the Load Center location when routing conduit carrying the AC power to the Load Center, and the conduit that will be run to the high voltage equipment.
- Install the Load Center so that drainage is provided for all electrical components.
- Motors should be listed for pool and spa applications and have built-in thermal protection.
- Allow at least 5 ft (1.5 m) of unobstructed access to the front of the Load Center for the owner or service personnel.
- The Load Center provides grounding screw terminals for grounding all equipment. All equipment including the Load Center enclosure must be bonded to earth ground.

IntelliCenter™ Control System Load Center (with built-in sub panel)


The IntelliCenter Control System load center should be installed at the equipment pad. The AC power to the load center is provided from the main-panel circuit breaker located at the house.

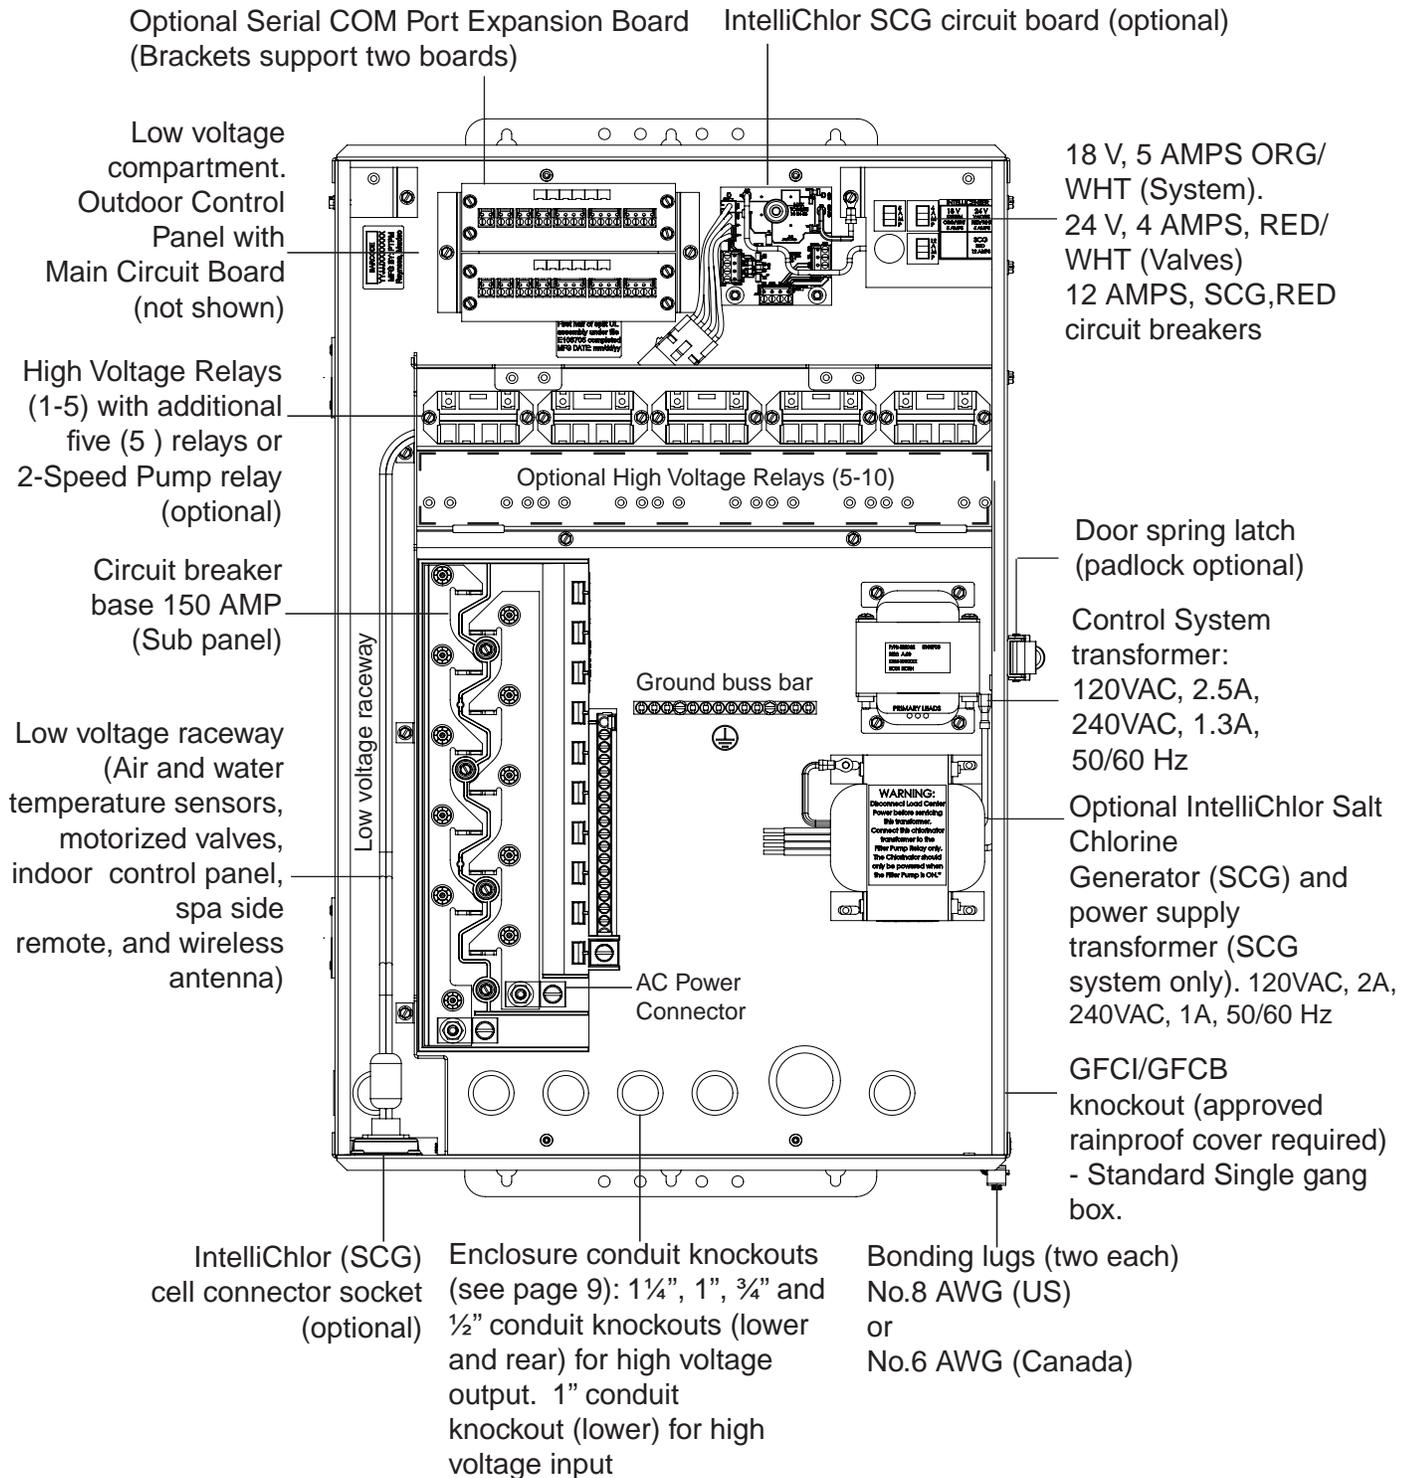

IntelliCenter Control System Load Center
(26" H x 17" W x 5¼" D)


IntelliCenter™ Control System Load Center (without built-in sub panel)

The IntelliCenter Control System Power Center (without sub panel) must be installed at the equipment pad. AC power to the Power Center is provided from the electrical circuit breaker panel (sub panel) installed at the equipment pad. The Power Center should be installed next to the sub panel.

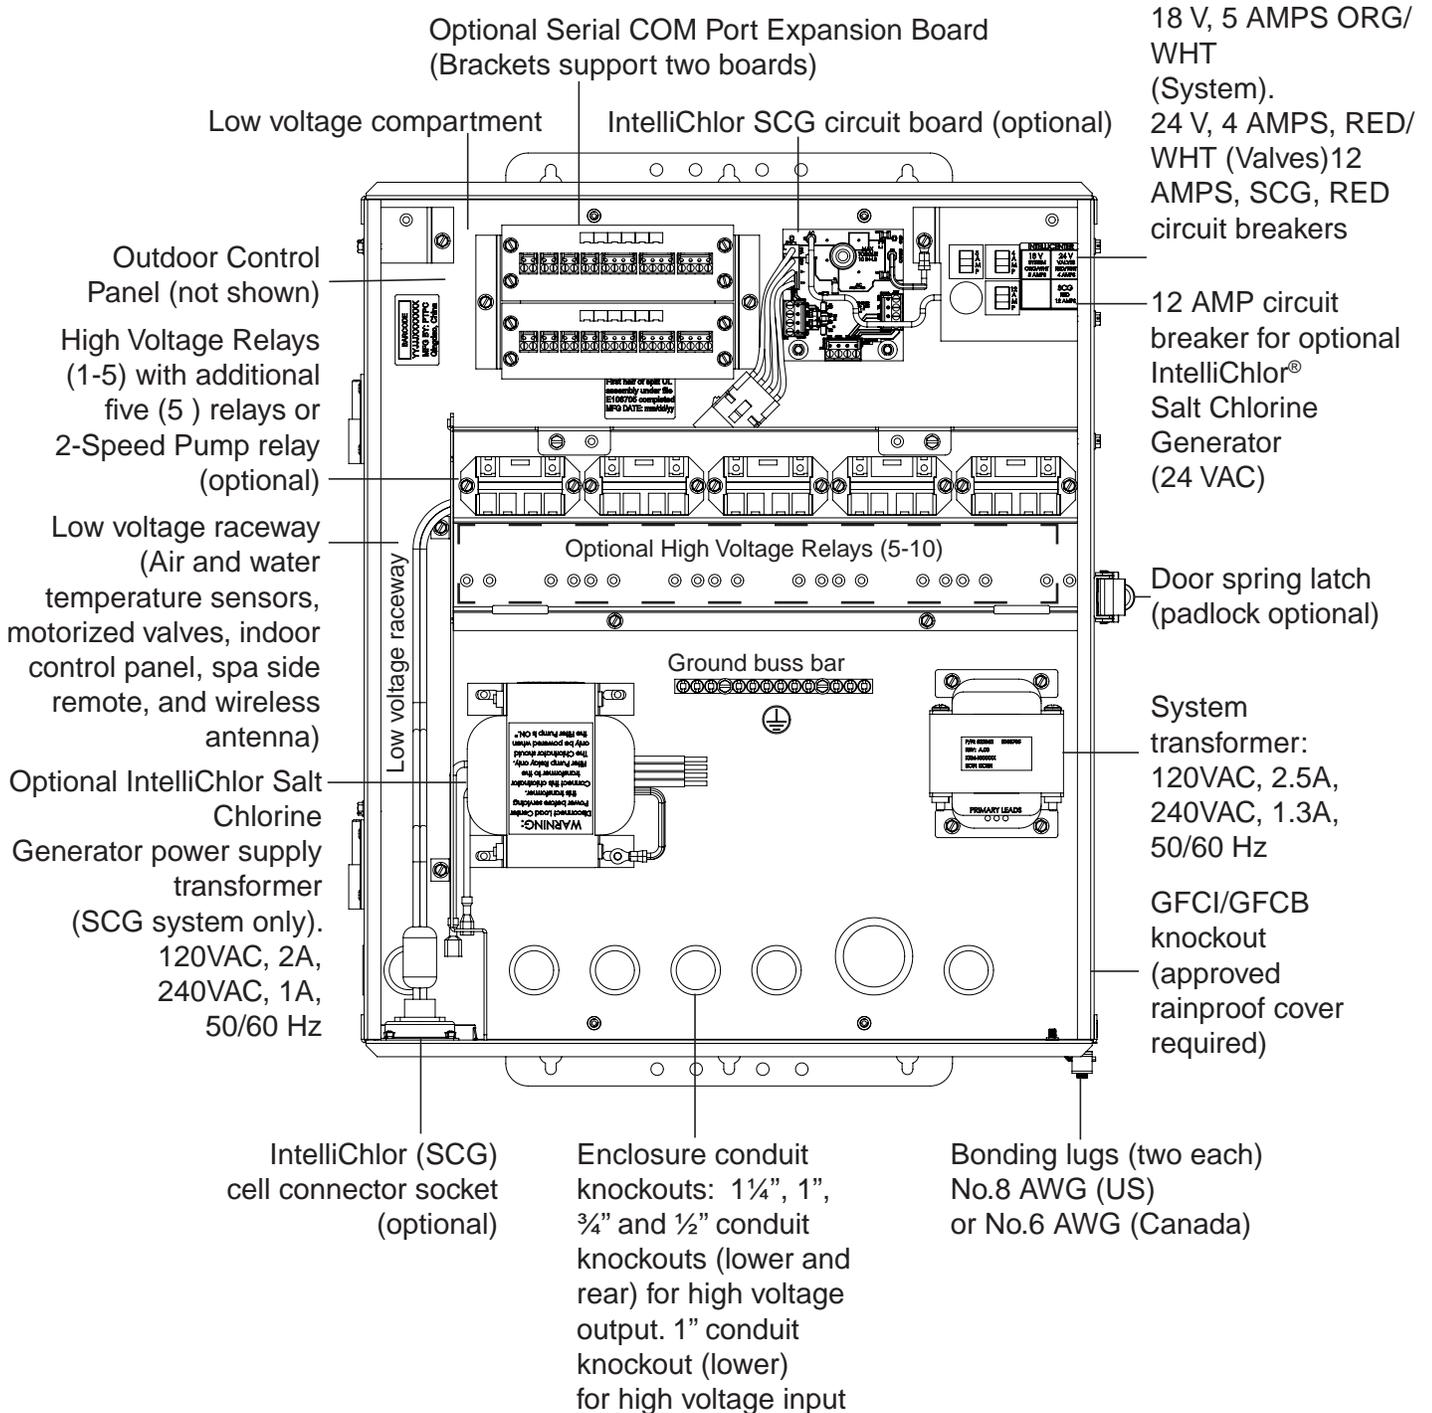


IntelliCenter Control System Power Center (20" H x 17" W x 5 1/4" D)
(Front view with door and high voltage cover panel removed)

IntelliCenter™ Control System Power Center (without sub panel) continued

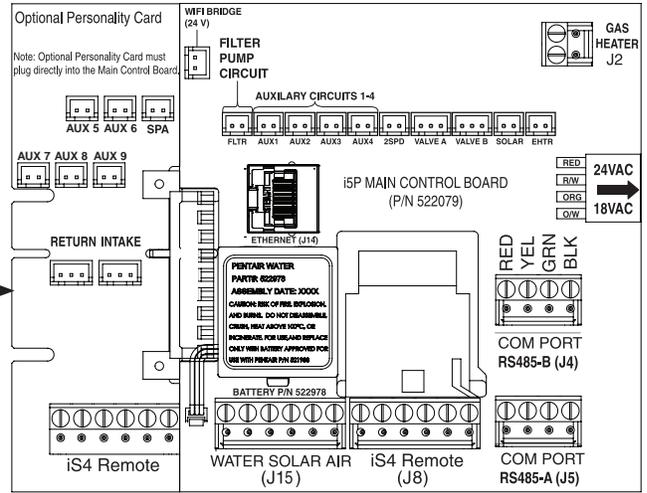

IntelliCenter Control System Main Circuit Board
(iS5 with optional Expansion Card shown)

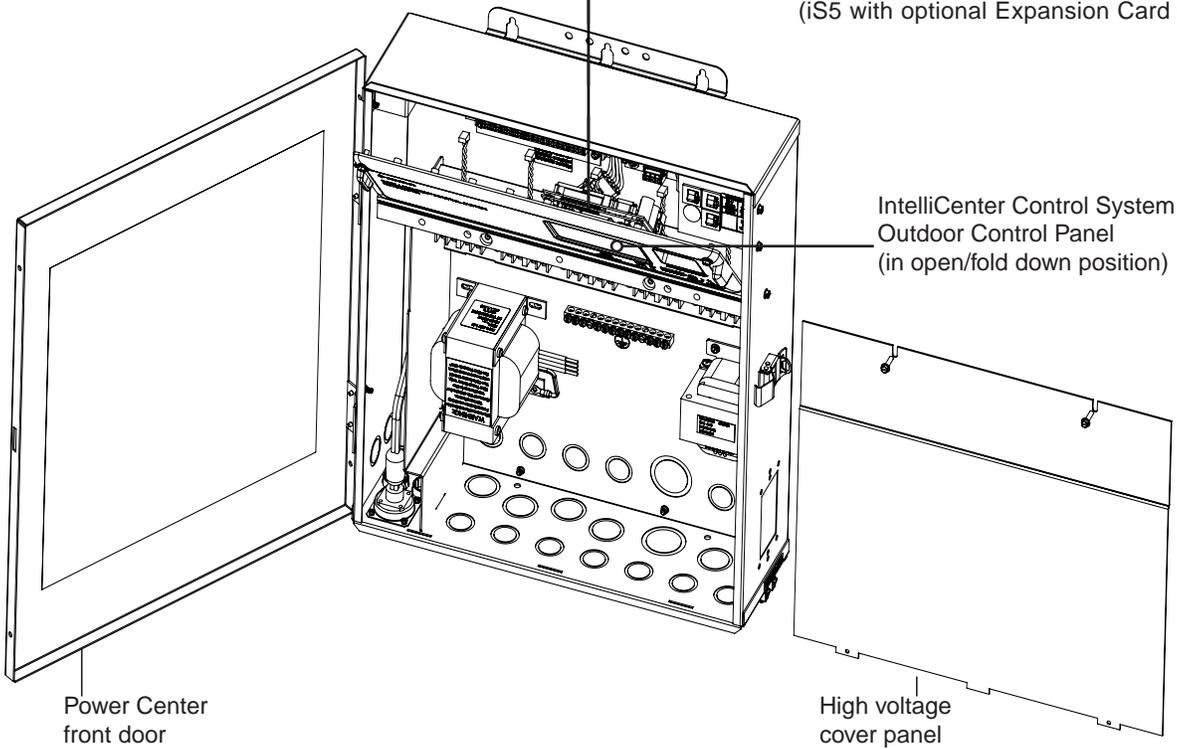

IntelliCenter Control System Power Center


Preparing the IntelliCenter™ Load Center and Power Center Enclosure

⚠ WARNING BEFORE INSTALLING THE LOAD CENTER AND POWER CENTER, ALWAYS SWITCH OFF THE MAIN POWER into the home at the main circuit breaker box.

Before mounting the Load Center, first remove the front door and the high voltage cover panel to access the enclosure conduit knockouts and low voltage raceway (see page 9 and 10).

To remove the Load Center or Power Center high voltage cover panel:

1. Unpack the Load Center from the shipping carton.
2. Unlatch the front door spring latch and open the front door.
3. Remove the two retaining screws from the High Voltage Cover Panel. Remove the panel from the enclosure.
4. Loosen the two retaining screws securing from the top edge of the Outdoor Control Panel. Fold down the Outdoor Control Panel to access the circuit board sockets connectors for the electrical connections.
5. For new installation, proceed with:
 - **Mounting the Load Center / Power Center**, page 7-8
 - **Load Center / Power Center Conduit Knockout Locations**, page 9-11
 - **Installing Conduit and Conductors to the Enclosure**, page 11
 - **Electrical Wiring and High Voltage Load Center Connections**, page 12-14
 - **Electrical Wiring and High Voltage Connections**, page 12-14
 - **Accessing the Control Circuit Boards and Electronics**, page 15
 - **Connecting Relay Valve Actuators, Sensors, Gas Heater, Pumps, Sanitizers**, page 16
6. After electrical connections have been completed; close the Outdoor Control Panel and tighten the two retaining screws. Reinstall the High Voltage Panel: Insert the panel's three tabs into the lower slots on the enclosure. Secure the panel with the two (2) retaining screws. Close the front door and secure with the latch.

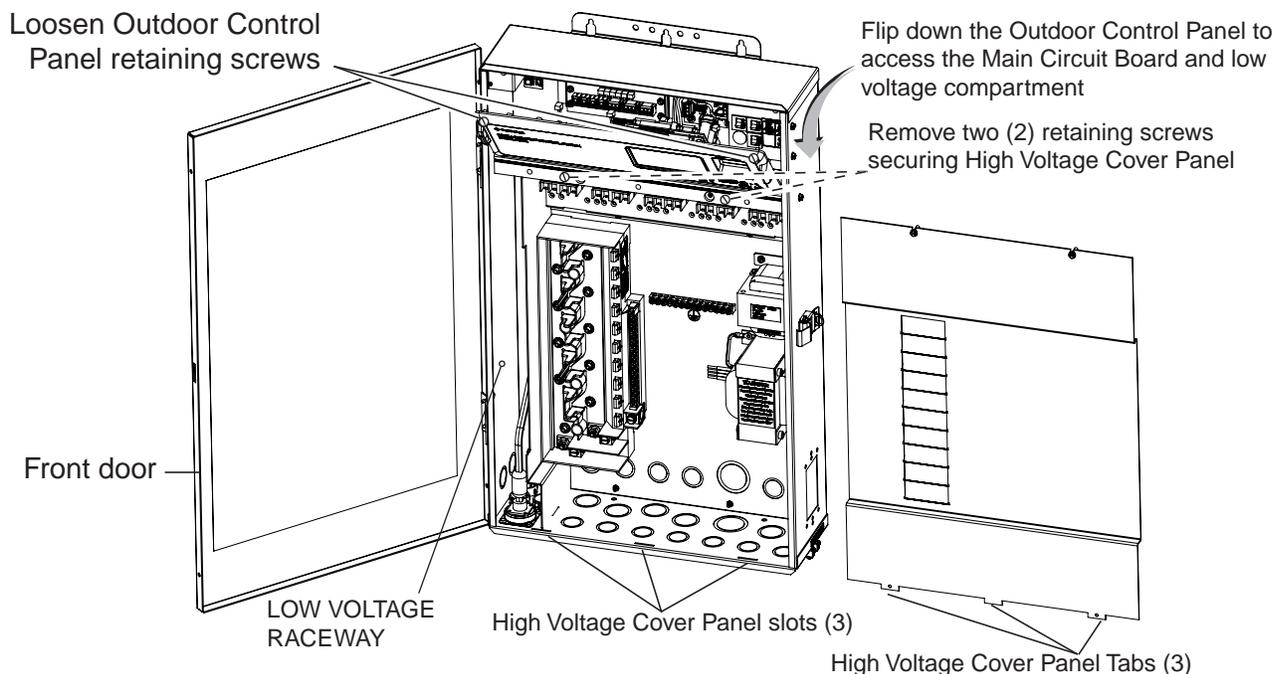


IntelliCenter Control System Load Center (Front View)

Mounting the IntelliCenter™ Control System Load Center and Power Center

Mount the IntelliCenter Control System Load Center or Power Center on a flat vertical surface, such as a wall or post at eye level, at least 5 ft. (1.5 m), (Canada 3 m (9.75 ft)) from the pool, spa or hot tub.

To mount the Load Center or Power Center:

1. Position the enclosure against a vertical flat surface. If wall anchors are being used, support the enclosure in position (horizontally level and square) against the surface and mark the bracket hole pattern on the wall.
2. Secure the enclosure with three (3) screws in the top and lower mounting bracket holes. If using wall anchors, drill and set the anchors and secure the enclosure with screws.

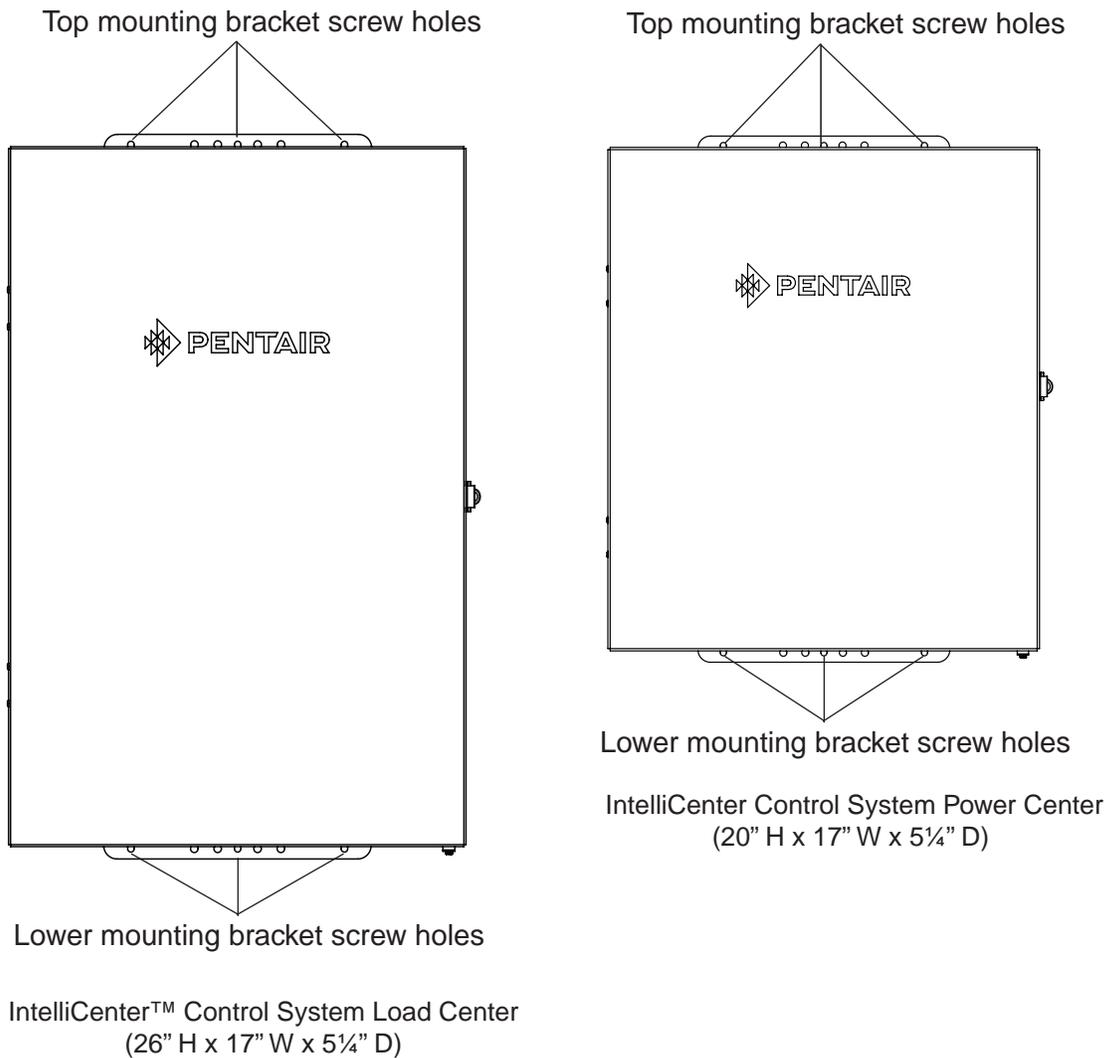


Load Center Conduit Knockout Locations

Before installing electrical conduits and connecting AC power to the IntelliCenter™ Control System Load Center or Power Center enclosure, read the following recommended guidelines:

- Determine the number of low and high voltage circuits being used in the Load Center or Power Center. The conduit size and runs needed based on the conductor size, and the number of conductors within the conduit. The enclosure conduit knockout sizes are 1¼", 1", ¾" and ½".
- Enclosure conduit knockouts for AC power are located on the sides, bottom and back of the enclosure. Conduit knockout sizes for AC power are: 1¼", 1", ½" and ¾". It is recommended to use 1¼" x 1" conduit for the main AC power conductors.
- The Load Center and Power Center enclosure must be located a minimum of 5 ft. (1.5 m), (Canada 3 m (9.75 ft)) from the inside wall of pool or spa.


Remove the enclosure conduit knockouts as needed:

- Low voltage raceway has two ½" x ¾" conduit knockouts located on the left side and rear of the enclosure.
- High voltage compartment has twelve ½" x ¾", five ¾" x 1" and two 1¼" x 1" conduit knockouts located on the bottom of the enclosure.

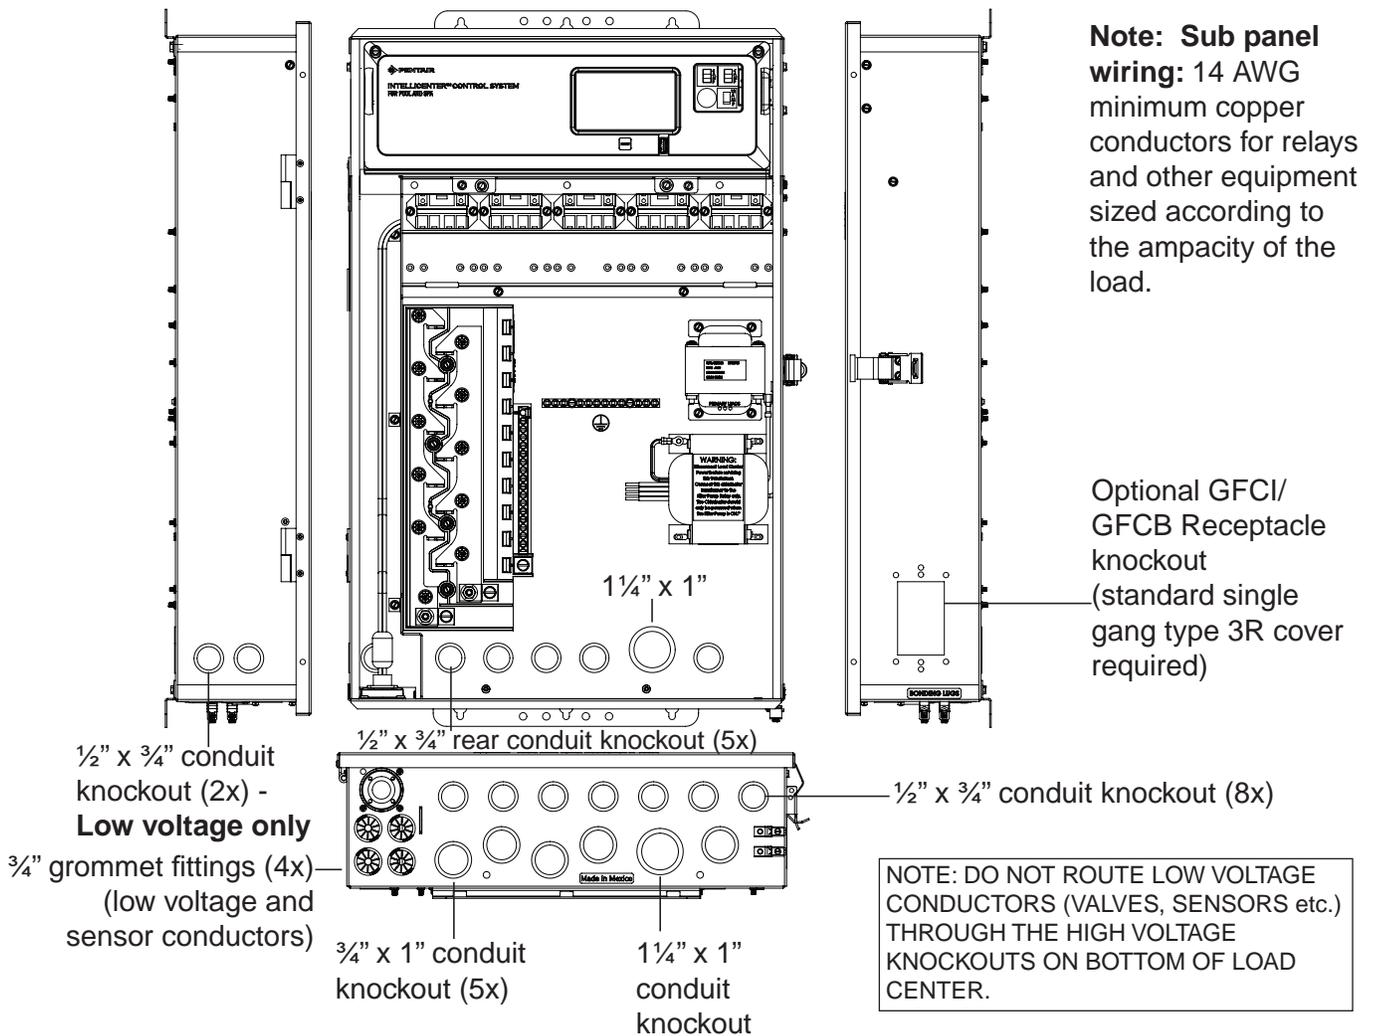

IntelliCenter Control System Load Center (Lower, side and back panel knockout locations)

Power Center Conduit Knockout Locations

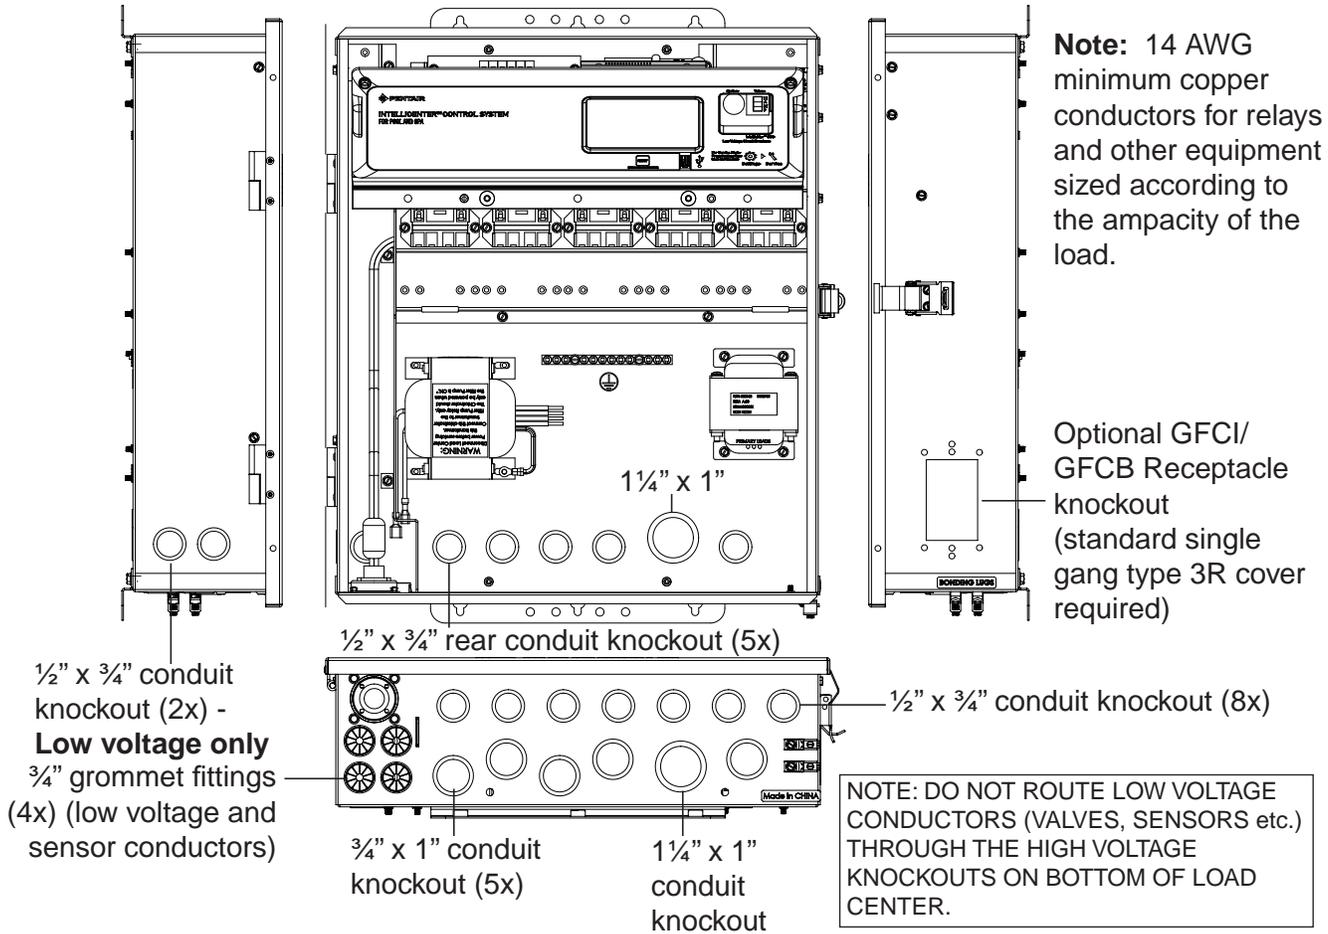

IntelliCenter™ Control System Power Center (Lower, side and back panel knockout locations)

Installing Conduit and Conductors to the Enclosure

Before installing electrical conduit to the enclosure, read the following recommended guidelines:

NOTE: All electrical installation, including electrical wiring methods and materials used to complete the electrical installation of the IntelliCenter Control System **MUST BE PERFORMED BY A SERVICE PROFESSIONAL AND/OR UNDER DIRECT SUPERVISION OF A QUALIFIED ELECTRICIAN** in accordance with the National Electrical Code or the Canadian Electric Code, as well as any local electrical codes in effect at the time of installation. **Refer to NEC 680 (b) or CEC 687-060, 062, and 066 for further details.**

- Determine the number of low and high voltage circuits being used in the IntelliCenter™ Control System Load Center or Power Center. The conduit length is based on the conductor size, and the number of conductors within the conduit. **The number of pieces of equipment to be controlled will dictate the size of the conduit. DO NOT RUN HIGH VOLTAGE AND LOW VOLTAGE CONDUCTORS IN THE SAME CONDUIT.**
- Use 14 AWG minimum to 6 AWG maximum 140°/158° F (60°/70° C) or better copper conductors for relay circuits depending on the load requirement. Be sure to follow all NEC regulation safety codes for the number and size of conductors that can be installed in various sizes of conduit.
- Supply conductor must be sized to support all loads. The maximum supply current must NOT exceed 150 AMP at 120 VAC/240 VAC.
- Supply circuit must be protected by suitable breaker rated no higher than 150 AMP. If one relay is used for more than one device, verify that the total current draw (all equipment) does not exceed the current rating of the circuit.
- The IntelliCenter Control System automation control circuit board requires 120 VAC, 3A power to operate the control logic circuits and the optional IntelliChlor® Salt Chlorine generator. This power should be connected to one of the circuit breakers in the sub panel.
- To avoid obstruction into the Load Center or Power Center, when using electrical conduit complete the installation of the conduit before concrete is poured. Also, underground conduit should be positioned in well compacted soil. Ensure that all conduit joints are well sealed and watertight.

Electrical Wiring and High Voltage Connections

	<p>TO AVOID AN ELECTRICAL HAZARD - Do not connect the power source conductors to the Load Center circuit breaker until all electrical connections for all loads (heaters, pumps, motorized valves, and lights etc.) have been completed.</p>
---	---

Main AC Power Connection (Load Center Circuit Breaker Sub panel)

The IntelliCenter™ Control System Load Center with circuit breaker sub panel is rated for 150 AMP maximum Single Phase (3 conductor). Run properly rated conductors (L1,L2, N, and GROUND) from the primary house electrical panel to the main AC power connections on the Load Center circuit breaker base. The connection at the main house panel should be to a 240 VAC circuit breaker rated at 150 AMP maximum.

Grounding and Bonding Connections

Connect a ground conductor from the primary house electrical panel to the Load Center or Power Center GROUND BUS BAR (see page 3 and 5). Also ground each piece of high voltage (120 VAC or 240VAC) equipment that is connected to the Load Center or Power Center relays or circuit breakers. Also connect the Load Center and Power Center to the pool bonding system using 8 AWG (6 AWG for Canada) conductor. There are two (2) GROUND LUGS provides on the bottom of the Load Center and Power Center.

Circuit Breakers (Load Center with sub panel)

Circuit Breakers are to be supplied and installed by the site installer. For recommended circuit breaker types, refer to the circuit breaker chart on the inside front door of the Load Center or Power Center. Be sure to follow all manufacturer's circuit breaker rating requirements. Some pool equipment require connection to ground fault circuit breakers (GFCI). Check local and NEC (CEC) codes for these requirements.

Note: For recommended field conductor gauge usage, refer to conductor size listed on the circuit breaker label.

Note: Wiring to Load Center: 14 AWG minimum copper conductors for relays and other equipment sized according to the ampacity of the load.

Load Center and Power Center High Voltage Connections



TO AVOID AN ELECTRICAL HAZARD - Do not connect the power source conductors to the Load Center circuit breaker until all electrical connections for all loads (heaters, pumps, motorized valves, and lights etc.) have been completed.

GFCI and GFCB Connections

- Use the rectangular knockout on the right side of the Load Center and Power Center enclosure to mount an approved GFCI or GFCB with rainproof type 3R cover (supplied by installer) for direct connection of underwater pool and spa lights.
- Use the one of the three low voltage raceway 3/4" holes located on the underside of the enclosure for the temperature sensor conductors (see page 3 and 5).

NOTICE: For the AC supply conductor into the Load Center and Power Center from the main circuit breaker at the house, use three conductors, one each for red, black, and white (or red, red and black for 240 VAC). The maximum load is 150 AMP at 120 VAC/240 VAC 60 Hz/50 Hz. These conductors should be secured to supply side of circuit breaker base. For the main AC power conduit, it is recommended to use the 1¼" x 1" conduit knockout located directly under the enclosure circuit breaker (see page 3 and 5).

IntelliCenter™ Control System Load Center and Power Center Wiring Diagram

- For IntelliCenter Control System wiring schematic, see page 60 and 61 (and inside front door of Load Center and Power Center)
- For re-wiring the IntelliChlor® (SCG) transformer for 120V see page 37.

Rewiring the IntelliCenter Control System Transformer for 240VAC

The IntelliCenter™ Control System Load Center/Power Center system transformer can be wired for 120 VAC at 2AMP 50/60 Hz (factory installed) or 240 VAC at 1AMP 50/60 Hz. The system transformer is pre-wired at the factory for 120 VAC service.

To rewire the system transformer for 240 VAC (see wiring diagram on next page):





BEFORE REMOVING THE HIGH VOLTAGE COVER PANEL FROM THE LOAD CENTER OR POWER CENTER ENCLOSURE switch OFF the power at the house main circuit breaker box.


1. SWITCH OFF AC POWER the Load Center and/or Power Center at the main circuit breakers.
2. Unlatch the front door latch and open the front door. Remove the two (2) retaining screws securing the high voltage cover panel. Remove the HIGH VOLTAGE COVER PANEL from the enclosure.
3. Rewire the system transformer for 240 VAC as shown in the wiring diagram below.
4. Reinstall the High Voltage Panel: Insert the panel's three tabs into the lower slots on the enclosure. Secure the panel with the two (2) retaining screws.
5. Close the front door and secure with the latch.

Rewiring the System Transformer for 240 VAC (Continued)

Loosen Outdoor Control Panel retaining screws

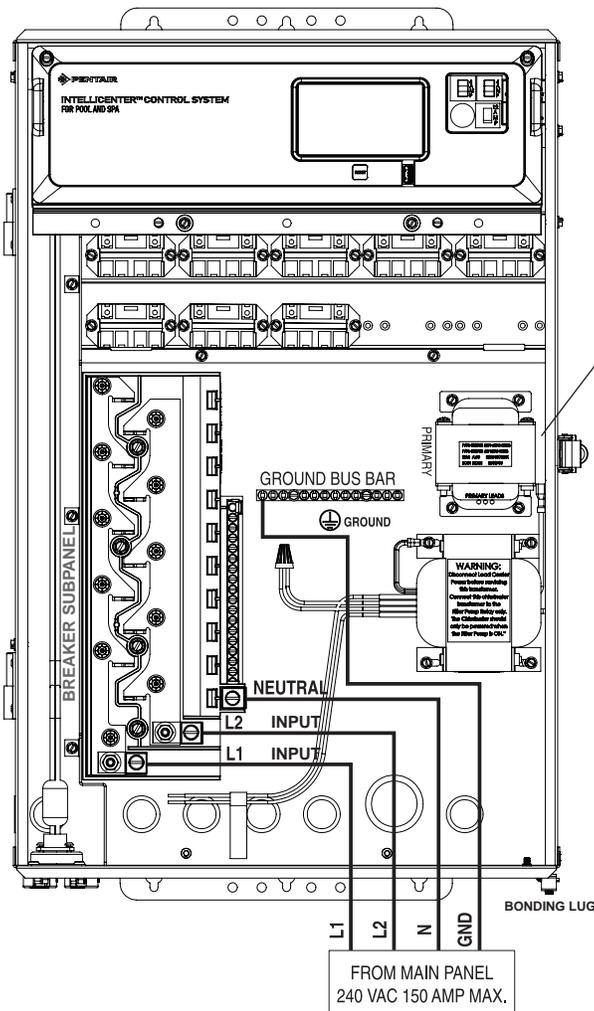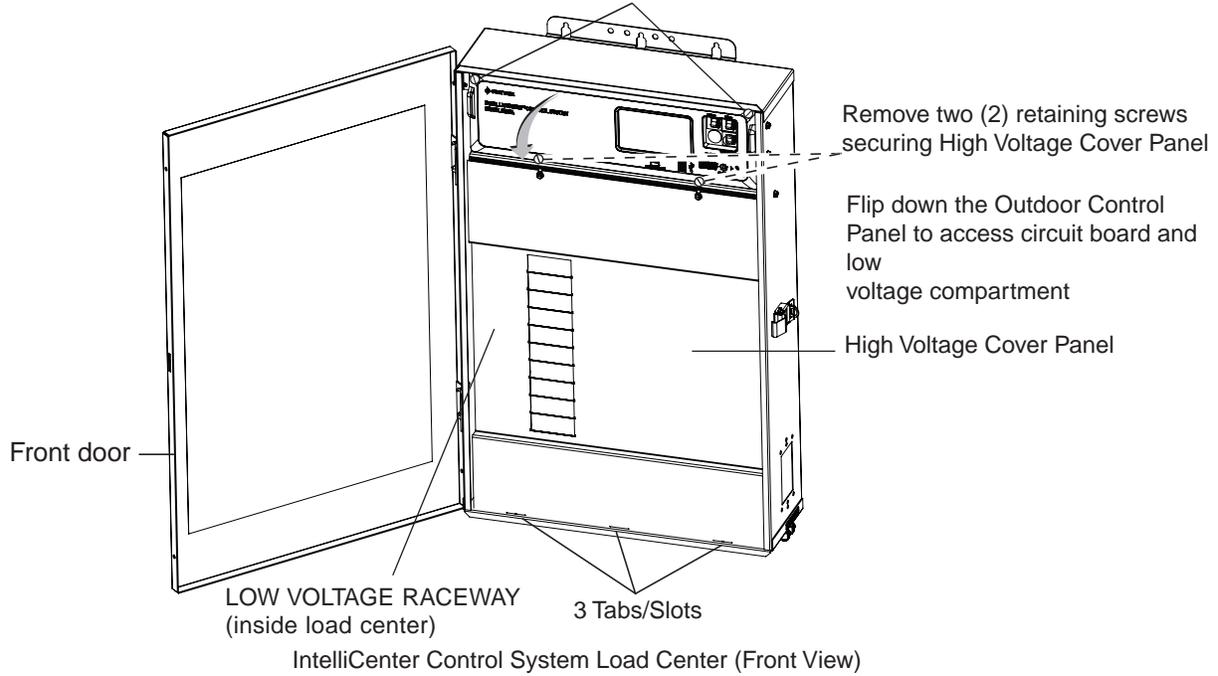

Control System transformer:
120VAC, 2.5A,
240VAC, 1.3A,
50/60 Hz

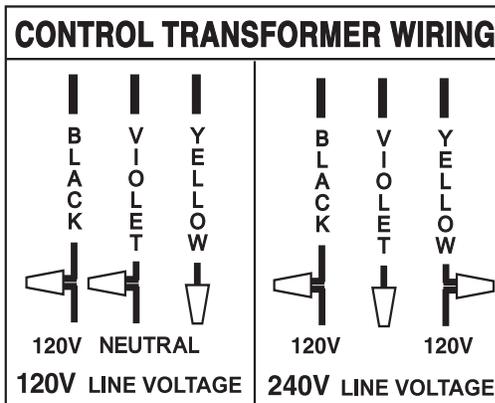


IntelliCenter™ Control System Load Center Wiring Instructions

Accessing the IntelliCenter™ Control System Circuit Boards and Electronics

The IntelliCenter Control System Outdoor Control Panel is mounted on the front of the Load center and Power Center. The system circuit boards and electronics are located behind the Outdoor Control Panel. The circuit boards provides socket connectors for the auxiliary relays, valve actuators, sensors, gas heater and related equipment. To access the circuit boards, fold down the Outdoor Control Panel.

To access the main circuit board connectors:

1. Unlatch the front door spring latch and open the front door.
2. Remove the two retaining screws from the High Voltage Cover Panel. Remove the panel from the enclosure.
3. Loosen the two retaining screws securing from the top edge of the Outdoor Control Panel. Fold down the Outdoor Control Panel to access the circuit board sockets connectors for the electrical connections.
4. Install the following:
 - **IntelliCenter Control System Load Center Relays**, page 16
 - **Installing Valve Actuators**, page 18
 - **IntelliValve® Valve Actuator**, page 21
 - **Temperature Sensors**, page 26-28
 - **Standard Gas Heater**, page 29
 - **Connecting an IntelliFlo® Pump to the Load Center**, page 30
 - **Pump and Heat Pump (UltraTemp®/Hybrid Heat Pump)**, page 31
 - **Connecting IntelliChlor® SCG, IntelliChem® Controller**, page 32-38
5. After electrical connections have be completed. close the Outdoor Control Panel and tighten the two retaining screws. Reinstall the High Voltage Panel: Insert the panel's three tabs into the lower slots on the enclosure. Secure the panel with the two (2) retaining screws. Close the front door and secure with the latch.

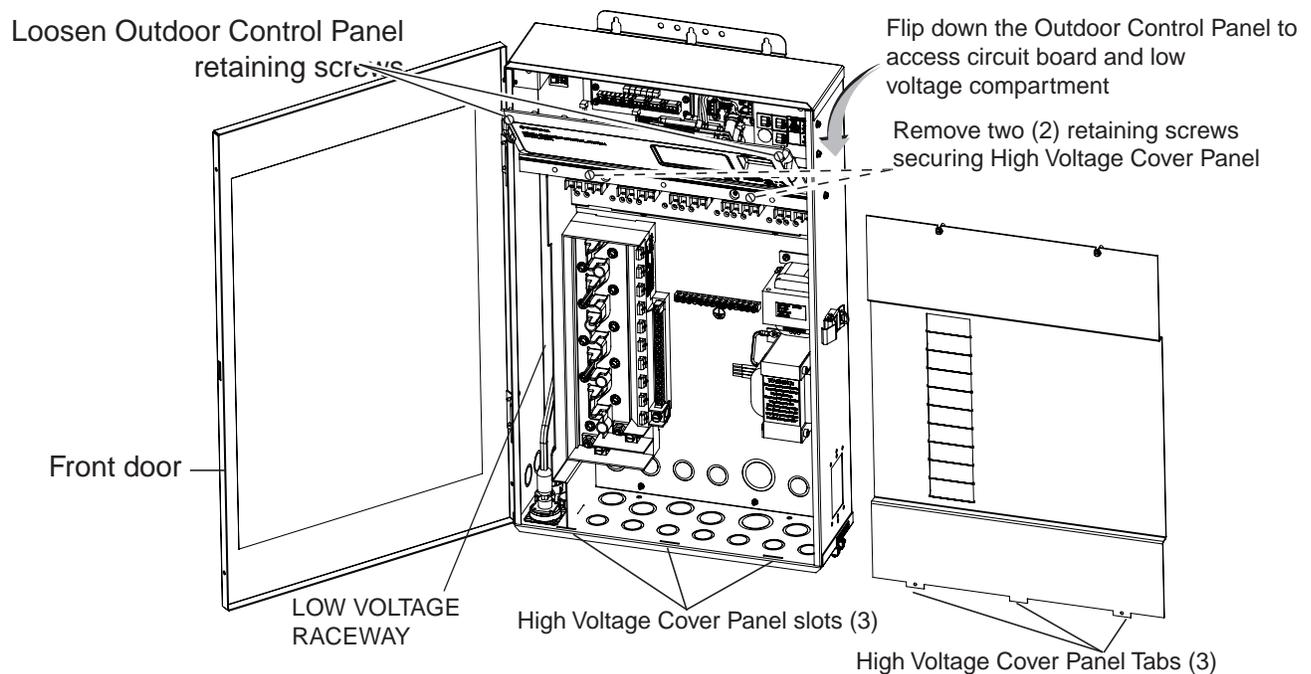

IntelliCenter Control System Load Center (Front view)
(High Voltage Cover Panel removed)

Connecting IntelliCenter™ Control System Load Center Relays

For the IntelliCenter Control System (model i5PS) there are five high voltage relays pre-installed in the Load Center (as shown on page 17); four auxiliary circuits (AUX) plus one relay for the filter pump.


- **Shared Equipment: Pool and spa combinations with shared filtration system** – The Personality Kit models are:
 - i5PS (P/N 521912) – Four auxiliary circuits plus filter pump operation. Five relays are included in the Load Center.
 - i8PS (P/N 521913) – Seven auxiliary circuits plus filter pump operation. Three relays are included in the personality kit and five in the Load Center.
 - i10PS (P/N 521914) – Nine auxiliary circuits plus filter pump operation. Five relays are included in the personality kit and five in the Load Center.
- **Dual Equipment: Pool and Spa with Dual Sets of Equipment** – The IntelliCenter control system i10D (P/N 521915) is designed to operate two sets of pool equipment. Each set of a equipment (Pool or Spa) can control one temperature setting. This IntelliCenter control system Personality Kit can control up to 10 pumps and/or lighting circuits, plus two heater circuits. The Personality Kit includes, eight auxiliary circuits plus two filter pumps. Five relays are included in the personality kit and five in the Load Center.
- **Single Equipment: Pool Only or Spa Only** – Single Equipment: Pool Only or Spa Only – This system is designed to operate a single body of water (LO-TEMP and HI-TEMP). The Personality Kit models are:
 - i5P (P/N 521909) – Four auxiliary circuits plus filter pump operation. Five relays are included in the Load Center.
 - i8P (P/N 521910) – Seven auxiliary circuits plus filter pump operation. Three relays are included in the personality kit and five in the Load Center.
 - i10D (P/N 521911) – Nine auxiliary circuits plus filter pump operation. Five relays are included in the personality kit and five in the Load Center.

To connect the pre-installed relay cable plugs to the IntelliCenter Control System circuit board AUX plugs:

- Route the power relay cable plugs up into the Low Voltage Compartment (as shown on page 17) to the circuit board. Insert the plug into the two-pin sockets, beginning with **FLTR PUMP**, then **AUX1**, **AUX2**, **AUX3**, and **AUX4**. For the two-pin socket locations, refer to the diagram shown below. For IntelliCenter control System system wiring diagrams, see page 59-59.

Note: **For optional relays**; insert each optional auxiliary relay plug into the one of the two-pin sockets, beginning with **AUX5**, **AUX6**, **AUX7**, **AUX8** and **AUX 9**.

Connecting IntelliCenter™ Control System Load Center Relays (Continued)

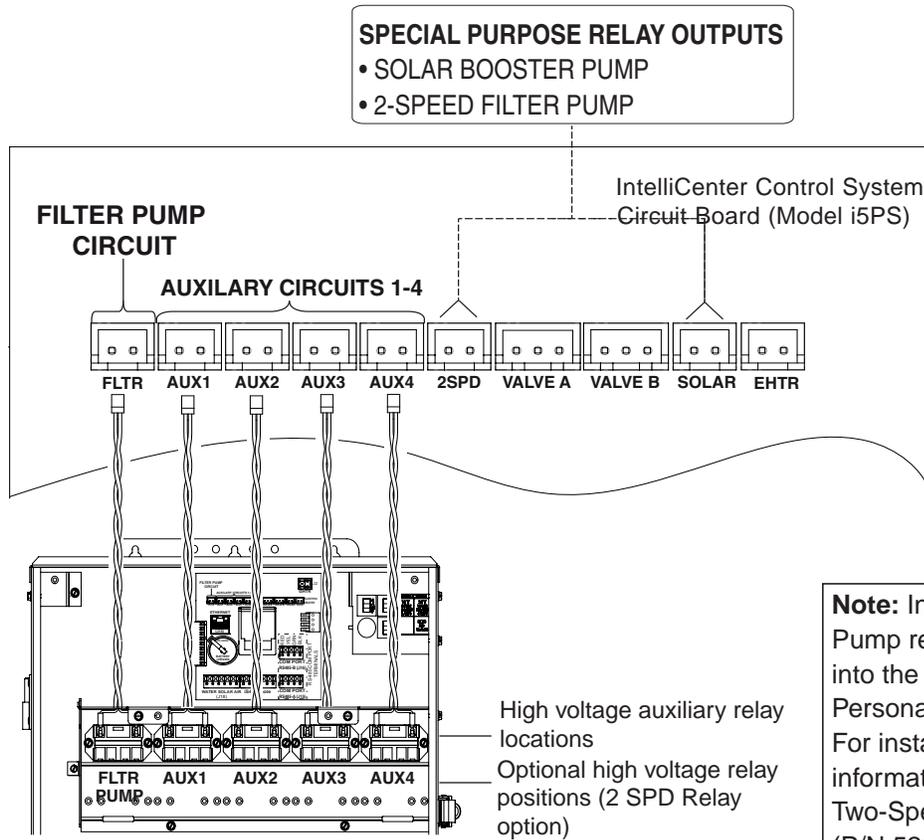


IntelliCenter Control System Load Center relays AUX circuits connections (i5PS model)

Installing Valve Actuators

The IntelliCenter™ Control System can control multiple valve actuators. Two of the valve outputs are dedicated to the pool/spa intake (INTAKE) and return (RETURN) valves. Valve A or Valve B actuators are for general purpose use (solar, water-feature, in-floor cleaner, etc.). For IntelliCenter Control System shared equipment systems there are two motorized valve actuators (CVA-24T, P/N 263045) provided in the kit.

To install the valve actuator (two-way valve example shown):

1. Remove the valve knob, handle and the four screws, from the valve cover (indicated with arrows).
2. Align the splines of the actuator shaft over the shaft of the valve.
3. If the actuator is not aligned with the mounting holes on the valve cover, rotate the actuator (while still attached to the valve) until the actuator is positioned correctly over the valve.
4. Secure the actuator with the screws provided. Only use self-tapping screws when required.
5. Mount the valve handle and knob onto the actuator.

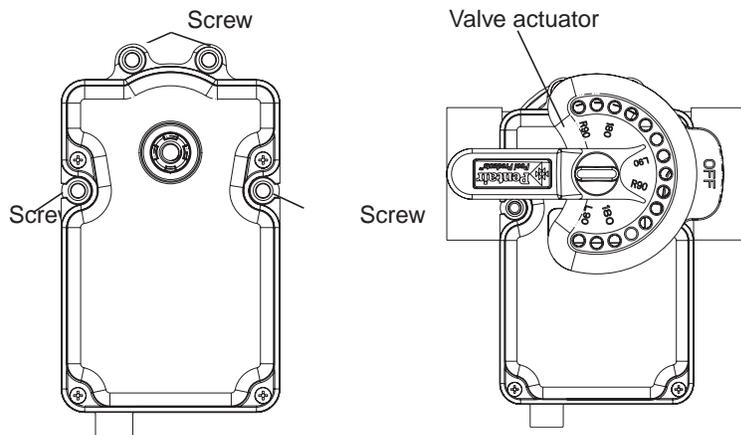


Adjusting the valve position (3-way valve shown below)

If the valve rotates to the wrong position, adjust the switch on the back of the actuator between ON1 and ON2 positions. This will rotate the valve to the correct position. The following diagram shows the standard plumbing and valve actuator position.



Valve Handle Operation: To reposition the valve handle: Rotate the handle to the desired “OFF” position. The diverter valve handle OFF indicator, represents the current position of the valve’s internal diverter seal which will stop the flow of water. The valve handle stop-pins determine the position of the diverter valve’s internal seal to stop or allow water flow. Note: When a motorized valve actuator is installed, stop-pins are not required.

Handle Stop-Pins Positions: The two movable stop-pins can be set to allow the valve handle’s position to completely stop the flow of water, regulate a limited flow, or allow the maximum flow. To set the stop-pins: Insert the stop-pins in the pin holes according to the corresponding “degree indicator” displayed on top of the handle. The stop-pin positions can be set to 180°, L90° (left-side) and R90° (right side). Repositioning of either stop-pins allows the handle to be set to any desired percentage of water flow.

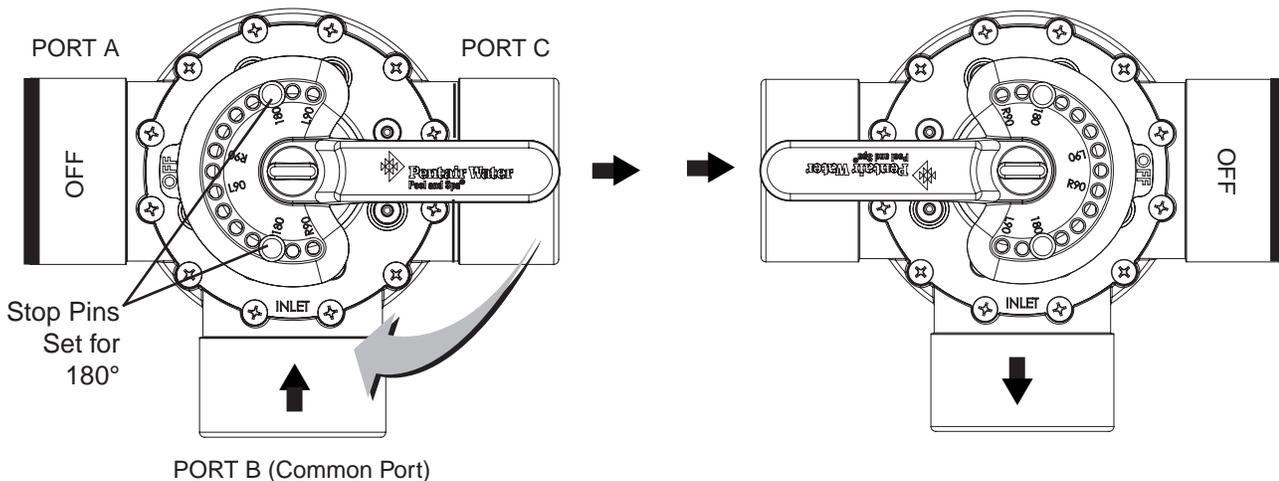


Installing Valve Actuators (Continued)

- At the Load Center or Power Center, route the cable up through the 1" grommet and low voltage raceway to the circuit board (as shown below).
- Connect the Valve A actuator cable plug into the **INTAKE** (suction) 3-pin socket, and Valve B actuator cable plug into the **RETURN** three-pin socket on the IntelliCenter™ Control System Personality circuit board. Excess cable can be coiled in the enclosure low voltage raceway left side compartment (see page 7). Do not coil the conductor in Load Center upper low voltage compartment. For valve actuator circuit board socket location see below. For plumbing requirements, see Item 2 and 3 on page 69.

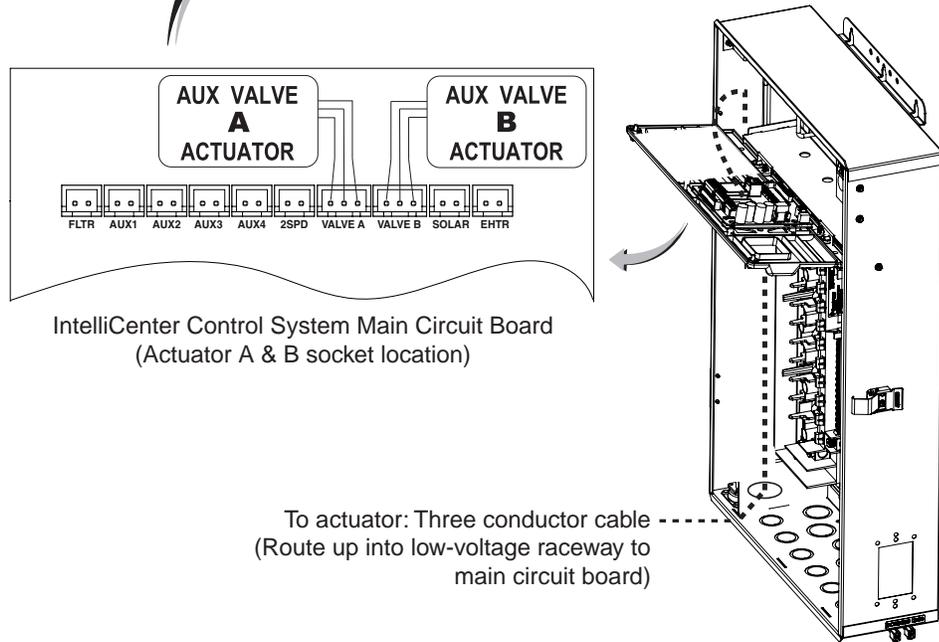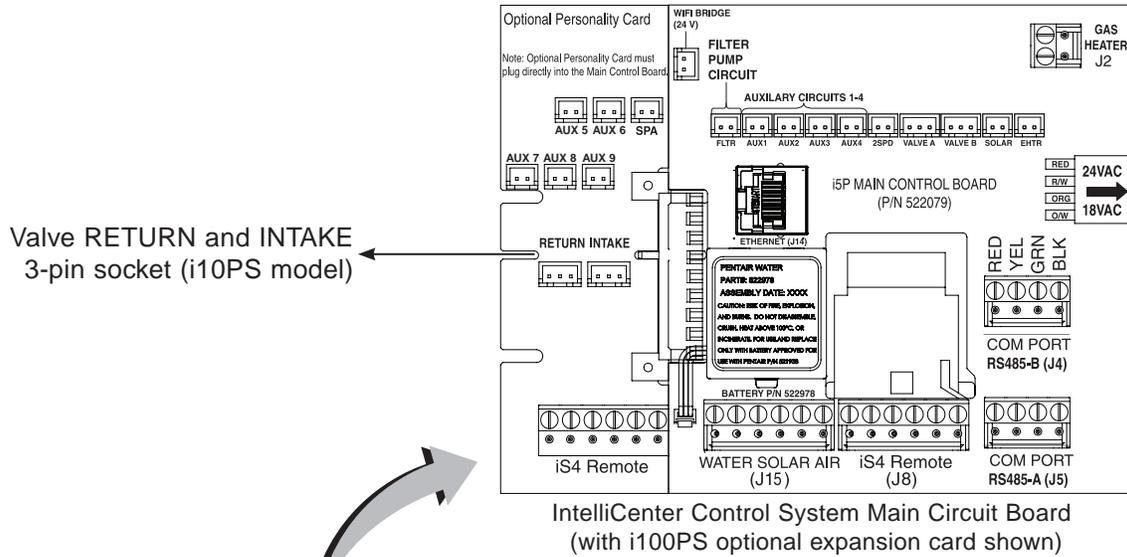

Installing Valve Actuators (Continued)

8. Optional Valve Module Expansion Boards: Using one Valve Module Expansion board (P/N 522038), six additional valve actuators (VALVE C, D, E, F, G, H) can be added to the system for a total of 10 actuators. The expansion board attaches to the edge of the IntelliCenter Control System circuit board. For installation and operation information, refer to the Valve Actuator Installation Guide (P/N 270140).

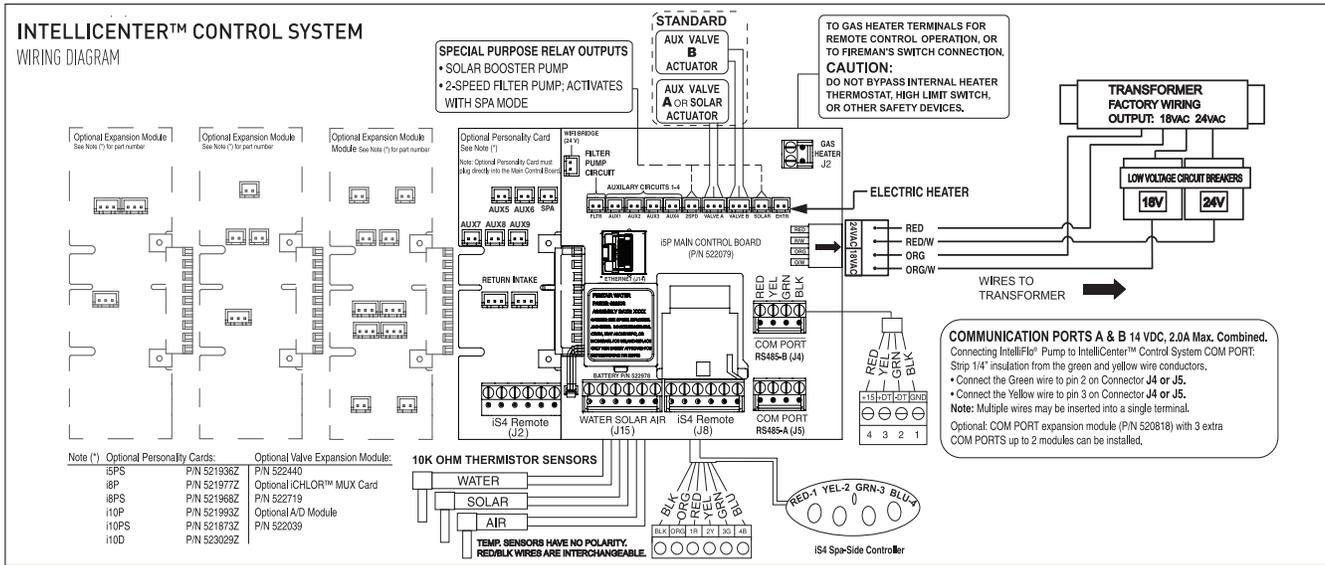


IntelliCenter™ Control System Circuit Board (Model i8PS shown)

Installing IntelliValve® Valve Actuator

The IntelliValve Valve Actuator can be installed on a 2-way, 3-way or 3-way Y valve assembly.


Valve assembly without actuator:

- Unscrew and remove the diverter valve knob and handle. Remove the four screws from the valve assembly top cover (embossed arrows indicate the screw locations as shown below).

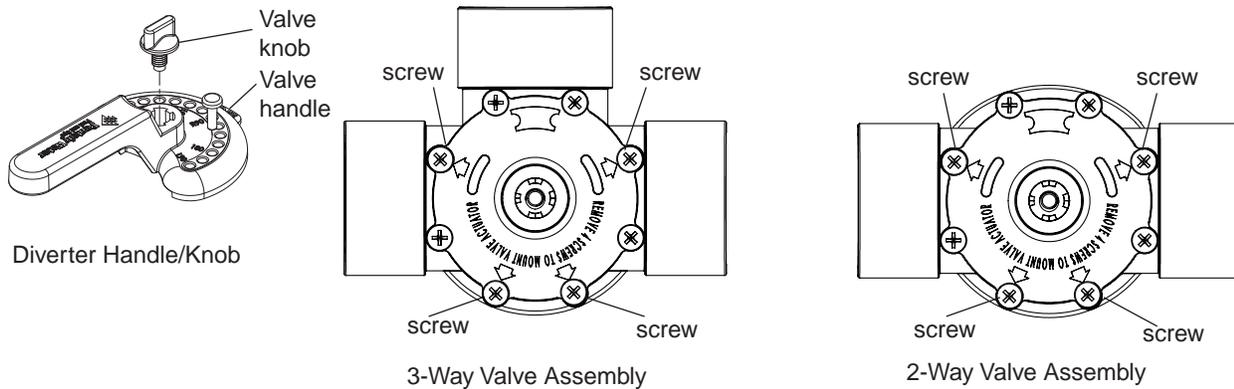

Valve assembly with existing actuator:

1. **⚠ CAUTION:** Switch OFF the main system power at the circuit breakers.
2. Disconnect the valve actuator power cord from the control system.
3. Unscrew and remove the diverter valve knob and handle from the valve actuator.
4. Remove the four screws from the valve actuator assembly. Remove the actuator from the valve, as shown below.

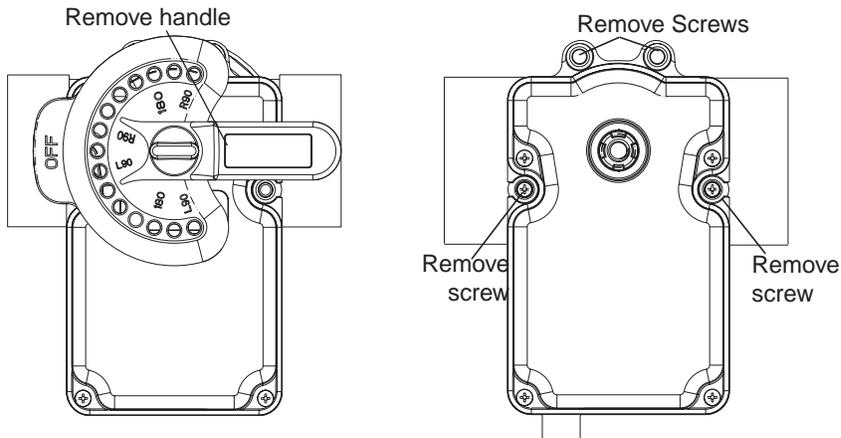


Valve Assembly with Actuator

Mount the IntelliValve® Valve Actuator onto the Valve:

1. Align the splines of the IntelliValve valve actuator shaft over the shaft of the valve. Note: The keyed square spline notch (as shown below) indicates the position of the diverter. Note: End Point at 0 (OFF) is the default position of the IntelliValve Valve Actuator.


Note: There is silicone on the actuator assembly and spline. While mounting the IntelliValve valve actuator be careful not to get silicone on the bottom of the IntelliValve assembly.

2. If the IntelliValve valve actuator does not align with the mounting holes on the valve cover, rotate the actuator (while still attached to the valve) until the actuator manufacturers holes line up on the valve.

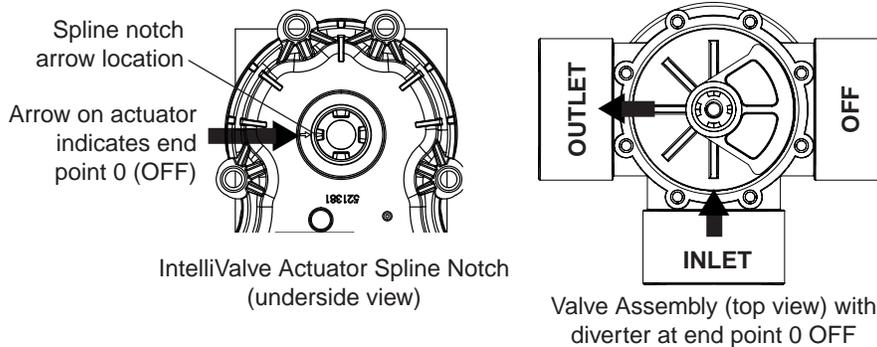


3. Mount the IntelliValve valve actuator onto the valve assembly and secure it with the four 2¼ inch mounting screws provided, as shown on the next page.

Note: DO NOT over tighten the mounting screws.

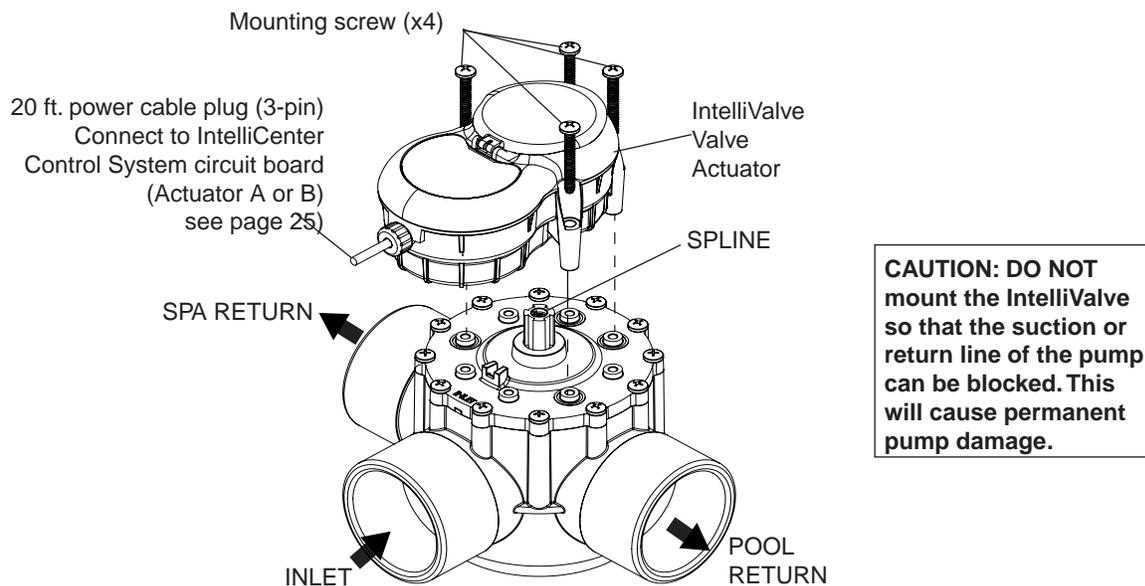

IntelliValve Valve Actuator Mounted on a 3-Port Valve assembly

Installing the IntelliValve® Valve Actuator (Continued)

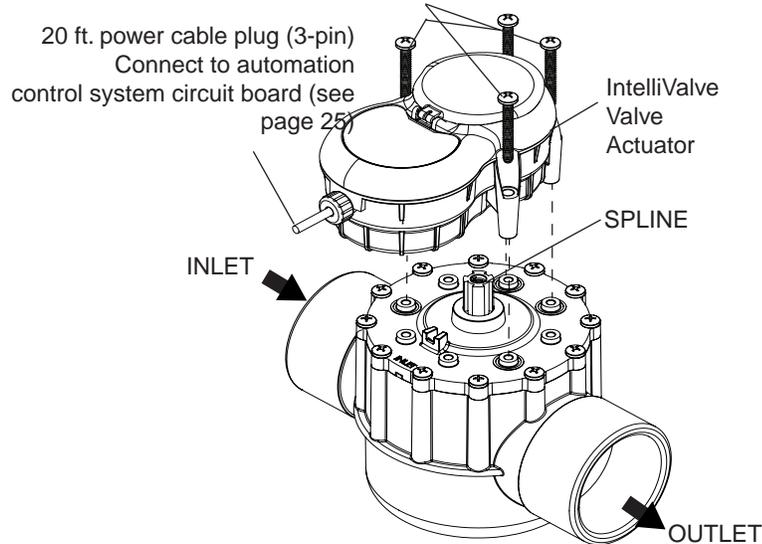

IntelliValve Valve Actuator Mounted on a 2-Port Valve assembly

Operating the IntelliValve Valve Actuator (Basic Functions) - See IntelliValve User's Guide (P/N 522301) for more information.

Mode Button: Press the MODE button (press and release) to toggle between AUTO/OFF, SET and SERVICE mode.


- **AUTO Mode:** Normal Operation
- **OFF Mode:** Disable IntelliValve Actuator function
- **SET Mode:** Set travel end points of valve diverter
- **SERVICE Mode:** Manual control - Temporary Settings

AUTO Mode (Green LED): The AUTO LED indicator is lit Green when the IntelliValve valve actuator is in normal operation.

- The actuator will move the diverter via the pool and spa automation control system.
- Only the current diverter position LED is lit while the diverter is in motion.
- Reversing Home Position from one end point to the other can only be done in AUTO MODE.

OFF Mode:

- (Red LED): OFF mode can only be enabled while in AUTO or SERVICE mode.
- Press and hold SAVE until AUTO LED turns Red.
- All other buttons are disabled during OFF mode.
- To return to ON, press and hold SAVE again until AUTO LED turns Green.

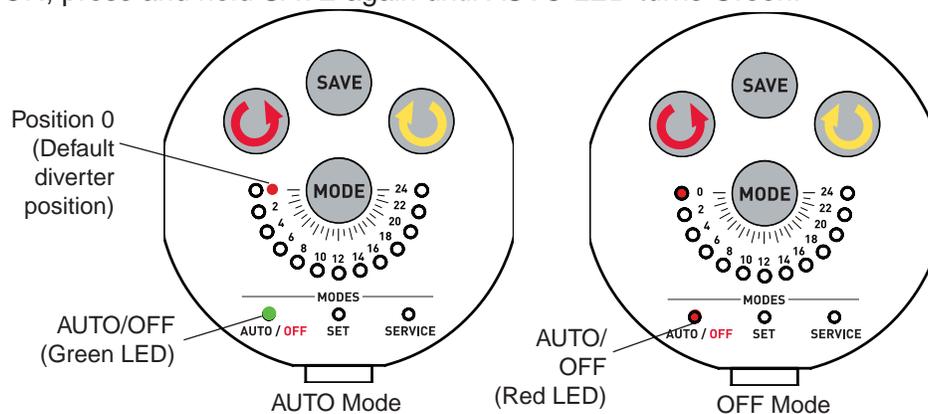

Connecting Power to the IntelliValve® Valve Actuator

After the IntelliValve Valve Actuator is mounted on to each of the valve assemblies, connect each IntelliValve Valve Actuator 24 V power cable to the 3-pin power sockets on the automation control system circuit board. The IntelliCenter Control System can control up to four IntelliValve automatic valve actuators via a RS-485 four conductor connection. For more information, see the IntelliCenter™ Control Panel User's Guide (P/N 522990). Two of the standard valve outputs are dedicated to the pool/spa INTAKE and RETURN valves. Valve A or Valve B actuators are for general purpose use (solar, water-feature, in-floor cleaner, etc.).

Note: This device must be installed by a licensed or certified electrician or a qualified pool professional in accordance with the National Electrical Code (NEC), NFPA 70 or the Canadian Electrical Code (CEC), CSA C22.1.




BEFORE INSTALLATION OR SERVICING THE INTELLIVALVE® VALVE ACTUATOR
Always disconnect power at the circuit breaker before servicing. Failure to do so could result in death or serious injury to service person, pool users or others due to electric shock.

To connect the IntelliValve Actuator Power Cable:

1. At the Load Center route the 20 ft. IntelliValve Valve Actuator power cable up through the Load Center 1" grommet and low voltage raceway to the IntelliCenter main circuit board (as shown on page 3).
2. Connect the Valve A actuator cable plug into the **INTAKE** (suction) 3-pin socket, and Valve B actuator cable plug into the **RETURN** three-pin socket on the IntelliCenter Control System circuit board. Excess cable can be coiled in the enclosure low voltage raceway left side compartment (see page 7). Do not coil the conductor in Load Center upper low voltage compartment. See IntelliValve Valve Actuator circuit board socket location below. For plumbing requirements, see Item 2 and 3 on page 54.


Note: IntelliCenter Control System Optional Valve Module Expansion Board: Using a Valve Module Expansion board (P/N 522038), three additional valve actuators (VALVE C, D and E) can be added to the system. The expansion board attaches to the edge of the IntelliCenter main circuit board. For installation and operation information, refer to the Valve Actuator Installation Guide (P/N 520294).

Test the IntelliValve Valve Actuator: Switch on power to the IntelliCenter Control System at the circuit breaker and verify that the IntelliValve valve actuator is operating correctly.

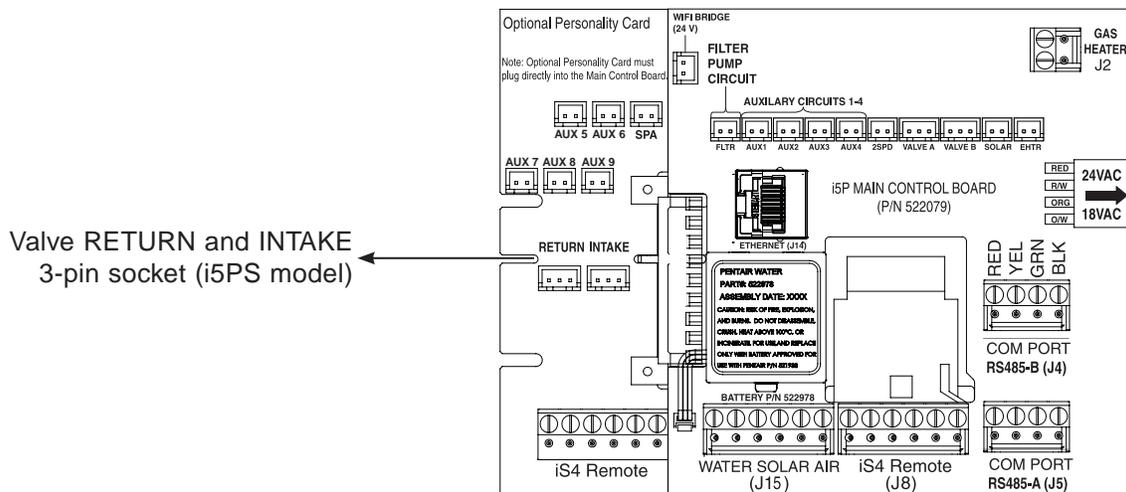

Model i5PS IntelliCenter Control System Main Circuit Board

Connecting Power to the IntelliValve® Valve Actuator

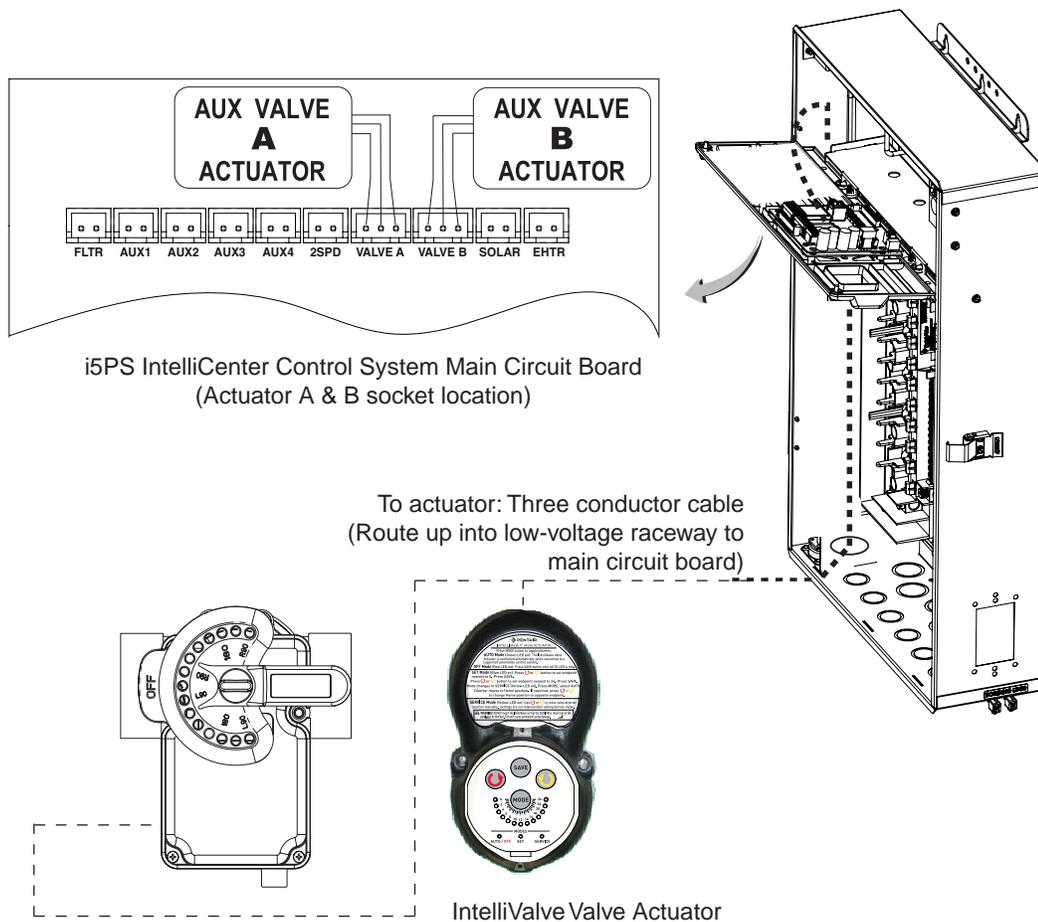

Note: Connect the IntelliValve Valve actuator to AUX Valve A or Valve B on the IntelliCenter Control System Personality circuit board.

Installing Water Temperature Sensor

To install the water sensor:

1. Select a convenient location to mount the water sensor in the plumbing system between the filter pump and filter. Drill a 3/8" diameter hole in one side of the pipe,
2. Insert tip of sensor into the hole. Use the band clamp to secure the sensor to the pipe. Tighten the clamp just enough so that the o-ring begins to flatten. Do not overtighten
3. Fasten the cable to the plumbing with cable ties.
4. Run 22 AWG two-conductor cable (included in kit) between the sensor and the Load Center and Power Center. Route the cable up through the low voltage raceway to the circuit board, as shown below.
5. Cut off the excess conductor and the strip conductors ¼ inch.
6. Insert the conductors into the **WATER SENSOR** screw terminals (**J15**) on the main IntelliCenter Control System circuit board. For sensor circuit board screw terminal location see page 26.


Installing Ambient Air Temperature Sensor (for freeze protection)

To install the air sensor:

1. Mount the sensor in the open air, in a shaded area, away from air conditioners. During the winter months, to avoid freeze damage to pool and spa equipment, mount the air sensor in a shaded area to assure proper temperature readings. The Home screen displays the current ambient air temperature.

Run 22 AWG two-conductor cable (included in kit) between the sensor and the Load Center or Power Center. Route the cable up through the low voltage raceway to the circuit board (as shown below).

3. Cut off the excess conductor and the strip conductors ¼ inch.
4. Insert the conductors into the **AIR** screw terminals (**J15**) on the IntelliCenter™ Control System main circuit board. For sensor circuit board screw terminal location.

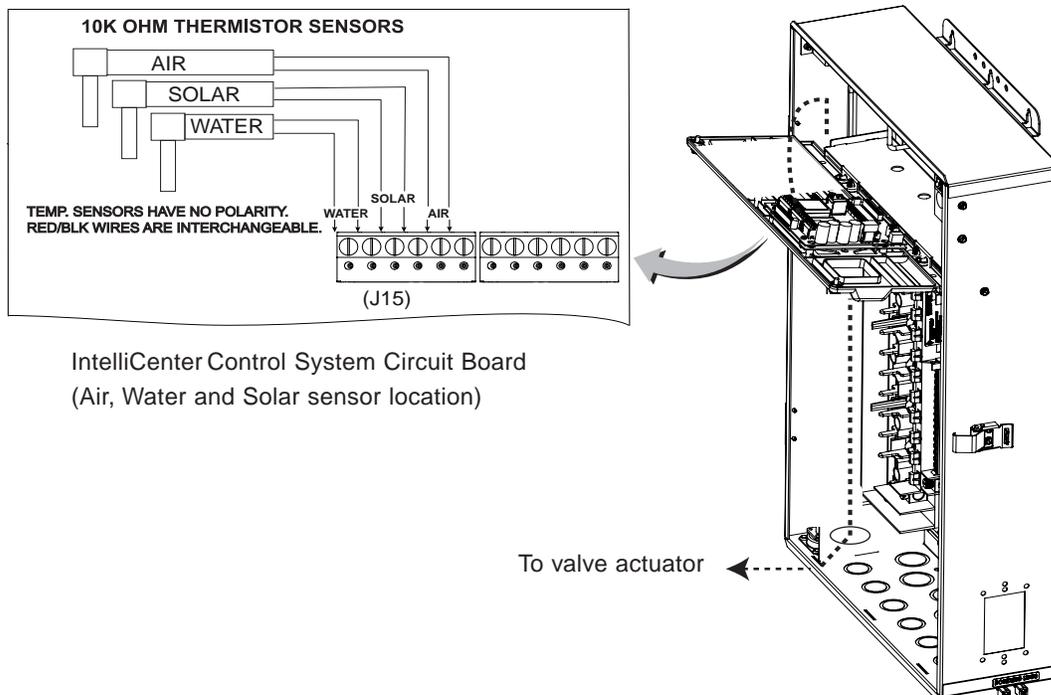

Installing the Solar Temperature Sensor (Optional)

Solar Panels Installation

- Be sure the maximum flow of water through the solar panels, a solar booster pump should be added if panels are installed at a very high elevation.
- It is recommended that the solar panels are mounted in a way that gravity will allow draining whenever the filter pump is not on.
- For systems with glazed panels, damage can occur from overheating if the filter pump is still running after the solar has turned off. To enable glazed panels to automatically drain whenever the solar turns off (even if the filter pump is still running), a 1/2" motorized solar drain valve should be plumbed from the solar feed line, through a check valve, to a zero psi point (such as pool fill line or jet air intake).

Solar Temperature Sensor Installation (as shown on page 26)

Run a two-conductor cable between the sensor and the IntelliCenter™ Control System circuit board in the Load Center.

To install the solar sensor:

CAUTION! DO NOT DRILL HOLE AND CLAMP SENSOR INTO SOLAR PIPE.

- 1 Mount the sensor on a flat surface, with the same exposure to sun as the solar collectors (next to the collectors is recommended) or any sunny location. Do not let the sensor touch the panels. For glazed panels, install the sensor between collector and glazing.
- 2 If necessary, splice a two-conductor extension conductor to the sensor. Run two-conductor cable between the sensor and the enclosure. Use waterproof connectors to connect the sensor to the cable. Use twisted pair 20 AWG outdoor rated sensor wiring and be sure the conductor connections are protected from the environment. Use shielded cable for long runs or runs near other electrical wiring.
- 3 Cut off the excess conductor and the strip back conductors ¼ inch.
- 4 Insert the conductors into the **SOLAR SENSOR** screw terminals (**J15**) on IntelliCenter Control System circuit board. For sensor circuit board screw terminal location see page 26.

Temperature vs. Resistance Data

The IntelliCenter™ Control System use 10k Ohm thermistor sensors. When the solar sensor is disconnected from the control system, the sensor will read 10k Ohm at 77° F (25°C). Refer to the following table for the resistance at other temperatures. An accurate reading should give a temperature setting that is accurate to $\pm 0.2^\circ$ C from 0 to 70 ° C.

Temp (°C)	Temp (°F)	Resistance (Ω)	Temp (°C)	Temp (°F)	Resistance (Ω)	Temp (°C)	Temp (°F)	Resistance (Ω)
-50	-58	669,500	25	77	10,000	95	203	787
-45	-49	471,500	27	80	9,298	96	205	761
-40	-40	336,200	29	85	8,250	99	210	701
-35	-31	242,500	30	86	8,056	100	212	679
-37	-35	280,100	32	90	7,331	102	215	646
-34	-30	234,100	35	95	6,530	104	220	596
-32	-25	196,300	38	100	5,826	105	221	587
-29	-20	165,100	40	104	5,326	107	225	552
-30	-22	176,800	41	105	5,209	110	230	510
-26	-15	139,300	43	110	4,663	113	235	472
-25	-13	130,300	45	113	4,367	115	239	444
-23	-10	118,000	46	115	4,182	116	240	438
-21	-5	100,200	49	120	3,757	120	248	389
-20	-4	97,000	50	122	3,602	125	257	341
-18	0	85,350	52	125	3,381	130	266	300
-15	5	72,910	54	130	3,047	135	275	264
-12	10	62,480	55	131	2,985	140	284	234
-9	15	53,640	57	135	2,750	145	293	208
-10	14	55,300	60	140	2,487	150	302	185
-7	20	46,230	63	145	2,251			
-5	23	42,300	65	149	2,083			
-4	25	39,910	66	150	2,041			
-1	30	34,560	68	155	1,854			
0	32	32,600	70	158	1,752			
2	35	30,000	71	160	1,686			
5	40	26,100	74	165	1,535			
5	41	25,400	75	167	1,480			
7	45	22,760	77	170	1,400			
10	50	19,900	79	175	1,278			
13	55	17,440	80	176	1,256			
15	59	15,700	82	180	1,168			
16	60	15,310	85	185	1,071			
18	65	13,480	88	190	980			
20	68	12,500	90	194	916			
21	70	11,880	91	195	900			
24	75	10,500	93	200	827			

Connecting a Standard Gas Heater to the Load Center

The IntelliCenter™ Control System heater control uses low voltage dry contacts that can be connected to most gas heaters or heat pumps with 24 VAC control circuits. The following connection instructions are for gas heaters and heat pumps with low voltage thermostats. To connect the heater thermostat cable plug to the IntelliCenter Control System circuit board:

1. Switch OFF power to the heater.

⚠ CAUTION IMPORTANT: DO NOT disconnect or conductor around the thermostat, pressure switch, high limit switch, or other safety devices.

2. Remove the factory installed jumper from the heater's Fireman's Switch connector. At the heater, connect the conductors in accordance with heater manufacturer's instructions. For older heaters without instructions for remote operation, connect the conductors to the Fireman's switch connections in series with the thermostat, pressure switch, and other safety switches.

3. Run a two-conductor cable from the heater Firemans Switch connector through the low voltage raceway to the Load Center or Power Center circuit board, as shown below.


NOTE: Use 221° F (105° C) temperature rated conductor for connection to the heater. When connecting conductors inside the heater, be cautious of HOT internal parts of the heater. Refer to the minimum temperature rating for conductors recommended by the manufacturer. See the heater owners manual for details.

4. Strip back the conductors ¼ in.

5. Insert the conductors into the **GAS HEATER** two-screw terminals (**J2**) on the motherboard. For heater circuit board screw terminal location see below.

CAUTION: Be sure that the conductors from the heater to the IntelliCenter Control System Load Center are not near or touching any line voltage conductors in the heater. Failure to follow these instructions may cause the heater to malfunction.

6. Set the Power (Thermostat Select) switch to either Pool or Spa.
7. Set the heater's Pool and Spa thermostats to their maximum position.

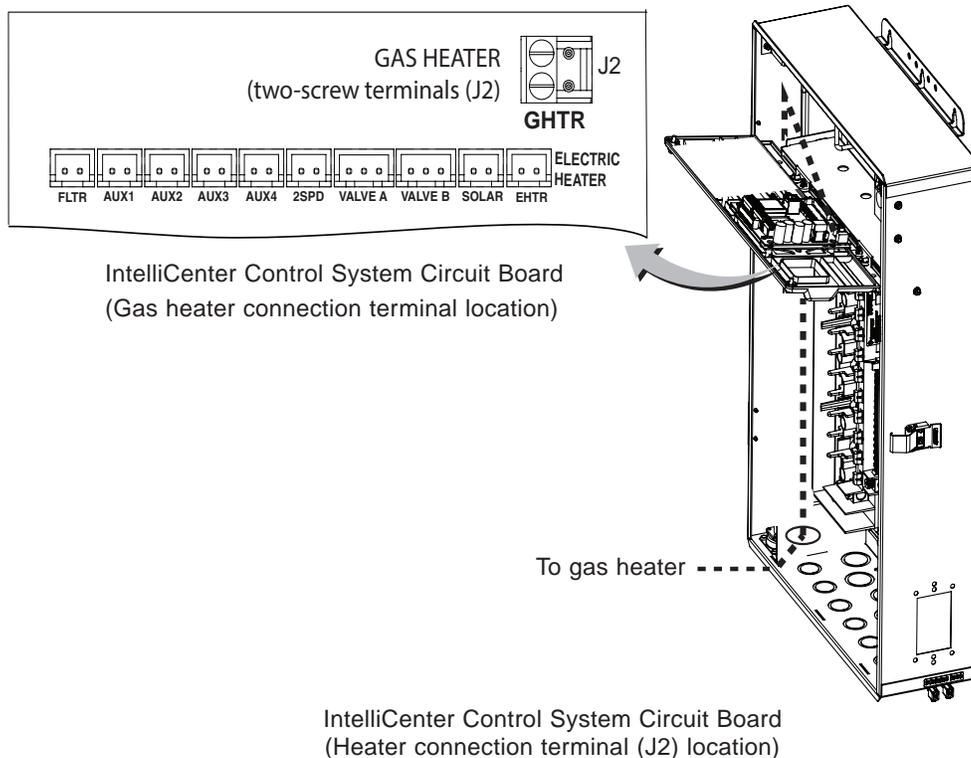


Connecting an IntelliFlo® Pump to the Load Center

A 50 ft 22 AWG four conductor low voltage RS-232 communication cable is provided with IntelliFlo pump. The IntelliCenter™ Control System filter pump output is rated at 120 VAC, 15 AMP maximum. **NOTE:** Check the electrical rating marked on the pump motor before connecting it to the system.

To connect the IntelliFlo pump communication cable to the Load Center:

1. Switch AC power OFF to the Load Center at the main house circuit breakers.
2. Run the communication cable from the pump to the Load Center or Power Center.
3. Insert the cable conductors into the one of the plastic grommet fittings, located on the lower left side of the enclosure and pull the cable up through the low voltage to the circuit board, as shown below.
4. Strip back the outer jacket four inches. Strip back each conductor a ¼-inch.
5. **IntelliCenter Control System COM Port (J4 or J5):** Insert the conductors into the COM Port screw terminals located on the top of the IntelliCenter Control System circuit board (see diagram below). Secure the conductors with the screws. For wiring details, refer to the pin configuration shown below. **Note:** Multiple conductors may be inserted into a single screw terminal.

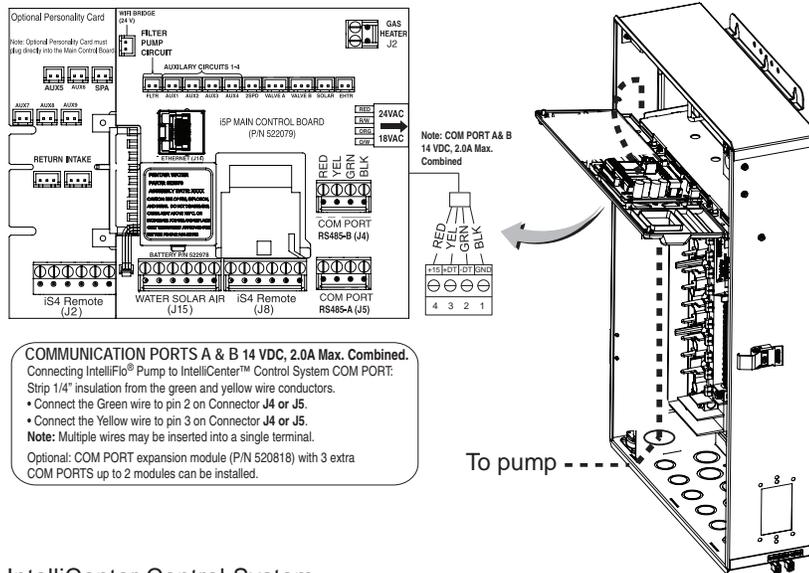

COMMUNICATION PORTS A & B 14 VDC, 2.0A Max. Combined.
 Connecting IntelliFlo® Pump to IntelliCenter™ Control System COM PORT:
 Strip 1/4" insulation from the green and yellow wire conductors.
 • Connect the Green wire to pin 2 on Connector J4 or J5.
 • Connect the Yellow wire to pin 3 on Connector J4 or J5.
Note: Multiple wires may be inserted into a single terminal.
 Optional: COM PORT expansion module (P/N 520818) with 3 extra COM PORTS up to 2 modules can be installed.

IntelliCenter Control System
 COM PORT (J5 or J6)
 Screw Terminal

	COM Port screw terminal connector	IntelliFlo Pump (2-wire cable)
	2 (GRN)	GREEN (Pin 6)
	3 (YEL)	YELLOW (Pin 7)

IntelliFlo pump communication cable pin out

Connecting a Pentair UltraTemp® and Hybrid™ Heat Pump to the Load Center

Be sure to check the UltraTemp Heat Pump terminal block conductor colors and pinouts (located on the back of the Auto Set board) before connecting it to the Load Center COM port. The See the wiring table below for the pin configuration.

IMPORTANT: On the UltraTemp Heat Pump AutoSet circuit board ONLY CONNECT PIN 3 (YELLOW) and PIN 2 (GREEN) to the IntelliCenter Control System COM port pins YELLOW and GREEN respectively. Do not connect pin 1 or pin 4 on the AutoSet board or the COM port. These pins are not used.

Wiring Description


COM Port Wire Color (J4 / J5)	Description	UltraTemp Heat Pump/UltraTemp and Hybrid Heat Pump (J1) Pin Number and Wire Color
PIN 4 (RED) (DO NOT USE)	+15 VDC	PIN 4 (DO NOT USE)
PIN 3 (YELLOW)	+ DATA	PIN 3 (YELLOW)
PIN 2 (GREEN)	- DATA	PIN 2 (GREEN)

Connecting a Pentair Hybrid Heat Pump to the Load Center

Be sure to check the Hybrid Heat Pump terminal block conductor colors and pinouts before connecting it to the Load Center COM port. The See the Hybrid Heat Pump wiring table below for the pin configuration.

IMPORTANT: On the Hybrid Heat Pump circuit board (J1) ONLY CONNECT PIN 3 (YELLOW) and PIN 2 (GREEN) to the IntelliCenter™ Control System COM port pins YELLOW and GREEN respectively. Do not connect pin 1 or pin 4 on the AutoSet board or the COM port. These pins are not used.

Wiring Description

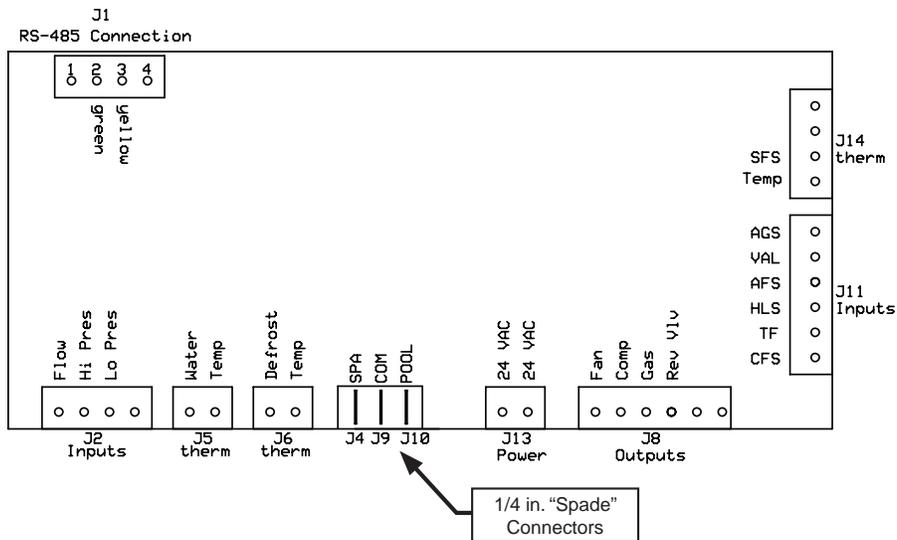

Connecting the IntelliChlor® SCG Power Cord to the Enclosure Socket

The IntelliChlor SCG cell power cord is connected to the socket on the bottom of the IntelliCenter™ Control System Load Center (shown below) and Power Center enclosure.

⚠ WARNING BEFORE REMOVING THE HIGH VOLTAGE COVER PANEL FROM THE LOAD CENTER OR POWER CENTER, switch the main power **OFF** into the home at the main circuit breaker box and also switch **OFF** the main power to the Load Center/ Power Center.

⚠ WARNING TO AVOID AN ELECTRICAL HAZARD AND EQUIPMENT DAMAGE TO THE ENCLOSURE AND INTELLICHLOR SCG CELL: FIRST DISCONNECT AC POWER TO THE ENCLOSURE BEFORE CONNECTING THE INTELLICHLOR SCG CELL POWER CABLE TO THE ENCLOSURE SOCKET.


To connect the IntelliChlor SCG power cord to the Load Center or Power Center:

1. Switch OFF AC power to the enclosure at the main house panel circuit breaker.
2. Unlatch the front door latch and open the front door. Remove the two retaining screws from the High Voltage Cover Panel and remove the panel.
3. Loosen the two retaining screws securing from the top edge of the Outdoor Control Panel. Fold down the Outdoor Control Panel to access the circuit board sockets connectors for the electrical connections.
4. Align the four pins of the IntelliChlor cell power cord connector with the socket on the bottom of the enclosure and insert the cord connector into the socket.
5. Rotate the socket nut until it locks the connector in place. Do not over tighten the nut (hand tighten only).
6. Proceed to “Connecting IntelliChlor® SCG COM Port Cable” on next page.

Loosen Outdoor Control Panel retaining screws

Flip down the Outdoor Control Panel to access circuit board and low voltage compartment

Remove two (2) retaining screws securing High Voltage Cover Panel

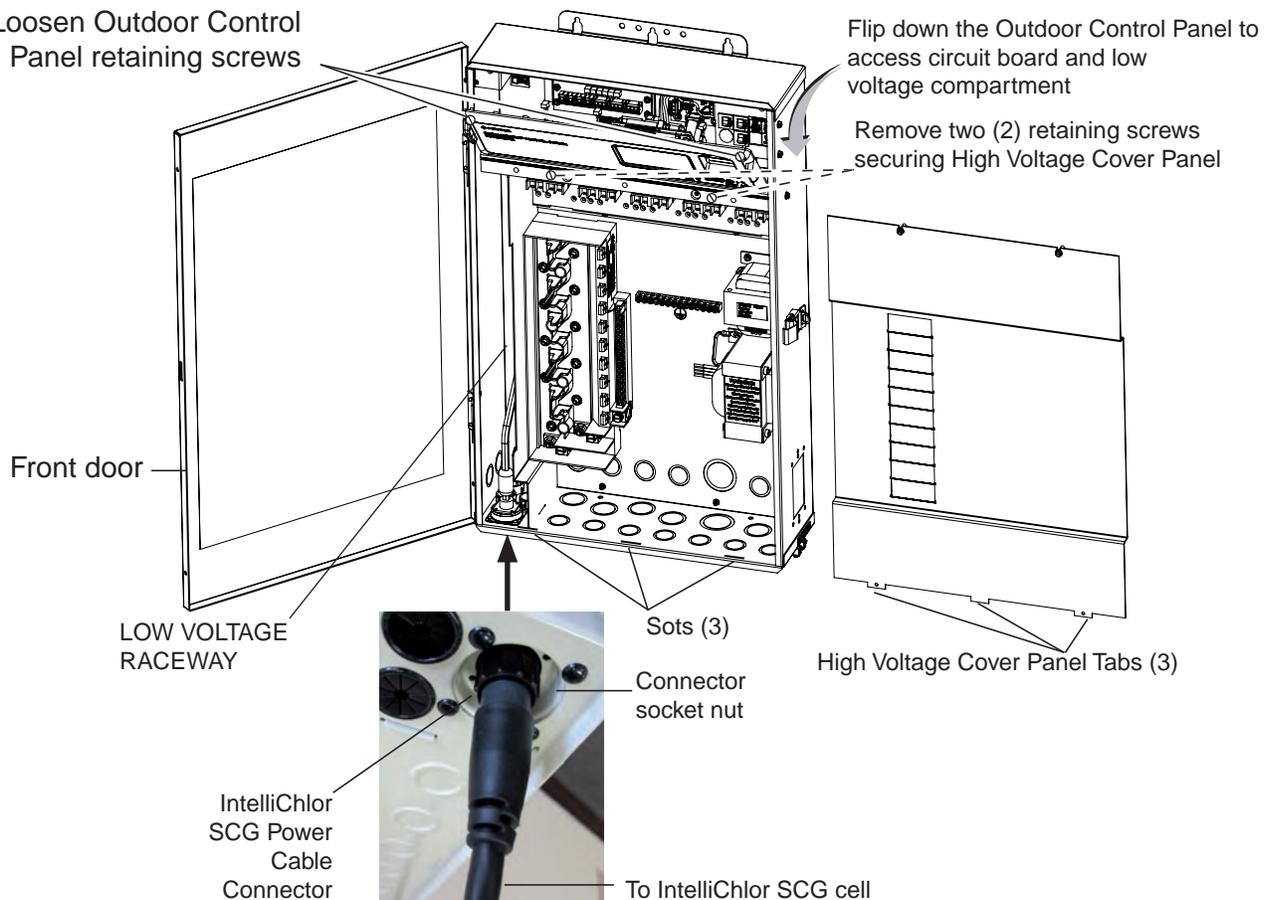

IntelliCenter Control System


Connecting the IntelliChlor® SCG Communication Cable to a COM Port

The IntelliChlor SCG communicates from the IntelliCenter™ Control System circuit board to the IntelliChlor SCG circuit board via an RS-485 communications four conductor, 22 AWG or larger cable. This cable (provided in kit) connects to both the IntelliChlor (SCG) circuit board COM port terminal and the IntelliCenter Control System circuit board COM port.


⚠ WARNING TO AVOID AN ELECTRICAL HAZARD AND EQUIPMENT DAMAGE TO THE ENCLOSURE AND INTELLICHLOR CELL: FIRST DISCONNECT AC POWER TO THE ENCLOSURE BEFORE CONNECTING THE INTELLICHLOR COMMUNICATION CABLE.

To connect the IntelliChlor SCG COM port cable (see page 34 for connector pinouts/color match):


7. First, connect the cable to **COM port J4 on the IntelliChlor SCG circuit board**, then connect the other end of the cable to the IntelliCenter Control System COM port (**J4 of J5**) screw terminal located on the IntelliCenter Control System circuit board (see screw terminal location below). Note: Any of the three COM ports on the IntelliCenter Control System circuit board can be used for the IntelliChlor SCG communications cable.
8. After electrical connections have been completed, close the Outdoor Control Panel and tighten the two retaining screws. Reinstall the High Voltage Panel: Insert the panel's three tabs into the lower slots on the enclosure. Secure the panel with the two retaining screws. Close the front door and secure with the latch. See page 34.
9. **Switch ON AC POWER** to the load center at the circuit breaker.

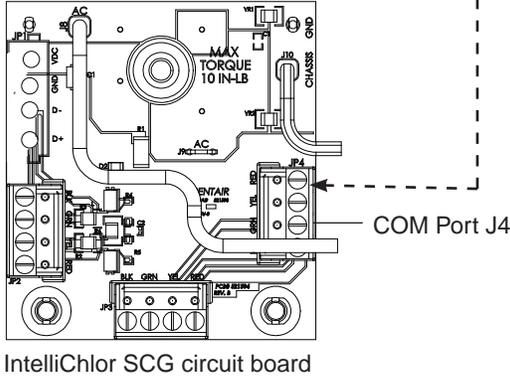

IntelliChlor SCG circuit board

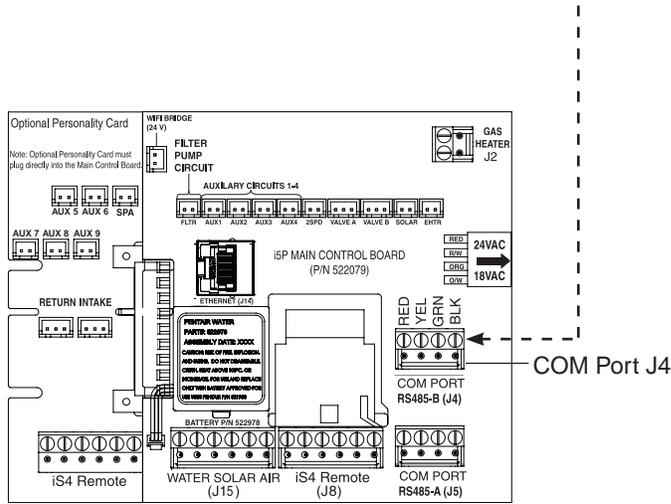

IntelliCenter Control System main circuit board (with i10PS optional expansion card shown)

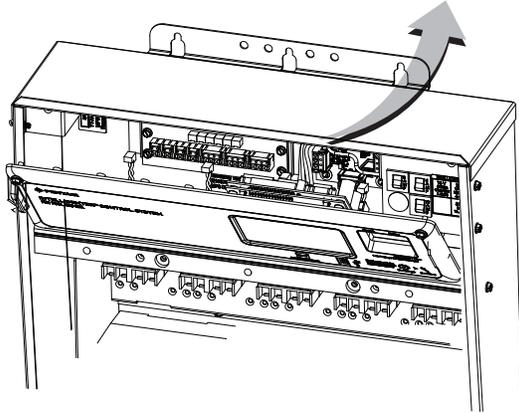

IntelliCenter Control System Load Center/Power Center (with IntelliChlor SCG option) (Control Panel not shown)

Connecting a Salt Chlorine Generator to the Load Center or Power Center

Be sure to check each conductor color between the salt chlorine generator and the IntelliCenter™ Control System Load Center (with SCG option) as shown in the following wiring tables.

Commonly used salt chlorine generator wiring is shown below. However, but you should still verify with the manufacturers documentation. Failure to connect the salt chlorine generator properly can permanently damage the IntelliCenter Control System and/or the salt chlorine generator.

Wiring Description

(IntelliChlor® SCG Circuit board COM Port to IntelliCenter Control System COM Port J4/J5)

SCG COM Port wiring color connection	Description	From IntelliChlor SCG Power Center COM Port #1
RED	+15 VDC	RED
YELLOW	+ DATA	YELLOW
GREEN	- DATA	GREEN
BLACK	GROUND	BLACK

Wiring Description (Hayward® or Jandy® Load Center COM Port)

Hayward® or Jandy® Load Center COM port wiring color connection	Description	IntelliChlor Salt Chlorine Generator
RED	+15 VDC	RED
YELLOW	+ DATA	BLACK
GREEN	- DATA	YELLOW
BLACK	GROUND	GREEN

Wiring the IntelliChem® Controller to the Load Center

Be sure to check each conductor color between IntelliChem Controller and the IntelliCenter Control System Load Center and/or Power Center as shown in the following wiring table.

Wiring Description (IntelliChem COM Port to IntelliCenter Control System COM Port)

IntelliChem Controller COM Port (J7) wiring color connection	Description	From IntelliCenter Control System COM Port (J4 / J5)
RED (DO NOT USE)	+15 VDC	RED (DO NOT USE)
YELLOW	+ DATA	YELLOW
GREEN	- DATA	GREEN
BLACK	GROUND	BLACK

Wiring the IntelliChlor® SCG Transformer to Load Center Filter Pump Relay


IMPORTANT! IntelliChlor SCG AC transformer wiring Instructions: When using the IntelliCenter® Control System with the IntelliChlor SCG option, be sure the IntelliChlor SCG AC transformer conductors are connected to the **LOAD SIDE OF THE FILTER PUMP RELAY** located in the load center (see page 36). This ensures that the IntelliChlor SCG cell produces chlorine only when the pool/spa filter pump is on.

⚠ WARNING BEFORE REMOVING THE HIGH VOLTAGE COVER PANEL FROM THE LOAD CENTER OR POWER CENTER, switch OFF the power at the house main circuit breaker box.

⚠ WARNING TO AVOID AN ELECTRICAL HAZARD AND EQUIPMENT DAMAGE TO THE ENCLOSURE AND INTELLICHLOR CELL: FIRST DISCONNECT AC POWER TO THE ENCLOSURE BEFORE CONNECTING THE INTELLICHLOR SCG COMMUNICATION CABLE.

To connect the IntelliChlor (SCG) transformer conductor to the main filter pump relay:

1. Switch OFF AC power to the enclosure at the main house panel circuit breaker.
2. Unlatch the front door latch and open the front door. Remove the two retaining screws from the High Voltage Cover Panel and remove the panel.
3. Loosen the two retaining screws securing from the top edge of the Outdoor Control Panel. Fold down the Outdoor Control Panel to access the circuit board sockets connectors for the electrical connections. Remove the panel from the enclosure, as shown below.
4. **Locate the FILTER PUMP RELAY. Connect the IntelliChlor SCG transformer conductors to the LOAD SIDE of the relay as shown on the next page.**
5. After electrical connections have been completed, reinstall the High Voltage Panel: Insert the panel's three tabs into the lower slots on the enclosure. Secure the panel with the two (2) retaining screws. Close the front door and secure with the latch.
6. **SWITCH ON AC power** to the load center.

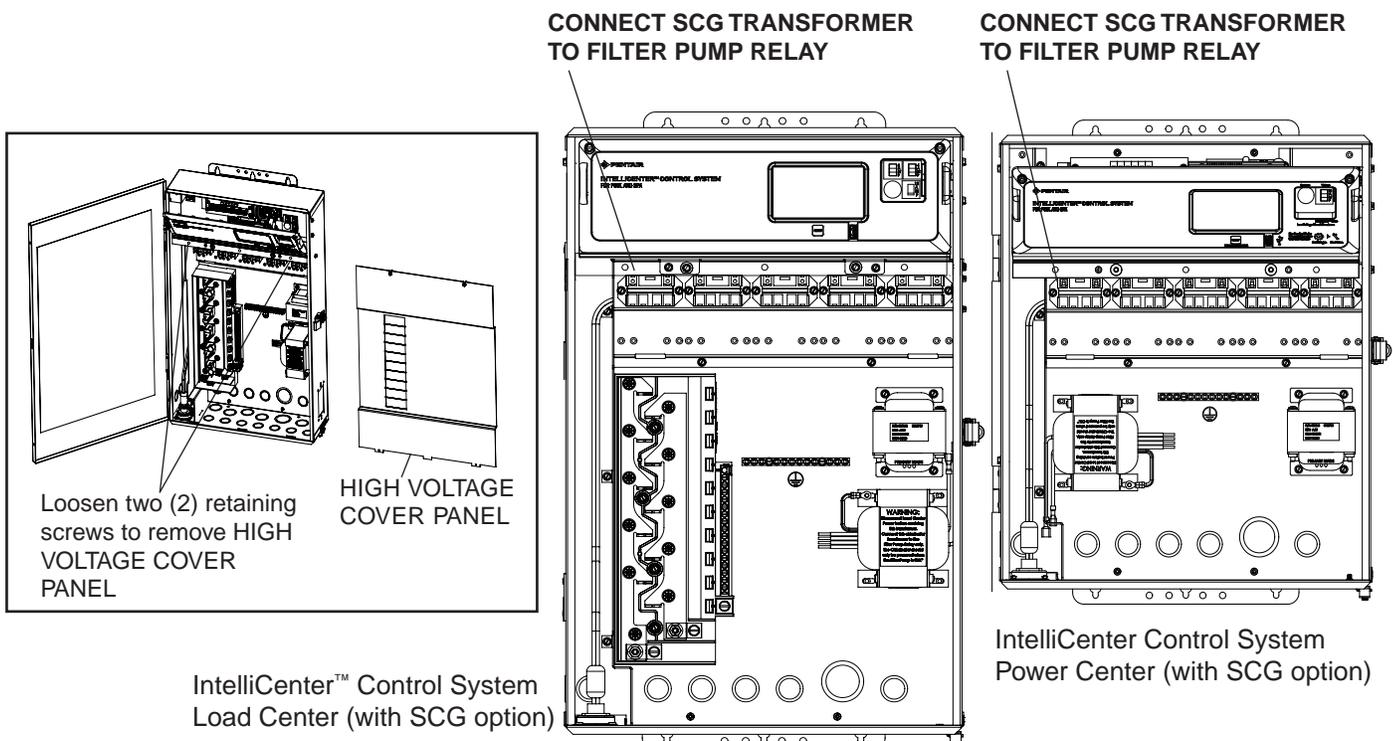



Wiring the IntelliChlor® SCG Transformer to Load Center Filter Pump Relay

Connect IntelliFlo® Pump AC power cord to 240 Volt 20 AMP direct circuit breaker in IntelliCenter load center or separate sub-panel.



IntelliFlo® Pump communication cable connects to RS-485 COM port on IntelliCenter load center circuit board.

WhisperFlo® 2-Speed Pump AC power cord connect to LOAD SIDE of Filter Relay (wired for 120 or 240 VAC)

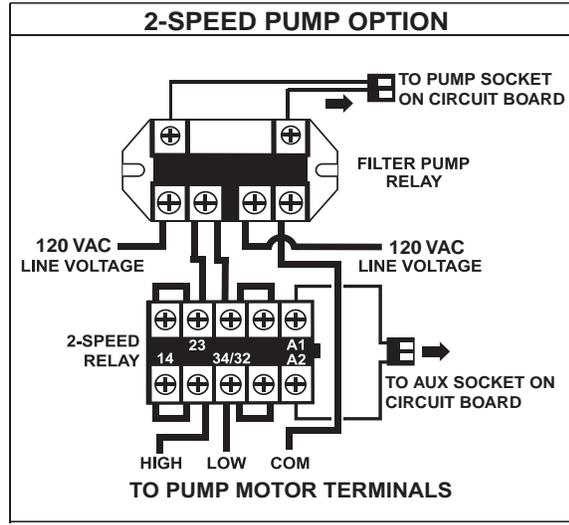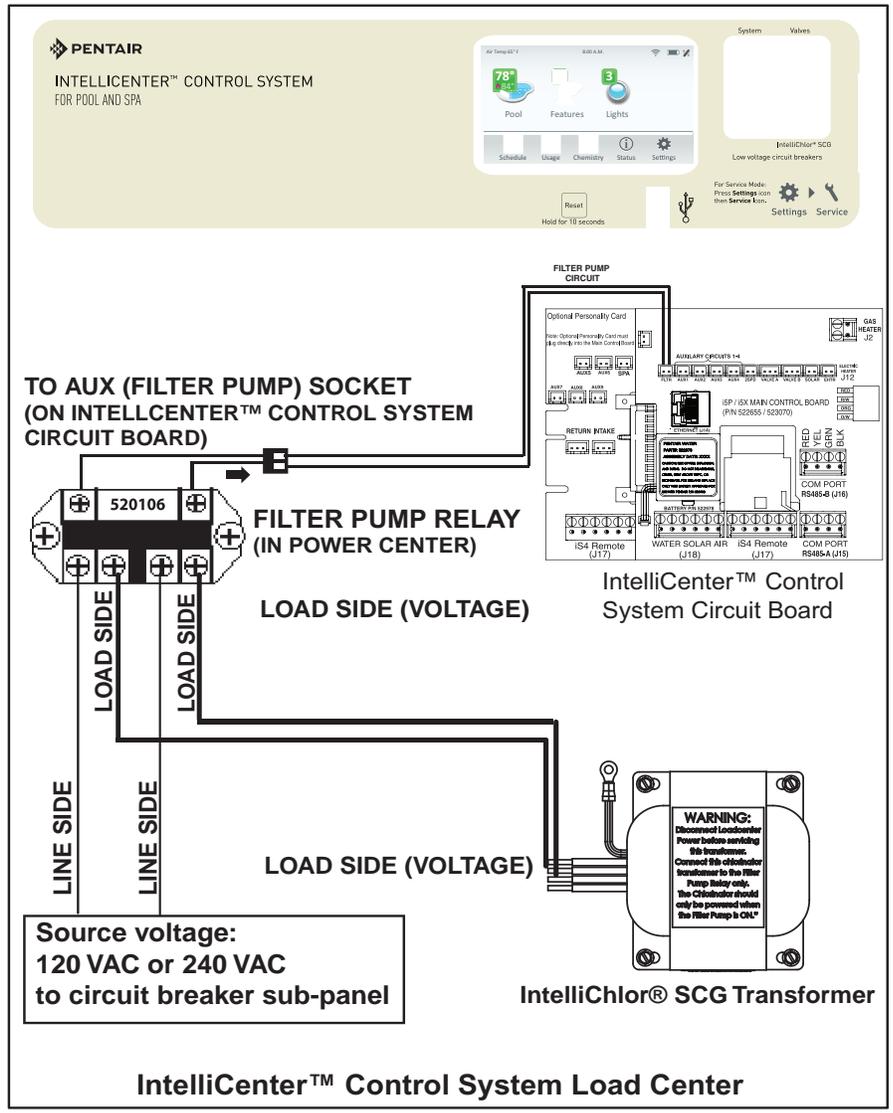IntelliCenter™ Control System Load Center - IntelliChlor® SCG Connection Diagram

Rewiring the IntelliChlor® SCG Transformer for 120VAC


The IntelliChlor SCG power supply transformer is located in the IntelliCenter™ Load Center and Power Center can be wired for 240 VAC at 1AMP (factory installed) or 120 VAC at 2AMP 50/60 Hz. The IntelliChlor SCG transformer is pre-wired at the factory for 240 VAC service.

To rewire the IntelliChlor SCG transformer and for 120 VAC:




BEFORE REMOVING THE HIGH VOLTAGE COVER PANEL FROM THE LOAD CENTER OR POWER CENTER ENCLOSURE switch OFF the power at the house main circuit breaker box.

1. Switch OFF AC power to the enclosure at the main house panel circuit breaker.
2. Unlatch the front door latch and open the front door. Remove the two retaining screws from the High Voltage Cover Panel and remove the panel.
3. Loosen the two retaining screws securing from the top edge of the Outdoor Control Panel. Fold down the Outdoor Control Panel to access the circuit board sockets connectors for the electrical connections. Remove the panel from the enclosure, as shown below.
4. **Rewire the SCG transformer for 120 VAC as shown in the wiring diagram on next page.**
5. Reinstall the High Voltage Panel: Insert the panel's three tabs into the lower slots on the enclosure. Secure the panel with the two (2) retaining screws. Close the front door and secure with the latch.
6. **SWITCH ON AC power** to the load center.

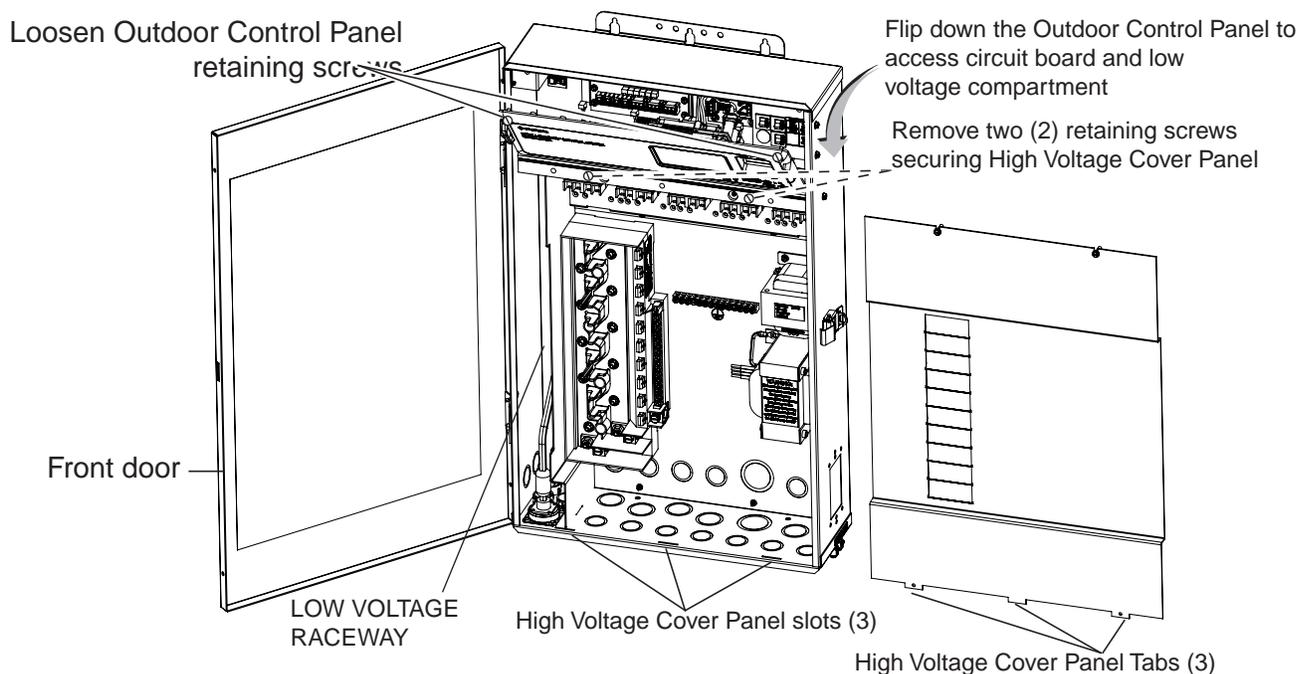

Rewiring the IntelliChlor® SCG Transformer for 120VAC (Continued)

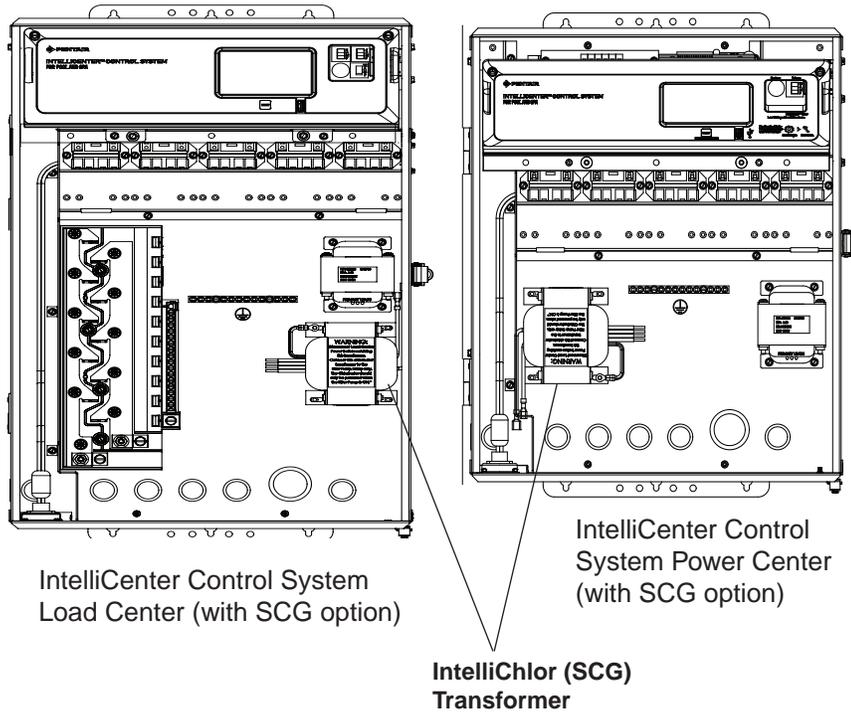

IntelliChlor® SALT CHLORINE GENERATOR OPTION FOR OUTDOOR USE ONLY	
INPUT: 120 VAC AT 2.5 A, 50/60 Hz 240 VAC AT 1.3 A, 50/60 Hz WIRING CONFIGURATION IS FACTORY SET FOR 240V.	
TRANSFORMER WIRING	
240V Line Voltage	Transformer Leads
120V	YELLOW
	VIOLET
	BLACK
120V	WHITE
120V Line Voltage	Transformer Leads
120V	YELLOW
	BLACK
NEUTRAL	VIOLET
	WHITE

Connecting the Wireless Client Bridge Antenna to the Load Center

The IntelliCenter™ Control System Client Bridge Wireless Antenna provides a wireless connection to your home wireless router using an Ethernet (LAN Cat5) cable connected to the Outdoor Control Panel.


To install the wireless antenna and power module to the load center:



WARNING

BEFORE REMOVING THE HIGH VOLTAGE COVER PANEL FROM THE LOAD CENTER OR POWER CENTER ENCLOSURE switch OFF the power at the house main circuit breaker box.


1. Switch OFF AC power to the enclosure at the main house panel circuit breaker.
2. Unlatch the front door latch and open the front door. Remove the two retaining screws from the High Voltage Cover Panel and remove the panel.
3. Loosen the two retaining screws securing from the top edge of the Outdoor Control Panel. Fold down the Outdoor Control Panel to access the circuit board sockets connectors for the electrical connections. Remove the panel from the enclosure, as shown below.
4. **After the wireless antenna and power module installation is finished (see next page for installation instructions), continue with step 5 below.**
5. Reinstall the High Voltage Panel: Insert the panel's three tabs into the lower slots on the enclosure. Secure the panel with the two (2) retaining screws. Close the front door and secure with the latch.
6. **SWITCH ON AC power** to the load center.

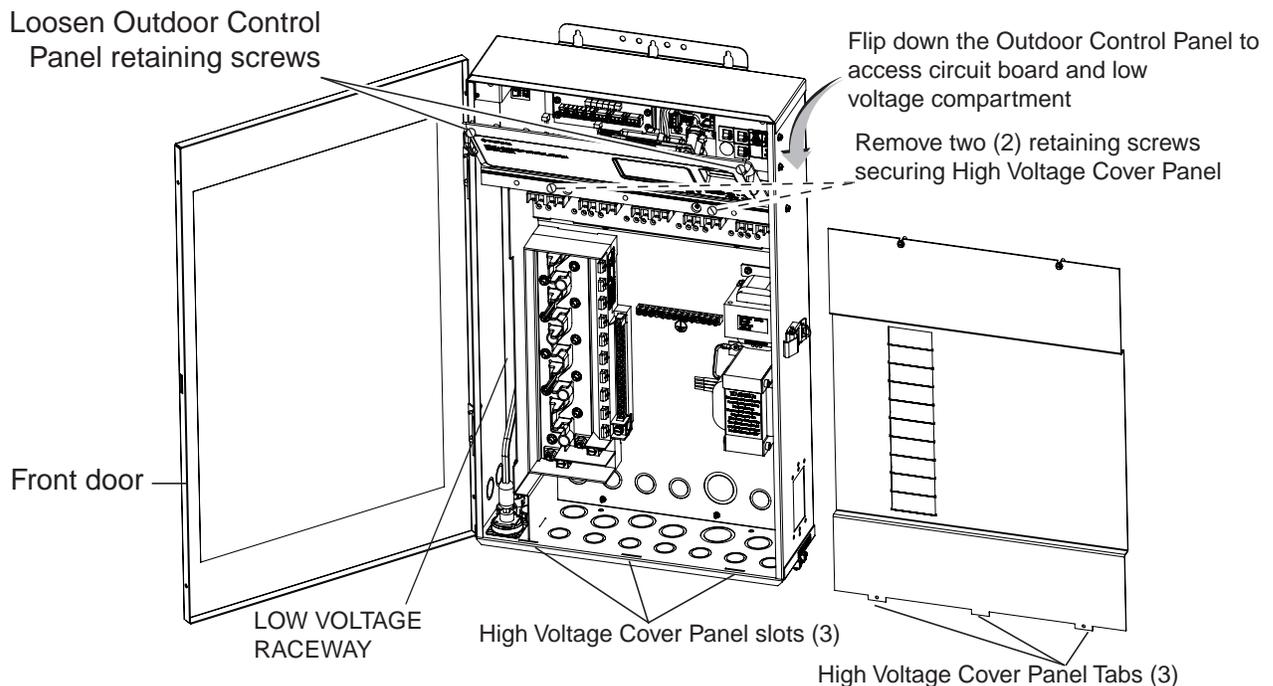

Connecting the Wireless Client Bridge Antenna to the Load Center (Continued)

Wireless Client Bridge Antenna and Power Module Installation Summary:

- See next page for Wireless Client Bridge Antenna and Power Module Installation instructions.
- See below for the Wireless Client Bridge Antenna and Power Module connection diagram.

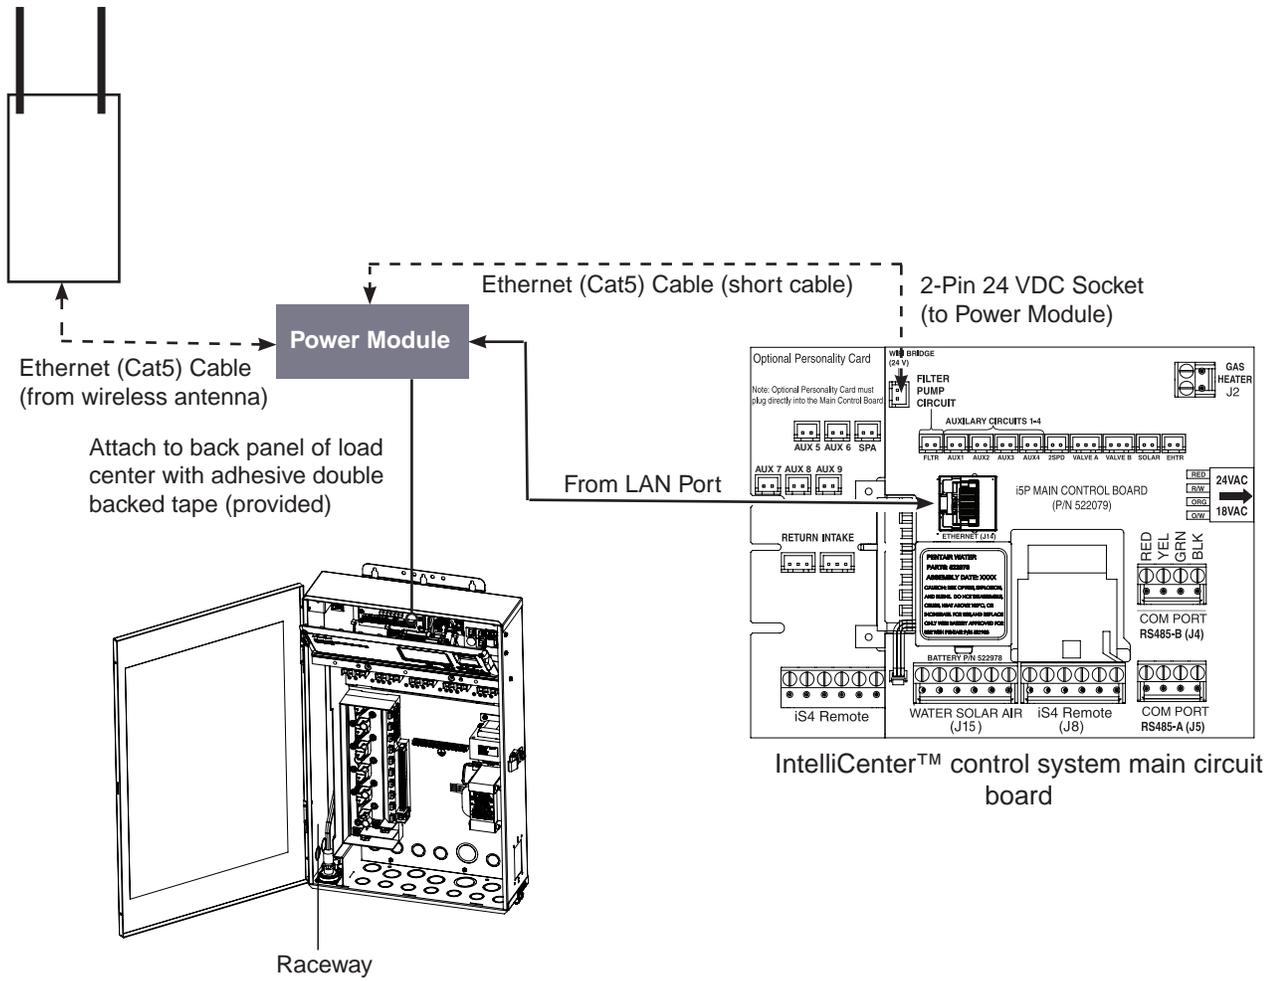


IntelliCenter™ Control System Load Center

Installing the Wireless Client Bridge Antenna and Power Module

To install the Wireless Client Bridge Antenna and Power Module:

1. **Power Module:** Connect a short Ethernet (Cat5) cable into the IntelliCenter Control System Outdoor Control Panel Ethernet port and the other end into the LAN port for the IntelliCenter Outdoor Control Panel.
2. **Power Module:** Connect an Ethernet (Cat5) cable into the LAN port on the Power Module. Route the cable down the load center raceway and out of the lower opening.
3. **Power Module:** Connect the AC Power Adapter plug into the DC-IN socket and the plug other end into an electrical outlet.
4. **Mount the Power Module:** Using the provided adhesive tape, mount the Wireless Antenna Power Module to the inside back plate of the low-power connection compartment in the top load center enclosure
5. **Wireless Antenna Assembly:** To access the LAN port, remove the rear bottom panel from the antenna assembly. From the front of the Antenna assembly, press down on the rear bottom panel clip to release it from the antenna assembly.
6. **Wireless Antenna:** Connect the Ethernet (Cat5) cable from the Power Module in the load center to the LAN port on the Wireless Assembly (**Left side port**).
7. **Mount the Wireless Antenna Assembly:** Mount the wireless antenna to a vertical flat surface near the load center. Use the provided mounting template for screw measurements.

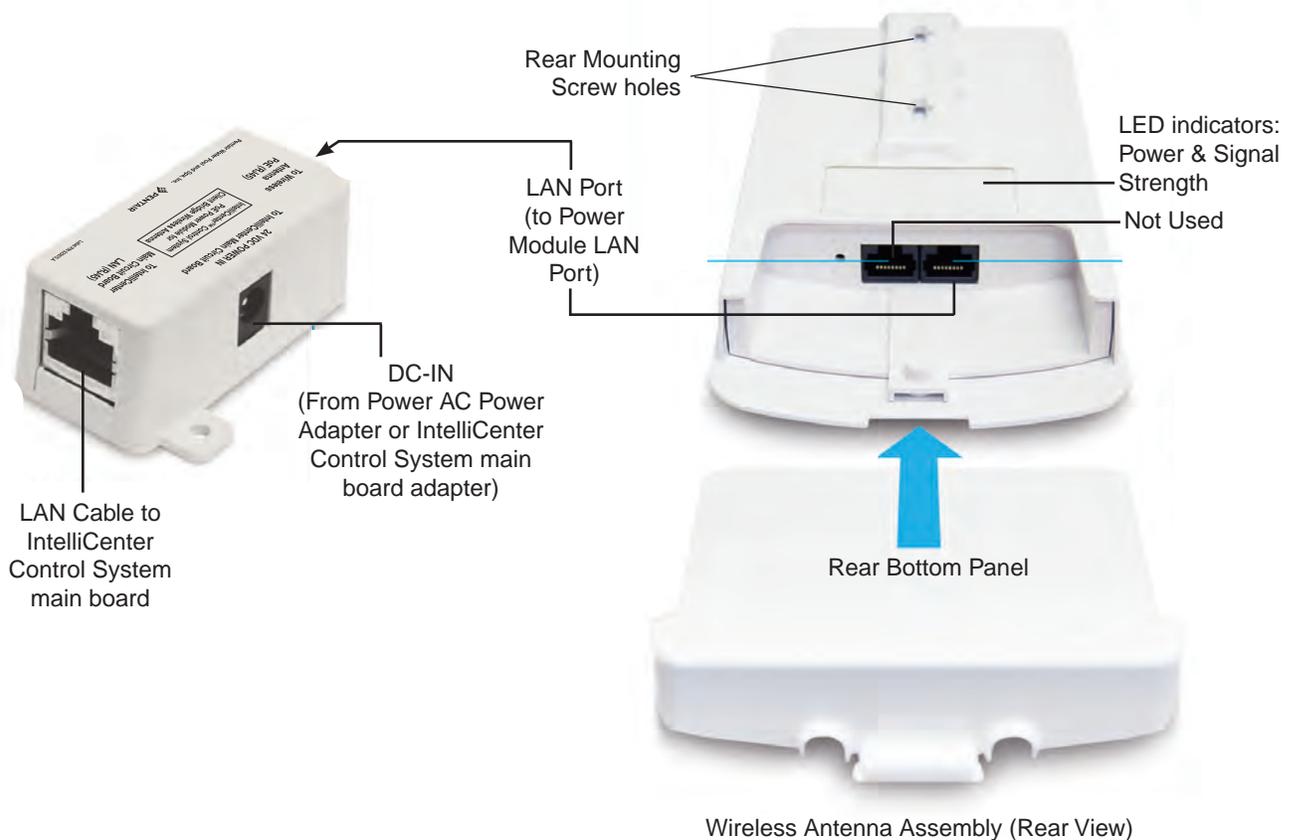

Section 2

IntelliCenter™ Control System Start Up

System Start-Up


Note: The following information describes how to configure the IntelliCenter Control System using the step-by-step Setup Wizard. For more detailed information refer to the IntelliCenter™ Control System User's Guide (P/N 522990).

Power On the Load Center and/or Power Center

1. After all the necessary pool and spa equipment has been connected to the Load Center/Power Center, replace and secure the High Voltage Panel on to the front of the Load Center and/or Power Center.
2. Switch on the main circuit breakers to apply power to the Load Center and/or Power Center.

Start the Setup Wizard

1. The IntelliCenter™ Control System Outdoor Control Panel will be powered on.
2. From the Home screen tap **Settings > Advanced system Configuration > Wizard**.
3. Follow the screen prompts to configure the system. When finished save the system configuration. The system is now ready for operations. For more information refer to the IntelliCenter™ Systems User's Guide.
4. Continue on next page. See *Initial System Power Up*.

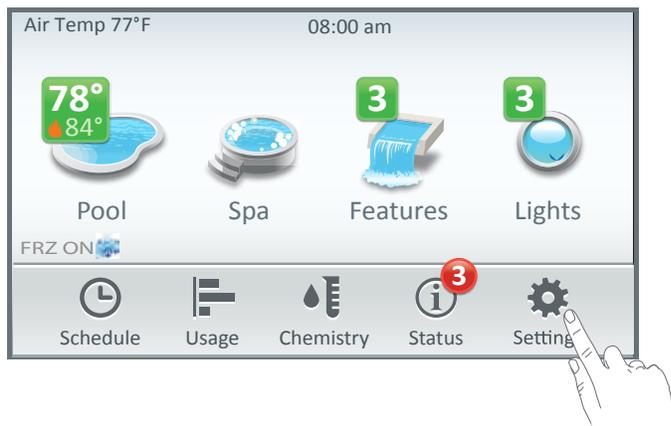

About the Setup Wizard: The IntelliCenter Control System Setup Wizard provides step-by-step screens to assist in setting up the pool/spa equipment. To complete the Setup Wizard takes about 10 minutes. If you are unsure how to answer a question, you can skip the question and continue with the setup, then go back to the Wizard later to change or edit the setup information.

Internet Connection and adding a new account for www.intellicenter.com: After the Setup Wizard has been successfully completed, go to Settings > Pentair User Portal. From there you can setup either a Wireless or Ethernet connection to connect to the Internet and add a new account or login using an existing account, which includes setting up a password, pool system's owner's name, address and contact information. This account allows access to www.intellicenter.com for remote access to the pool system via a smartphone or PC.

Setup Wizard [Advanced System Configuration]

Setup Wizard Screen Navigation:

Note: While in the Configuration Wizard, if a power outage occurs or the screen times out, the system will display the Home Screen. Any changes made in the Wizard up to that occurrence will be saved.

What is your Zip code / Location	
Zip Code	Brooklyn, NY
11220	United States
Latitude	40.65°
Longitude	-73.94°
Time Zone	UTC/GMT -5
Eastern Time (US & Canada)	
Help/Menu	Cancel
Back/Home	Next/Summary

- 1 Progress Bar Indicator: The Blue Configuration Wizard progress bar indicates how many options have been completed.

Help ? : Brief informative information for the current Setup Wizard screen.

- 2 **Cancel (Exit Wizard?)**: Tap the Cancel button while in the Setup Wizard to display the following dialog screen:

Exit Wizard?

No: Remain in the Setup Wizard and return to previous Wizard screen and continue with the Setup Wizard configuration.

Yes: Save any changes made up to this point, exit the Setup Wizard and return to the Home screen.

Discard: Discard all changes made in the Setup Wizard, exit the Setup Wizard and return to the Home screen.

- 3 **No** to remain in the Setup Wizard and return to previous Wizard screen and continue with the Setup Wizard configuration.

- 4 **Yes** to save any changes made up to this point, exit the Setup Wizard and return to the Home Screen.

- 5 **Discard:** Discard all changes made in the Setup Wizard, exit the Setup Wizard and return to the Home screen.

Back: Return to the previous screen.

Next: Move to the next Wizard screen or item settings.

Example: Before each Wizard configuration screen a YES/NO option screen is displayed. Tap YES then NEXT to enter the item configuration screen. Tap NO then NEXT to continue to the next option.

Note: Number of Configured Devices: Displayed on the first of each Wizard option screen is the number of devices that have been configured. As you progress through the Wizard the device message corresponds to how many options have been updated.

Setup Wizard [Advanced System Configuration]


Initial System Power Up

After all required pool/spa equipment has been connected to the IntelliCenter Control System, apply power to the system at the main panel circuit breaker. Upon the initial system power up, the outdoor LCD control panel will display the PENTAIR END USER LICENSE AGREEMENT. Please read this agreement. To continue, tap the Down arrow on the right side of the screen to scroll down to the end of the agreement and tap **I Accept** to accept the agreement. The Home screen is then displayed.

Note: The Pentair End User License Agreement is displayed only one time after the initial system power up.



Wizard Setup: To start the Wizard system setup, from the Home screen, tap **Settings > Advanced System Configuration > Wizard**. The following screen is displayed.

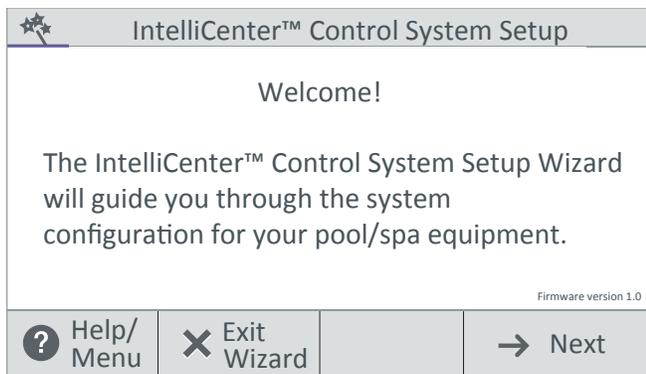


IntelliCenter Control System Setup

Wizard: The first Setup Wizard configuration screen, Displays the current system firmware version.

Next: Tap Next to continue with the Setup Wizard and display the Detected Hardware screen.

Cancel: Tap Cancel to exit the Setup Wizard and return to the Home screen.

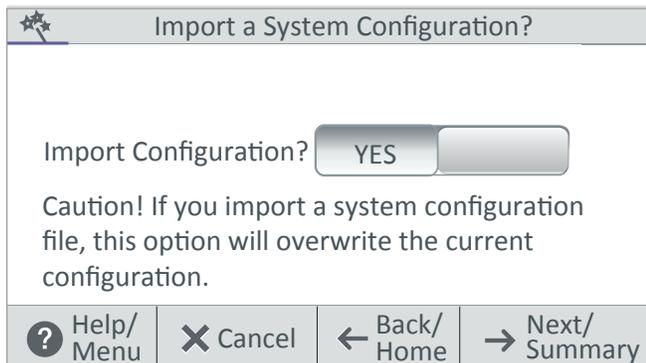

Import System Configuration:

Yes: Use this option to Import a system configuration file (.CFG) from a USB device plugged into the USB Port on the front of the IntelliCenter Control System Outdoor control panel. Note: This option will overwrite the current system configuration.

No: Tap No then Next to continue with the Setup Wizard.

Setup Wizard [Advanced System Configuration]

Import for USB: Insert a USB device into the USB Port on the IntelliCenter™ Control System Outdoor or Indoor control panel. Tap Import from USB and navigate to the system configuration file (.CFG). Follow the on screen instructions to import the system configuration files plugged into the USB Port on the Outdoor or Indoor control panel.

Local or copy from Remote: These options will overwrite the system configuration using a configuration file. Navigate to the appropriate folder and select the Configuration file (.cfg) to import.

Detected Hardware			
Setup had detected the following hardware:			
Personality: i5PS			
Expansion Module1: None			
Expansion Module2: None			
Expansion Module3: None			
Expansion Module4: None			
Help/ Menu	Cancel	Back/ Home	Next/ Summary

Detected Hardware: Displays the installed IntelliCenter Control System Personality main circuit board and Expansion Cards (if applicable).

Next: Tap Next to continue to the Zip Code / Location settings screen.

Back: Tap Back to go to the previous screen.

Cancel: Tap Cancel to exit the Setup Wizard and display the Exit Wizard screen (No, Yes, Discard options).

What is your Zip code / Location	
Zip Code	Brooklyn, NY
11220	United States
Latitude	40.65°
Y Cordinate	
Longitude	-73.94°
Y Cordinate	
Time Zone	UTC/GMT -5
Eastern Time (US & Canada)	
Help/ Menu	Cancel
Back/ Home	Next/ Summary

Update date & Time: Tap Yes and Next to update the system date and time.

Clock Mode: Select either 12 hour or 24 hour mode.

Daylight Saving Time: Select ON to automatically set the yearly daylight saving time for your location. Select NO to manually change the daylight savings time for your location. Converting a 12 hr. time to 24 hr. (Military time) is from 1:00 PM to 11:59 PM, then add 12 hours, and from 12:00 AM (midnight) to 12:59 AM subtract 12 hours.

Would you like to set the Date & Time?	
Jan. 12, 2018 6:60 pm	
Update Date & Time	<input checked="" type="checkbox"/> YES <input type="checkbox"/>
Help/ Menu	Cancel
Back/ Home	Next/ Summary

Zip Code / Location Screen: After the IntelliCenter Control System has verified the login information successfully, the Location screen is displayed. Tap any setting to update the location information. Tap Zip Code to enter your Zip code for your location. The US Zip code information will automatically populate the Latitude and Longitude coordinates and Time Zone via a Broadband Internet connection.

Note: If the PC time and date do not match the time and date displayed on the Home screen. Match the PC time and date to the IntelliCenter Control System.

Location: The US Zip code, Latitude, and Longitude coordinates and Time Zone information will automatically populate via a Broadband Internet connection. You can also enter the information manually.

Time Zone (UTC): UTC-05:00 (Brooklyn New York) is a time offset that subtracts five hours from Coordinated Universal Time (UTC). In North America, it is observed in the Eastern Time Zone during standard time, and in the Central Time Zone during the other eight months (see Daylight saving time). The western Caribbean uses it year round.

Note: Time and date synchronization for all systems may take a few minutes.

Setup Wizard [Advanced System Configuration]

Time Set: Tap the Time Set time button and set the current time for your location. Tap Check to save and return to the previous page.

Date Set: Tap the Date Set time button and set the current date. Tap Check to save and return to the previous page.

Offset (min/month): Select ON to offset the current time (minutes) and month.

Configure AUX CIRCUITS: Setup system AUX circuits.

Create AUX Circuit: Tap Yes then Next to configure an AUX Circuits. Tap No then Next to continue to Configure Feature Circuits.

Select an AUX Circuit: Tap on an AUX Circuit name. From the next screen configure the AUX settings:

Circuit Function: Select the Circuit Function.

Circuit Name: Select a Circuit name from the pre-defined list of custom circuits names, then tap Check to save and return to the previous screen. Note: For a complete list of Circuit Names see page 65.

Visible in Features: Yes/No. Select Yes to display the selected circuits in the Feature screen on Home screen.


Egg Timer: Select ON to select a manual time-out of 0-12 hours for this circuit. The Egg Time is a specified time delay (hrs/mins) for the circuit, once it is turned on.

Freeze Protection: Assign freeze protection for this circuit.

Create / Modify: Tap Next after the first AUX Circuit has been configured. The Configure Circuits screen is displayed. Select either Create or Modify to create a new circuit or modify an existing AUX Circuit. After you have configured all of the available AUX Circuits, tap Next to continue to Feature Circuits.

Setup Wizard [Advanced System Configuration]

Configure Feature Circuits: Configure Feature circuits (maximum 32).

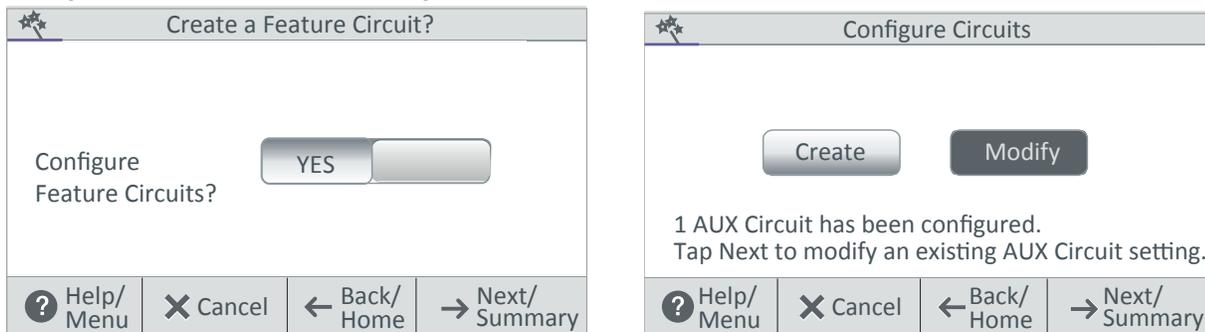

Create / Modify: Tap Next after the first AUX Circuit has been configured. The Configure Circuits screen is displayed. Select either Create or Modify to create a new circuit or modify an existing AUX Circuit. After you have configured all of the available AUX Circuits, tap Next to continue to Configure Valves.

Create Feature Circuit: Tap Yes then Next to configure Feature Circuits. Tap No then Next to continue to Configure Feature Circuits.

Select a Circuit Function: Tap on either Generic or Spillway for the circuit function. From the next screen configure the Feature Circuit settings:

Circuit Function: Select either Generic or Spillway.

Circuit Name: Select a Circuit name from the predefined list of custom circuits names, then tap Check to save and return to the previous screen.

Visible in Features: Yes/No. Select Yes to display the selected circuits in the Feature screen on Home screen. Tap Next to continue.

Egg Timer: Select ON to select a manual time-out of 0-12 hours for this circuit. The Egg Time is a specified time delay (hrs/mins) for the circuit, once it is turned on.

Freeze Protection: Assign freeze protection for this circuit.

VALVES

Configure Valves: Tap Yes then Next to configure a new valve type. Tap No then Next to continue to Configure IntelliChlor SCG.

Intake (standard), Return (standard): To change the valve name, tap Intake or Return. Tap Valve name, enter the new valve name then tap Check to save and return to the previous screen.

Valve A and Valve B (Model i10D): If the optional Valve Module installed, Valve A and Valve B are displayed. To change the valve name, and assign a circuit to Valve A and Valve B, tap Valve A or Valve B on this screen.

Valve Name: To change the valve name, tap Intake or Return. Tap Valve name, enter the new valve name then tap Check to save and return to the previous screen.

Assigned Circuit for Valve A or Valve B: Tap unassigned, and select an AUX circuit for the valve. Tap Check to return to the previous screen. Tap Valve name, enter the new valve name then tap Check to save and return to the previous screen.

Setup Wizard [Advanced System Configuration]

PUMPS

Tap Yes then Next to configure a new pump (Tap No then Next to continue to Configure Heaters).
Create: Tap Create then Next to select a new pump type (IntelliFlo® VF pump, IntelliFlo VS pump, IntelliFlo VSF pump, Single Speed, Dual Speed) and configure the pump settings.

Modify: Tap Modify then Next to display the list of configured pumps. Tap New Pump to add a pump. From this screen you can add or delete pumps from the list. When finished with setting up pump settings, tap Next to continue to the Configure Heaters screen.

IntelliFlo VF Settings: Tap Settings: Pump Type (select a different type of pump), Pump Name (enter a name for the pump), Pump Address: select an address for the pump (1-16). Tap Back twice. Tap Flow Circuits. Tap New Flow Circuits (to change the pump circuit). Flow (GPM): Tap the +/- button to set the flow rate (15-134 GPM). Tap Next twice to add another pump or tap Next twice to configure a heater.

IntelliFlo VS Settings: Tap Settings: Pump Type (select a different type of pump), Pump Name (enter a name for the pump), Pump Address: select an address for the pump (1-16). Tap Back twice. Tap Speed Circuits. Tap New Speed Circuits (to change the pump circuit). Speed (RPM): Tap the +/- button to set the pump speed (450-3450 RPM). Tap Next three times to configure a heater.

IntelliFlo VSF Settings: Tap Settings: Pump Type (select a different type of pump), Pump Name (enter a name for the pump), Pump Address: select an address for the pump (1-16). Tap Back twice. Tap Speed/Flow Circuits. Tap New Speed/Flow Circuits (to change the pump circuit). Type: GPM/RPM): Select either GPM (40-134) or RPM (450-3450). Tap the +/- button to set the speed (RPM) or Flow Rate GPM). Tap Next twice to add another pump or tap Next twice to configure a heater.

Single Speed Pump Settings: Pump Type (select a different type of pump), Pump Name, and Body (pool, spa or pool/spa). Tap Return then Next to continue and add another pump or tap No twice to configure a heater.

Two Speed Pump Settings: Tap Settings: Pump Type (select a different type of pump), Pump Name, Low Speed Circuit and High Speed Circuits. Select a circuit for the low speed and the high speed. You can choose up to (4) four high speed circuits.

HEATERS

Tap Yes then Next to configure a new heater (Tap No then Next to continue to Configure Pumps).

Create: Tap Create then Next to select a new heat source type (Gas, Solar, Heat Pump, UltraTemp or Hybrid) and configure the selected heat source settings.

Heater Name: Enter a name for the heater.

Affiliated Body: Pool, Spa, or Pool and Spa.

Modify: Tap Modify then Next to display the list of configured heaters. Tap New Pump to add a heat source. From this screen you can add or delete a heat source from the list. When finished with setting up heater source settings, tap Next to continue to the Configure Valves screen.

+ Add Heater: Tap Add Heater to display the available heaters. When finished configuring up the heater settings. Tap Next to continue to the Configure Remotes screen.

Setup Wizard [Advanced System Configuration]

REMOTES

QuickTouch® Remote:

- To setup a QuickTouch remote, select Yes. If there is no QuickTouch remote installed, select No and tap Next to continue.
- Remote Name: You can change the name of the remote and assign the remote's four buttons equipment functions to control.
- Enable Remote ON/OFF): To enable the remote select ON. Tap Next to continue.
- Button Assignments: Tap Configure. Tap Button 1, then tap the AUX circuit button for this circuit. Tap Back and repeat for buttons 2-4. When all buttons have been assigned, tap Return arrow until SpaCommand remote screen is displayed. Tap Next to continue.

iS4 Remote

- To setup a iS4 remote, select Yes. If there is no iS4 remote installed, select No and tap Next to continue.
- Remote Name: If needed, you can change the name of the remote.
- Enable Remote ON/OFF): To enable the remote select ON. Tap Next to continue.
- Button Assignments: Tap Configure. Tap Button 1, then tap the AUX circuit button for this circuit. Tap Back and repeat for buttons 2-4. When all buttons have been assigned, tap Return arrow until SpaCommand remote screen is displayed. Tap Next to continue.

iS10 Remote: To setup a iS10 remote, select Yes. If there is no iS10 remote installed, select No and tap Next to continue.

- Remote Name: If needed, you can change the name of the remote.
- Enable Remote (ON/OFF): To enable the remote select ON. Tap Next to continue.
- Remote Channel: Assign a channel from 1-4. Tap Return.
- Affected Pump: Select pump assigned to this remote.
- Button Assignments: Tap Configure. Tap Button 1, then tap the AUX circuit button for this circuit. Tap Back and repeat for buttons 2-9. When all buttons have been assigned, tap Return arrow until SpaCommand remote screen is displayed. Tap Next to continue.

SpaCommand® Remote: To setup a SpaCommand remote, select Yes. If there is no SpaCommand remote installed, select No and tap Next to continue.

- Remote Name: If needed, you can change the name of the remote.
- Enable Remote (ON/OFF): To enable the remote select ON. Tap Next to continue.
- Remote Channel: Assign a channel from 1-4. Tap Return.
- Affected Pump: Select pump for this remote.
- Button Assignments: Tap Configure. Tap Button 1, then tap the AUX circuit button for this circuit. Tap Back and repeat for buttons 2-9. When all buttons have been assigned, tap Return arrow until SpaCommand remote screen is displayed. Tap Next to continue.

Chemical Controllers: IntelliChem® Controller and IntelliChlor® SCG

Note: One IntelliChem Controller and one IntelliChlor® SCG can be installed one IntelliCenter Control System.

IntelliChem Controller: Tap Yes then Next to configure one IntelliChem. Tap No for no IntelliChem Controller installed. IntelliChem Settings: Select the Channel (1-16) for the device.

Body 1 is assigned Pool/Spa for shared equipment or choose pool or spa for single body systems, Body 2 is assigned to Spa for shared equipment systems. This screen displays the body of water assigned to the device.

IntelliChlor SCG: Tap Yes then Next to configure one IntelliChlor SCG. Tap No for no IntelliChlor SCG installed.


Body 1 is assigned Pool/Spa for shared equipment or choose pool or spa for single body systems, Body 2 is assigned to Spa for shared equipment systems. This screen displays the body of water assigned to the device.

Chlorination Output Levels: Pool /Spa Output Levels: Set the Pool and Spa chlorine output levels.

The system can only generate chlorine while the filter pump is operating. Set the run time percentage to produce chlorine. The higher the percentage the more chlorine is produced. Lower the percentage for less chlorine production. See page 80 for information about the IntelliChem Controller and IntelliChlor SCG.

Setup Wizard [Advanced System Configuration]

SCHEDULES

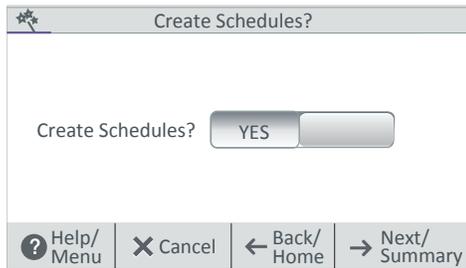

If Yes then Next to configure system schedules.

If no schedules are required at this time, tap No then Next to continue to the Setup Wizard Summary screen.

Create / Modify: Tap Create then Next and choose a circuit to schedule. Tap Modify to change an existing schedule.

Create a Schedule: Tap Create then Next. From the Schedules screen, tap Add Schedule and choose the circuit. Tap Next. From the Schedule Settings screen, tap the Schedule name button (Weekly or One Time) and select the days to run the schedule. Tap Check when finished to save the schedule.


Start Time: From the Select Start Time screen, tap the Up/Down arrow button to set the Start time for the schedule. Tap Check to save and return to the previous screen. Tap Next to continue to the Stop Time screen.

Stop Time: From the Select Start Time screen, tap the Up/Down arrow button to set the Start time for the schedule. Tap Check to save and return to the previous screen. Tap Next to continue to the next screen. Tap Yes to add more schedules, if not tap No to continue to the Setup Wizard Summary screen.

SUMMARY


Setup Wizard Summary (Edit Screen)

From the Setup Summary screen you can review the changes you have made to the system. If modifications are necessary, tap the option name and make the changes. If everything appears to be correct, press Next to continue to the Setup Wizard Complete screen.

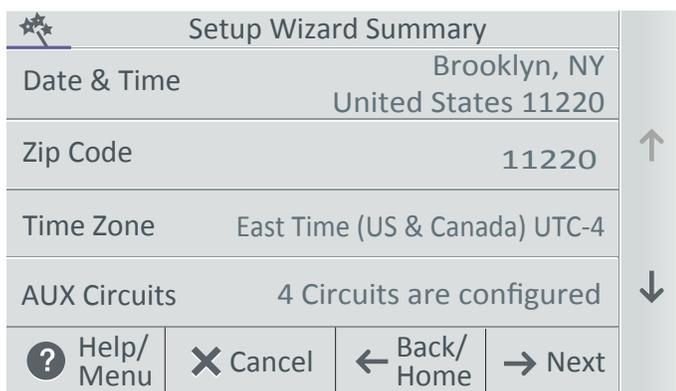

Setup Wizard [Advanced System Configuration]

Setup Wizard Complete

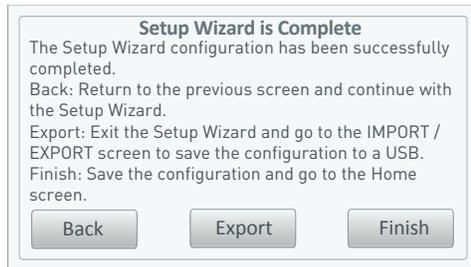

Back: Return to the previous screen and continue with the Setup Wizard.

Export: Go to the Export System configuration screen. Tap Yes then Next, select a folder location, tap Check to save the export file. Tap OK to return to Wizard Complete screen. Tap No then Next to return to the Wizard Complete screen. Tap No IMPORT / EXPORT screen to save the configuration to a USB.



Export System Configuration: Tap Export to USB flash drive to export the current system configuration.

Export to Local: Tap Export to Local to save the current system configuration.

Back: Return to the Create Schedule screen.

Finish: Save the configuration and go to the Home screen. "Applying Settings" is displayed, then the Home screen is displayed. The Setup Wizard has been successfully completed.



Home Screen

Screen Settings

To access the screen settings, from the Home screen, tap Settings > Advanced System Configuration > General > Day/Night Theme,

Back Light: Brightness Level: Adjust the screen brightness level from 33 to 100%.

Dimness Level: Adjust the contrast level from 10 to 100%.

Dim Display (min): While in other screens, sets the time to return to the Home screen (from 0 to 240 minutes (20 hrs).

Turn Off Display (min): Set the time to turn off the screen from 0 to 240 minutes (20 hrs).

Note: The time set to turn off the screen also affects the start time of the Deep Sleep feature (Wireless Remote only), see below for details.

Battery Conservation Mode (Deep Sleep): Tap Deep Sleep Mode to turn on this feature. The default setting is ON. This feature allows you to save the battery life while the wireless remote is in its cradle. Deep Sleep (Hr): Deep Sleep time can be set from 1 to 3 hours (Default 3 hrs.). Select when you want the device to go to sleep to conserve battery life.

IntelliCenter™ Control System Menu

Home Screen

- Pool Screen
- Spa Screen
- Features (Individual/Groups)
- Lights ((Individual/Groups)
- Schedule (Pump schedule)
- Usage
- Chemistry (IntelliChem® Controller/IntelliChlor® SCG)
- Status

Settings

- Service Mode
- Vacation Mode
- Support
- General:** Location, Date & Time, Units (Fahrenheit/Celsius), Features and Lights List Order, General List Order, Backlight (Deep Sleep: Wireless Control Panel only, Temperature Sensor Calibration, Day / Night Themes, Manual Operation Priority, Manual Heat, Chemistry Readings Badge, Badge Colors.
- Alerts and Notifications:** Choose which system status, alerts and warnings badges to display on the Home screen Status icon.
- Security:** (Passcode Protect)
- Pentair User Portal:** (intellicercenter.com)
- Groups:** Configure groups of AUX circuits, Light circuits and Feature circuits.
- System Reboot:** Reboot the panel

Advanced System Configuration

Installation Setup:

- Body Configuration,Circuits, Pumps, Heaters, Valves, Chemistry, Pool/Spa Cover.
- Remotes Setup:** iS4, QuickTouch II, iS10, SpaCommand remotes
- Network and WiFi Setup:** Configure Ethernet, Connect to a Wireless Network, Adjust Wireless Transmit Power, Internet Connection Test, Reboot WiFi Device.
- IntelliCenter Wireless Remote Setup:** Configure the Address and Panel # for wireless remote.
- Delays:** Valve Delay, Heater Cool Down, Freeze Cycle Time (min), Spa Freeze, Override (min), Override Delays.
- System:** System Information, Detected Hardware, System Diagnostic Information, Firmware Update (Update from Panel, Update from USB, Update from Ethernet), Factory Diagnostics.
- Import/Export:** Import System Configuration, Export System Configuration.
- Restore Factory Defaults:** Restore system to factory configuration.
- Setup Wizard:** Step-by-step system configuration.

IntelliCenter™ Control System Test




The following describes how to test the IntelliCenter Control System Outdoor Control Panel to activate the heater, valves and pumps. This test assumes that all system equipment has been properly installed and connected to the IntelliCenter Control System Load Center.

Testing Valve Actuators and Pumps

Use the following steps to test the valve actuators (CVA24T) for proper rotation for i5PS IntelliCenter Control System (shared equipment).

To test the valve actuators and pump:

1. Switch on the main circuit breakers to apply power to the IntelliCenter Control System Load Center.
2. **Pool and Spa Pump and Heater Test:** From the Home screen, tap **Pool > Pool (or tap Spa > Spa)** to activate the pool pump (or Spa pump) and heater. **Tap the Heat Mode** button and select a different heat source. The Heat Mode button indicator is Red to indicate the heater is on, Blue is heater cool down mode. When the heater is on a flame indicator is shown on the Home screen pool Green badge. **Tap Return** to return the Home screen.

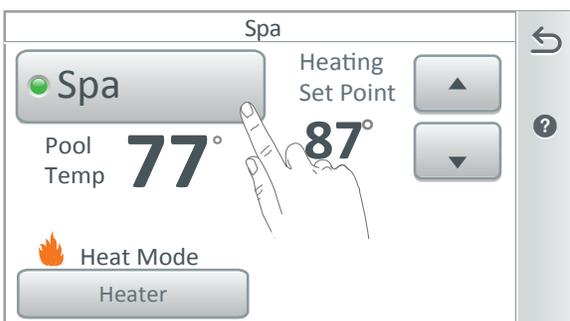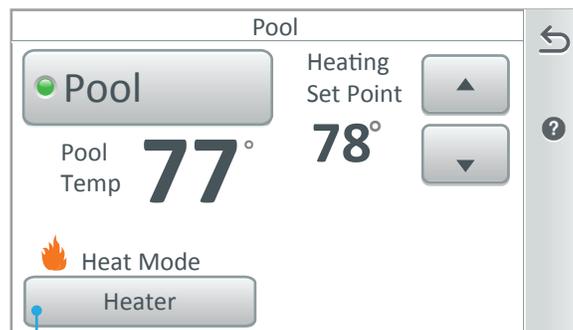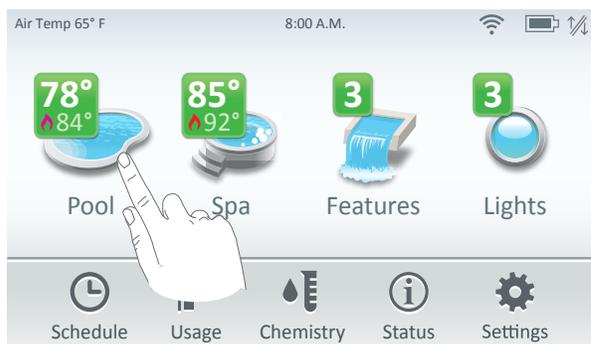

Heat Mode button indicator:




Pool Badge Icons: A Flame icon is displayed with the current heat set point temperature. The **Spa badge icon** indicates that the heat source has been called for. A Snow Flake icon indicates the UltraTemp Heat Pump, Hybrid Heater or Solar Heat (if enabled) is in cooling mode. A Sun icon indicates solar heat is active. Select the heat source from the Select Heat Source screen.

Spa Manual Heat ON/OFF Feature: Spa Manual Heat ON/OFF Feature: If the Heat Enabled (Default ON) feature is selected (see Spa Body Configuration > Spa Settings) when the Spa pump button (or from the Spa-Side remote, or Wireless Controller) is manually turned on, the pump will turn on and the heater will begin to heat the spa (even if the heater is set to OFF). This feature allows you to program the pool pump to filter daily with the heater set to off, and then be ready to heat whenever the Spa button is pressed.

Testing Valve Actuators and Pumps (Continued)

3. **Testing equipment auxiliary circuits:** From the Home screen, tap **Settings > Service Mode > Service**. Note: Service Mode is displayed on the Home screen.
4. Tap **Manual Circuit Control**. To test the equipment, tap the displayed circuits (pump, aux, solar, heater) to confirm proper operation. When the pool circulation pump is on water will flow from the pool and returned into the pool. The Green radio button is lit when equipment is manually switched on. Grey indicates the circuit is off.
5. After testing the auxiliary circuits, tap the **Return arrow** to return to the Service Mode screen. Tap **Auto** to return the system to operating mode. Tap and hold the **Return arrow** to return to the Home screen.

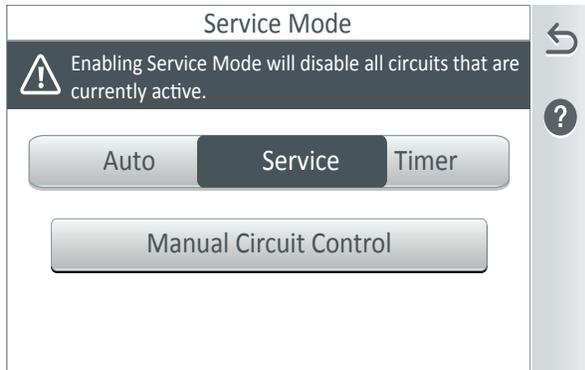

6. **Manual Test Valve Actuators:** Set both valve actuators (CVA-24T) for suction and return. Use the toggle switch on the rear of the CVA-24 to withdraw and return water from the pool.
Note: With the circulation pump operating, if the water is not being removed and returned to the pool, it may be necessary to toggle the valve ON1 and ON2 switch (or vice versa).

Solar Valve Test

1. Switch on the main circuit breakers to apply power to the IntelliCenter™ Control System load center.
2. Check that Solar Valve is in *solar bypass* position, diverting water away from solar panels. If Solar Valve is staged incorrectly (diverting water to the solar panels), reverse switch on back of Valve Actuator (change from ON1 to ON2, or vice-versa). The Valve Actuator will automatically rotate to the correct position.
3. Check that Solar Valve has rotated from the “solar bypass” position to the “solar” position, diverting water through the solar panels.
4. The system is now ready to be operated as desired.


Installing the Outdoor Control Panel in the Load Center or Power Center

⚠ WARNING BEFORE INSTALLING THE OUTDOOR CONTROL PANEL IN THE LOAD CENTER, ALWAYS SWITCH OFF AC POWER AT THE MAIN HOUSE CIRCUIT BREAKERS.

The IntelliCenter™ Control System Outdoor Control Panel installs in the top part of the Load Center enclosure. The control panel controls and distributes high voltage power to the valve actuators, control pumps, lights, and heater operations. The optional IntelliCenter Control System Indoor Control Panel, Wireless Controller, SpaCommand®, iS10, iS4 and QuickTouch® Remote Controllers also controls these and other functions, such as pool and spa lights.

To install the Outdoor Control Panel:

1. Unlatch the front door spring latch and open the front door of the Load Center enclosure.
2. Loosen the two (2) retaining screws securing the high voltage cover-panel. Remove the HIGH VOLTAGE COVER PANEL from the enclosure (as shown on below).
3. Remove the Outdoor Control Panel from its packaging.
4. Mount the Outdoor Control Panel in the top part of the Load Center. Secure the lower edge of the control panel with the two retaining screws. Once secured, the Control Panel can hinge out and down to access the circuit board and the low voltage connections.
5. When finished connecting the low voltage connections on the circuit board, close the hinged control panel and secure it with the two retaining screws. Reinstall the High Voltage Panel: Insert the panel's three tabs into the lower slots on the enclosure. Secure the panel with the two (2) retaining screws. Close the front door and secure with the latch.

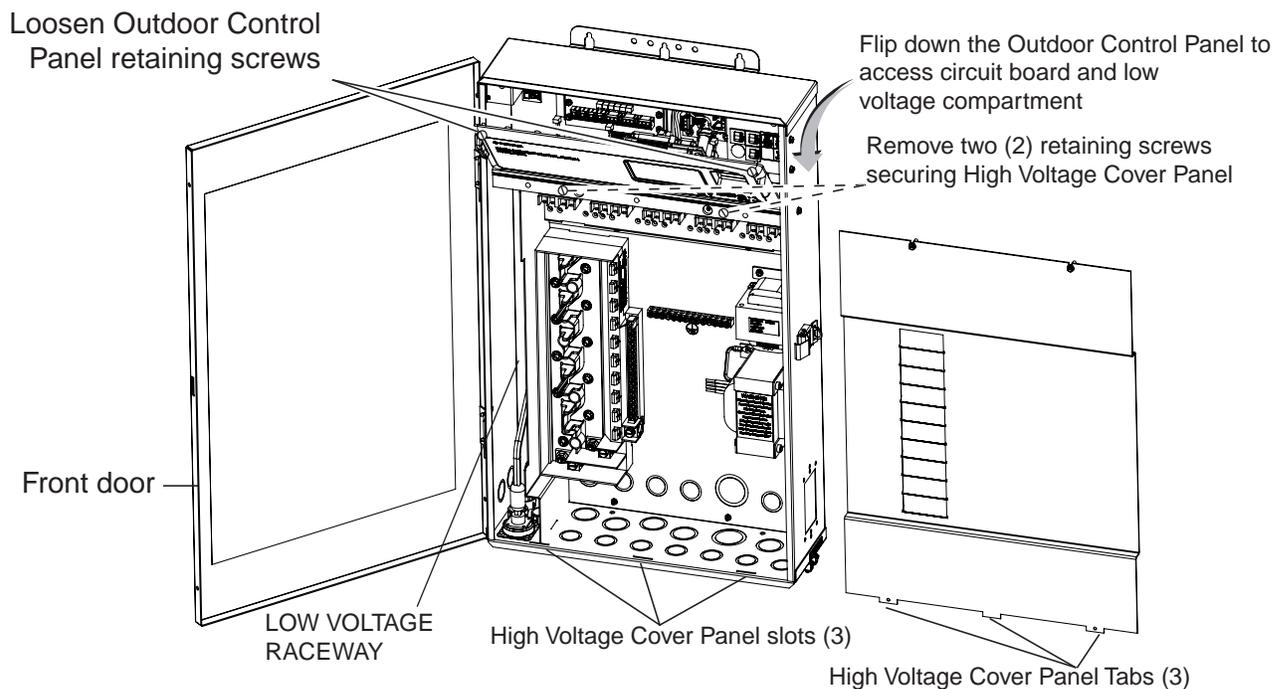


IntelliCenter™ Load Center Control System Load Center (front view)
(High Voltage Cover Panel removed)

IntelliCenter™ Control System Personality Boards

For IntelliCenter Control System can be configured for single body or dual body (shared equipment). The base configuration is the i5P (five auxiliary pool circuits plus a filter pump circuit for a single body of water). By adding a Personality circuit board the system can be expanded to support pool and spa (i5PS - shared equipment, dual body of water) or dual equipment.

The following are IntelliCenter Control System Personality Models:


- P/N 521909 IntelliCenter Control System i5P, Single Body
- P/N 521910 IntelliCenter Control System i8P, Single Body
- P/N 521911 IntelliCenter Control System i10P, Single Body
- P/N 521912 IntelliCenter Control System i5PS, Shared Equipment
- P/N 521913 IntelliCenter Control System i8PS, Shared Equipment
- P/N 521914 IntelliCenter Control System i10PS, Shared Equipment
- P/N 521915 IntelliCenter Control System i10D, Dual Equipment
- P/N 522033 IntelliCenter Control System i5X Expansion
- P/N 522034 IntelliCenter Control System i10X Expansion

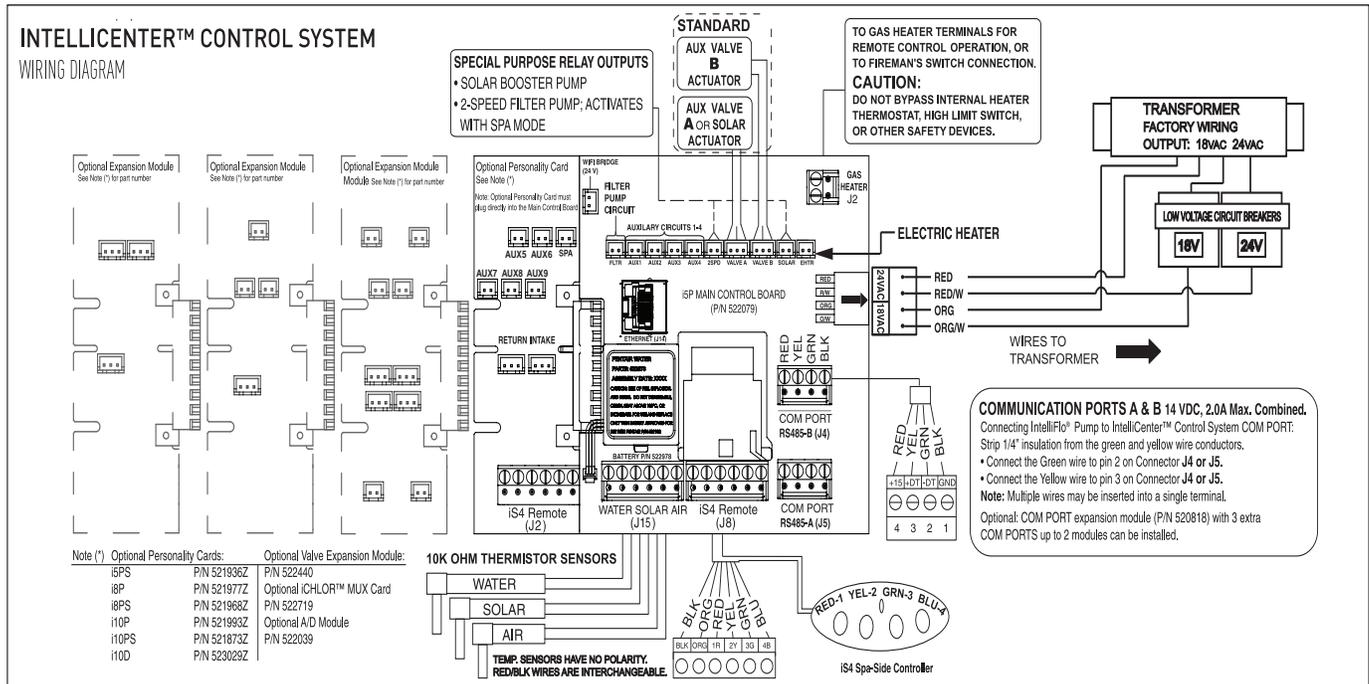


IntelliCenter Control System Circuit Board
(with optional Expansion Boards shown)

IntelliCenter™ Control System Outdoor Control Panels

For IntelliCenter Control System Outdoor Control Panel Wiring Diagrams, see pages 58-59.

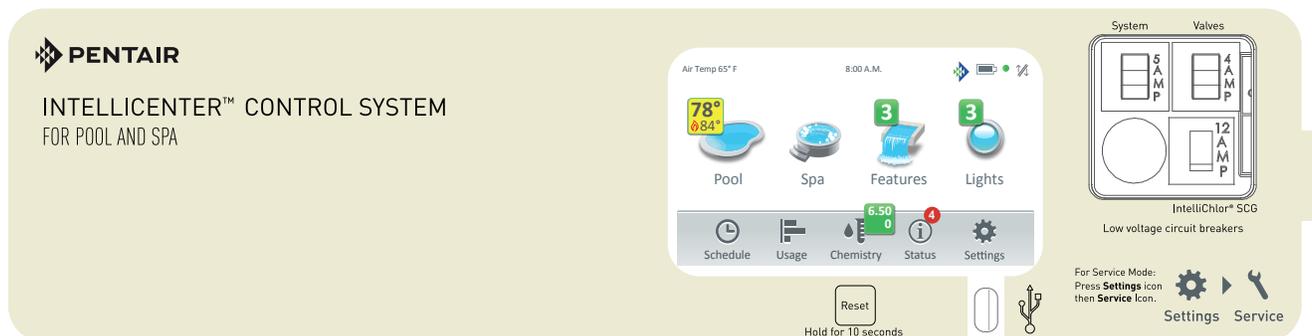

IntelliCenter Control System Outdoor Control Panel (see page 63 for part numbers)

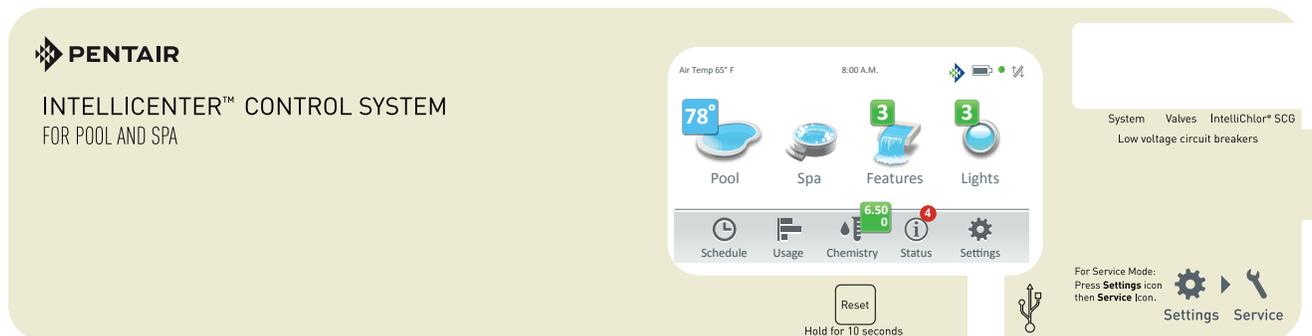

IntelliCenter Control System Outdoor Control Panel (Retrofit for EasyTouch® or IntelliTouch® Control System Load Center)



IntelliCenter Control System Wireless Controller
P/N 522036 (Optional)



IntelliCenter Control System Indoor Control Panel
P/N 522035 (Optional)

IntelliCenter™ Control System Load Center Wiring Diagram

WARNING
AVERTISSEMENT

PREVENT ELECTROCUTION
INSTALL AT LEAST 5 FEET (1.5 m) FROM INSIDE WALL OF POOL OR SPA.

ÉVITER TOUT RISQUE D'ÉLECTROCUTION
INSTALLER AU MOINS 1.5 MÈTRES DU MUR INTÉRIEUR DE LA PISCINE OU DU SPA.

DISCONNECT ALL SUPPLY CONNECTIONS BEFORE SERVICING. THIS APPLIANCE MAY HAVE UP TO 11 SUPPLY CONNECTIONS.

DÉBRANCHER TOUTES LES CONNEXIONS AVANT DE TRAVAILLER SUR CETTE UNITÉ. CET APPAREIL PEUT AVOIR JUSQU'À 11 CONNEXIONS DE L'ALIMENTATION.

PENTAIR
INTELLICENTER™ CONTROL SYSTEM
WIRING DIAGRAM

SPECIAL PURPOSE RELAY OUTPUTS
• SOLAR BOOSTER PUMP
• 2-SPEED FILTER PUMP; ACTIVATES WITH SPA MODE

STANDARD
AUX VALVE B ACTUATOR
AUX VALVE A (ON SOLAR) ACTUATOR

TO GAS HEATER TERMINALS FOR REMOTE CONTROL, OPERATION, OR TO FREEMAN'S SWITCH CONNECTION, CAUTION:
DO NOT BYPASS INTERNAL HEATER THERMOSTAT, HIGH LIMIT SWITCH, OR OTHER SAFETY DEVICES.

TRANSFORMER
FACTORY WIRING
OUTPUT: 190V 24VAC

ELECTRIC HEATER

10K OHM THERMISTOR SENSORS
WATER
SOLAR
AIR

2-SPEED FILTER PUMP OPTION
FILTER PUMP RELAY
120V LINE VOLTAGE
2-SPEED RELAY
HIGH LOW COM MOTOR TERMINALS

COMMUNICATION PORTS A & B 14 VDC, 2.0A Max. Combined
Connecting IntelliCenter™ Pump to IntelliCenter™ Control System COM PORT:
Strip 1/4" insulation from the green and yellow wire conductors.
Connect the Green wire to pin 2 on Connector J4 or J5.
Connect the Yellow wire to pin 3 on Connector J4 or J5.
Note: Multiple wires may be inserted into a single terminal.
Optional COM PORT expansion module (PN 520818) with 3 extra COM PORTS up to 2 modules can be installed.

Note (*) Optional Personality Cards:

SPF	PN 521582	Optional 1/2" Expansion Module
BP	PN 521972	PN 522448
BP	PN 521582	Optional Pool Cover Interface
MURRAY	PN 521982	A23 Module
HP	PN 521982	PN 522038
HPFS	PN 521732	
HD	PN 522042	
HD	PN 522972	

10K OHM THERMISTOR SENSORS
WATER
SOLAR
AIR
THERMISTORS HAVE NO POLARITY.
REAR TERMINALS ARE INTERCHANGEABLE.

IS4 Spa-Size Controller

APPROVED BREAKER

MANUFACTURER	SUITABLE (10,000 AIC)		BRANCH CIRCUIT BREAKER TYPES	
	SINGLE (1-POLE)	TWIN (2-POLE)	DUPLEX	GFCI
SIEMENS	QP	QT	QT	QFP
MURRAY	MP-T	MP-T	MH-T	MFA-GT
PENTAIR	-	-	-	PSF*
EATON	BR	BR	BRD	GFCB
CUTLER HAMMER	BR	BR	BRD	GFCB
SCHNEIDER	HOM	HOM	HOMT	HOM-GFI
SQUARE D	HOM	HOM	HOMT	HOM-GFI
GE	THQL	THQL	-	THQL-GFI
Maximum Circuit Breaker Current Rating A.	70A, 80A.	80A.	50A.	

Circuit Breaker Current Rating Not to Exceed:
80A maximum for Single (one) Pole & Twin (two) Pole TYPE Breakers.
50A maximum for Duplex & Quadplex TYPE Breakers (2 circuits per space).
Maximum continuous load not to exceed 80% of the Ampere rating of any over current device installed.
*Recommended for use with Pentair IntelliCenter™ pumps.

WIRE INSTALLED IN CONNECTOR

MAIN LUGS L1 & L2 NEUTRAL BAR GROUND BAR	TORQUE LB. IN.	RELAY CONTACT OUTPUT General: 25A, 277VAC
20 - 3 AWG	50 LB IN.	PUMP
4 AWG	45 LB IN.	LIGHT
6 AWG	35 LB IN.	1.5 HP 120 VAC
8 AWG	25 LB IN.	1.5 KW 120 VAC TUNGSTEN
14 - 10 AWG	20 LB IN.	3 HP 277 VAC
		20 FLA/120 LRA, 120 VAC
		17 FLA/102 LRA, 277 VAC
		4.8 KW 240 VAC TUNGSTEN
		20A, 277 VAC BALLAST

CAUTION: RISK OF ELECTRIC SHOCK, READ INSTALLATION MANUAL.
AVERTISSEMENT: À RISQUE DE CHOC ÉLECTRIQUE, LIRE LE MANUEL D'INSTRUCTIONS.
IMPORTANT: This Control Panel must be installed in compliance with the National Electrical Code (NFPA 70) including article 650, as well as all local Authority Having Jurisdiction requirements. Mount enclosure with conduit holes down. The Main and Neutral lugs are suitable for 14 AWG to 20 AWG conductors. See Table for suitable Listed Circuit Breakers. Install only APPROVED circuit breakers. See Table for suitable Listed Circuit Breakers. See Circuit Breaker Case Marking for wire size and torque requirements. This control is not provided with integral GFCI protection for the lighting circuit. When this control is used to power or switch an underwater luminaire, suitable GFCI protection shall be provided in the field. Follow manufacturers' instructions for installing and testing of Ground Fault Circuit Breakers (GFCB) and Interrupters (GFCI); (Canada Class A GFCI). An APPROVED GFCI duplex receptacle may be installed in the rectangular knockout provided on the right side of the enclosure. If the panel is installed outdoors, an APPROVED TYPE 3R (RAINPROOF) Cover MUST be installed over the wiring device in the rectangular opening. Make sure connections inside the low voltage compartment are well insulated, connectors properly seated and wiring lugs tightened. After wiring is completed, install front panel over wiring compartment opening and close off any unused breaker openings with filler plates.

TYPE 3R "Rainproof" (IPX3). Enclosure suitable for INDOOR or OUTDOOR USE.
Control Panel suitable for SWIMMING POOL/SPA applications.
Electrical Rating: 120/240VAC 150 AMP Single Phase (3 Wires).
The input line to this control panel should be protected by a 240 VAC circuit breaker rated at NO MORE than 150 Amperes maximum.
Control Transformer Input: 120VAC, 2A; 240VAC, 1A, 50/60Hz.
SCG Transformer Input (if equipped): 120VAC, 2.5A; 240VAC, 1.3A, 50/60 Hz.
Short Circuit Current Rating: 5000 RMS SYMMETRICAL AMPERES.
Use COPPER CONDUCTORS ONLY. Use 14 AWG to 2/0 AWG, 60/75°C Copper conductors for all field wiring.
SEUL CONDUCTEURS DE CUivre DOIVENT ÊTRE UTILISÉS.

WIRING TRANSFORMER

INTELLICHLOR® SALT CHLORINE GENERATOR OPTION
TRANSFORMER INPUT:
120VAC @ 2.5A, 50/60 Hz
240VAC @ 1.3A, 50/60 Hz
WIRING CONFIGURATION FACTORY SET FOR 240V.
WARNING: DISCONNECT LOAD CENTER POWER BEFORE SERVICING SCG TRANSFORMER
Connect the Salt Chlorine generator transformer to the FILTER PUMP RELAY ONLY. The chlorinator should only be powered when the Filter Pump is ON.

SCG TRANSFORMER WIRING

240V Line Voltage Transformer Leads
120V — YELLOW
120V — VIOLET/BLUE
120V — BLACK
120V — WHITE

120V Line Voltage Transformer Leads
120V — YELLOW
120V — VIOLET/BLUE
NEUTRAL — WHITE

FROM MAIN PANEL 240 VAC 150 AMP MAX.

WARNING
DO NOT USE THE INTELLICENTER CONTROL SYSTEM TO CONTROL AN AUTOMATIC POOL COVER. WIRING CAN BECOME ENTRAPPED UNDER THE COVER. POOL COVER SHOULD BE HEAVY AND SELF-RELEASING.

AVERTISSEMENT
ON NE PAS UTILISER LE SYSTÈME DE CONTRÔLE INTELLICENTER POUR CONTRÔLER UNE COUVERTEUSE DE PISCINE AUTOMATIQUE. LE WIRING PEUT ÊTRE ENFERMÉ SOUS LA COUVERTEUSE. LA COUVERTEUSE DOIT ÊTRE LÉGERE ET SE DÉBRANCHER D'ELLE-MÊME.

UL LISTED
POOL/SPA CONTROLLER
5K42

PREVENT WATER DAMAGE
KEEP DOOR CLOSED
PRÉVENIR LES DÉGÂTS D'EAU.
GARDEZ LA PORTE FERMÉE.

Sanford NC • Moorpark CA

Customer Service 800-831-7133

IntelliCenter Control System Load Center Wiring Diagram

IntelliCenter Control System Installation Guide

IntelliCenter™ Control System Power Center Wiring Diagram

WARNING

AVERTISSEMENT

PREVENT ELECTROCUTION
INSTALL AT LEAST 5 FEET (1.5m) FROM INSIDE WALL OF POOL OR SPA.

ÉVITER TOUT RISQUE D'ÉLECTROCUTION
INSTALLER AU MOINS 1.5 MÈTRES DU MUR INTÉRIEUR DE LA PISCINE OU DU SPA.

DISCONNECT ALL SUPPLY CONNECTIONS BEFORE SERVICING. THIS APPLIANCE MAY HAVE UP TO 11 SUPPLY CONNECTIONS.

DÉBRANCHER TOUTES LES CONNEXIONS AVANT DE TRAVAILLER SUR CETTE UNITÉ. CET APPAREIL PEUT AVOIR JUSQU'À 11 CONNEXIONS DE L'ALIMENTATION.

PENTAIR INTELLICENTER™ CONTROL SYSTEM WIRING DIAGRAM

10K OHM THERMISTOR SENSORS: WATER, SOLAR, AIR. **TERMINALS HAVE NO POLARITY. REDDUB WIRING ARE INTERCHANGEABLE.**

COMMUNICATION PORTS A & B 14 VDC, 2.0A Max. Combined.
Connecting IntelliChlor® Pump to IntelliCenter™ Control System COM PORT.
Strip 1/4" insulation from the green and yellow wire conductors.
• Connect the Green wire to pin 2 on Connector J4 or J5.
• Connect the Yellow wire to pin 3 on Connector J4 or J5.
Note: Multiple wires may be inserted into a single terminal.
Optional COM PORT expansion module (PN S20816) with 3 extra COM PORTS up to 2 modules can be installed.

POWER RELAYS: FILTER PUMP, AUX 1-4, 2-SPEED RELAY (AUX9), AUX 5-8.

2-SPEED FILTER PUMP OPTION: 120V LINE VOLTAGE, 2-SPEED RELAY, HIGH/LOW/MOTOR TERMINALS.

PREVENT WATER DAMAGE KEEP DOOR CLOSED

PRÉVENIR LES DÉGÂTS D'EAU. GARDEZ LA PORTE FERMÉE.

CAUTION RISK OF ELECTRIC SHOCK. READ INSTALLATION MANUAL.

IMPORTANT: This Control Panel must be installed in compliance with the National Electrical Code (NFPA 70) including article 680, as well as all local Authority Having Jurisdiction requirements. Mount enclosure with conduit holes down. This control is not provided with integral GFCI protection for the lighting circuit. When this control is used to power or switch an underwater luminaire, suitable GFCI protection shall be provided in the field. Follow manufacturers' instructions for installing and testing of Ground Fault Circuit Breakers (GFCB) and Interrupters (GFCI); (Canada Class A GFCI). An APPROVED GFCI duplex receptacle may be installed in the rectangular knockout provided on the right side of the enclosure. If the panel is installed outdoors, an APPROVED TYPE 3R (RAINPROOF) Cover MUST be installed over the wiring device in the rectangular opening. Make sure connections inside the low voltage compartment are well insulated, connectors properly seated and wiring lugs tightened. After wiring is completed, install front panel over wiring compartment opening.

RELAY CONTACT OUTPUT	
General: 25A, 277VAC	
PUMP	LIGHT
1.5 HP 120 VAC	1.5 KW 120 VAC TUNGSTEN
3 HP 277 VAC	4.8 KW 240 VAC TUNGSTEN
20 FLA/102 LRA, 120 VAC	20A, 277 VAC BALLAST
17 FLA/102 LRA, 277 VAC	

WARNING

DO NOT USE THE INTELLICENTER CONTROL SYSTEM TO CONTROL AN AUTOMATIC POOL COVER. SWIMMERS CAN BECOME ENTRAPPED UNDER THE COVER, WHICH COULD RESULT IN INJURY AND/OR DEATH.

TYPE 3R "Rainproof" (IPX3), Enclosure suitable for INDOOR or OUTDOOR USE. Control Panel suitable for SWIMMING POOL/SPA applications. Electrical Rating: 120/240VAC 150 AMP Single Phase (3 Wire). The input line to this control panel should be protected by a 240VAC circuit breaker rated at NO MORE than 150 Amperes maximum. Control Transformer Input: 120VAC, 2A; 240VAC, 1A, 50/60Hz. SCG Transformer Input (if equipped): 120VAC, 2.5A; 240 VAC, 1.3A, 50/60 Hz. Short Circuit Current Rating: 5000 RMS SYMMETRICAL AMPERES. Use COPPER CONDUCTORS ONLY. Use 14 AWG to 6 AWG, 60/75°C Copper conductors for all field wiring.

Enclosure suitable for INDOOR or OUTDOOR USE. Pour une utilisation en intérieure comme en extérieure.

CONTROL TRANSFORMER WIRING

INTELLICHLOR® SALT CHLORINATOR GENERATOR OPTION

TRANSFORMER INPUT: 120VAC @ 2.5A, 50/60 Hz • 240VAC @ 1.3A, 50/60 Hz
WIRING CONFIGURATION FACTORY SET FOR 240V
WARNING! DISCONNECT LOAD CENTER BEFORE SERVICING SCG TRANSFORMER. Connect this chlorinator transformer to the FILTER PUMP RELAY ONLY. The chlorinator should only be powered when the Filter Pump is ON.


SCG TRANSFORMER WIRING

Sanford NC • Moorpark CA

Customer Service 800-831-7133


IntelliCenter Control System Power Center Wiring Diagram

IntelliCenter Control System Installation Guide

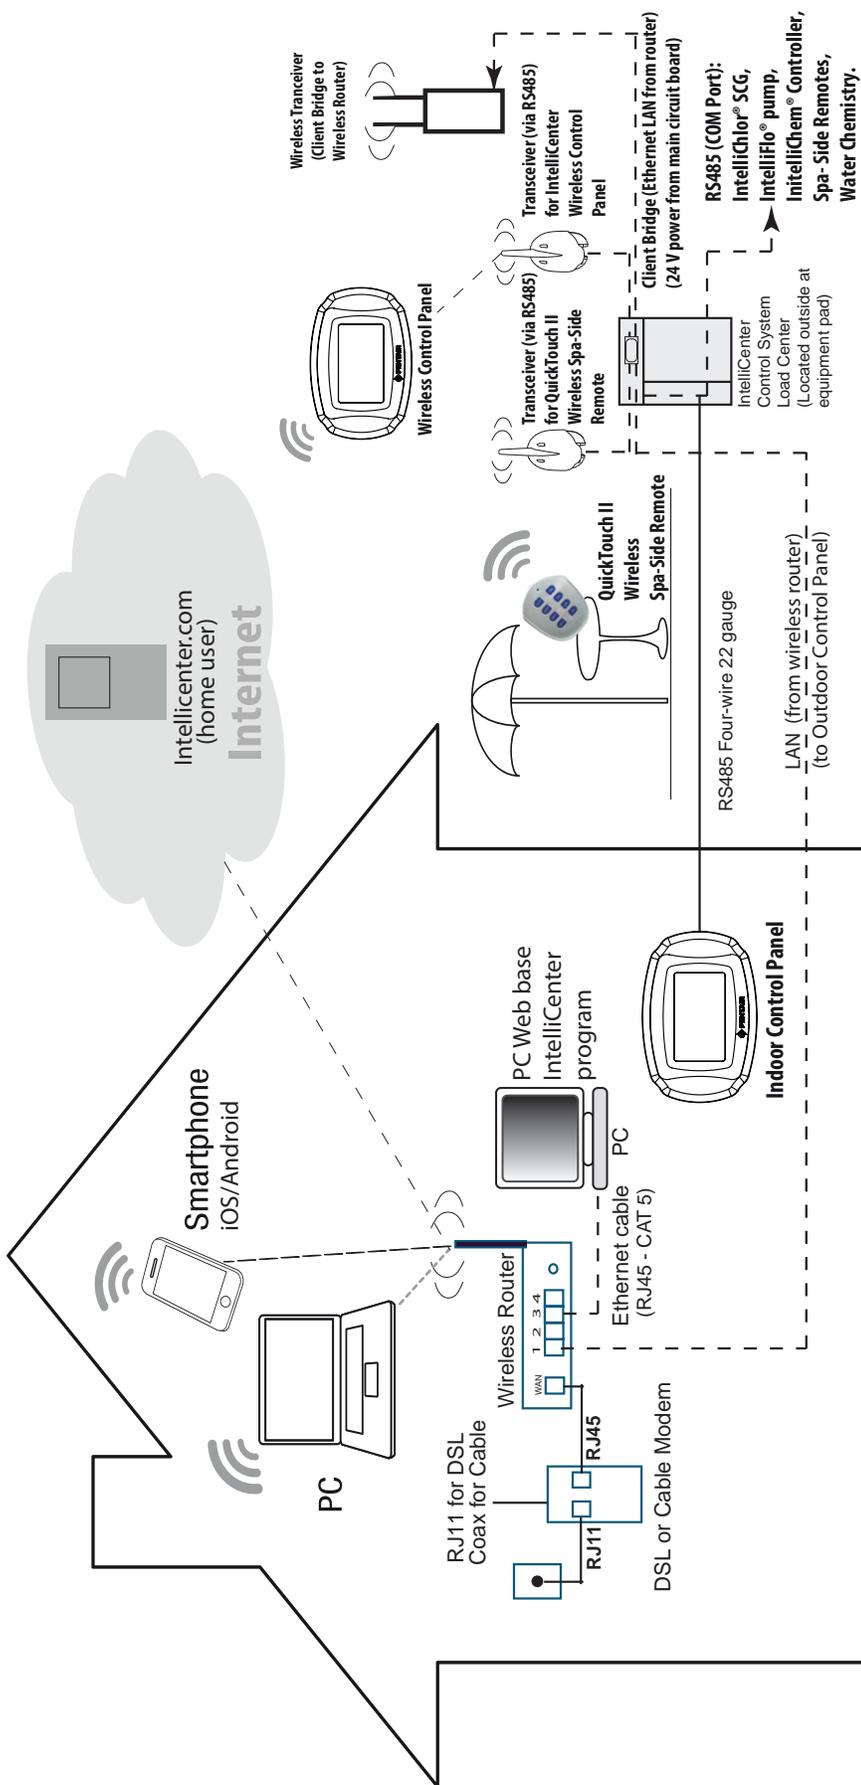


IntelliCenter™ Control System Wireless Connections


IntelliCenter™ Control System Optional Personality Cards

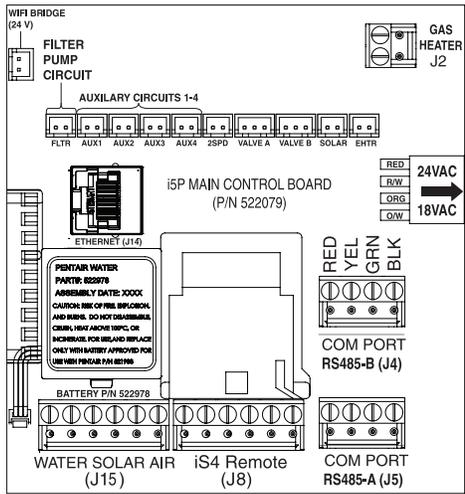


i5P, Single Body
(P/N 521909)

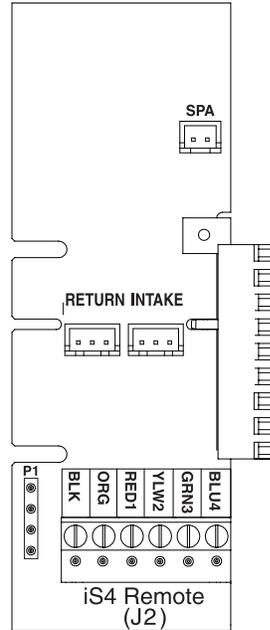


i5PS, Shared Equipment
(P/N 521912)

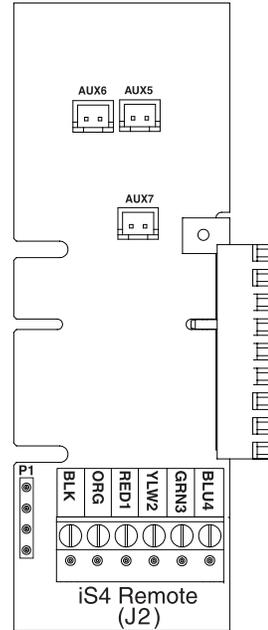


i8P, Single Body
(P/N 521910)

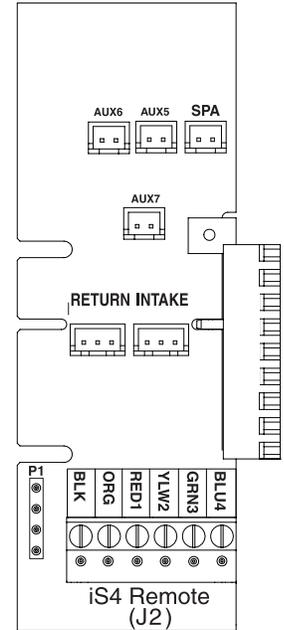


i8PS, Shared Equipment
(P/N 521913)

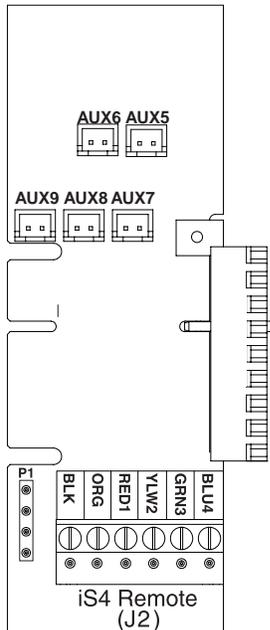

i10P, Single Body
(P/N 521911)

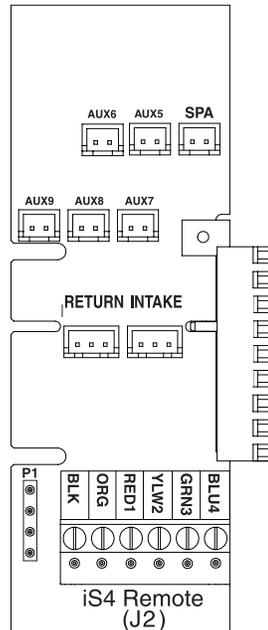


i10PS, Shared Equip.
(P/N 521914)

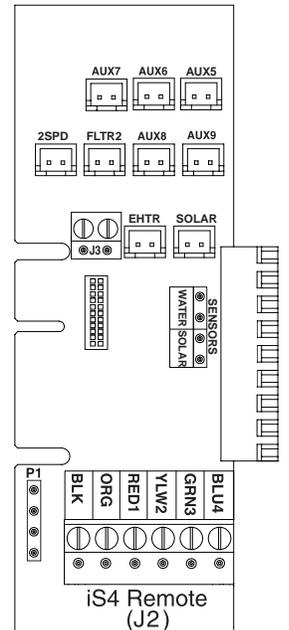


i10D, Dual Equip.
(P/N 521915)


IntelliCenter™ Control System Optional Personality Cards

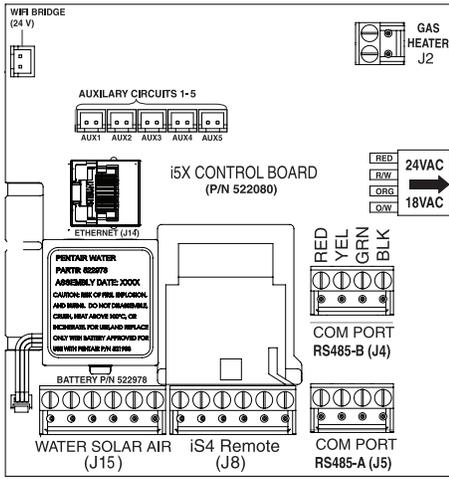


i5X Expansion
(P/N 522080)

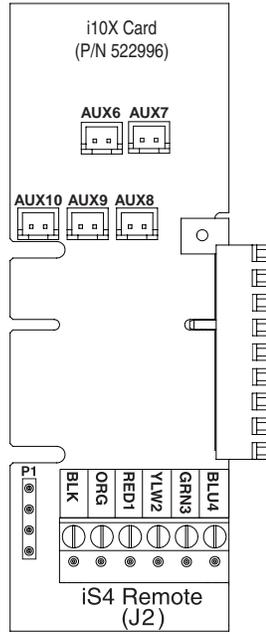

i10X Expansion
(P/N 522996)
(Requires i5X)

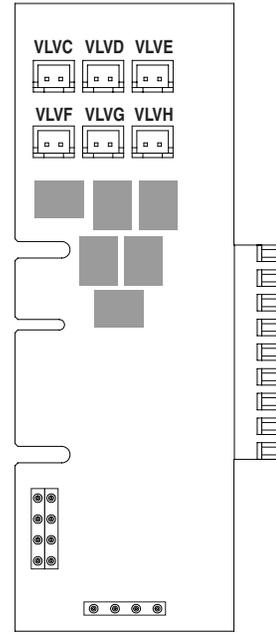

Valve Expansion Module
(P/N 522038)

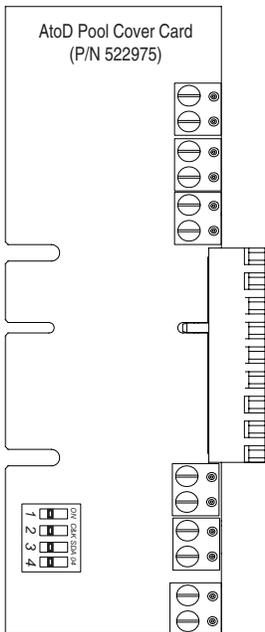

AtoD Pool Cover Card
(P/N 522039)

IntelliCenter™ Control System Kits

521903	IntelliCenter Kit i8PS, IC40, LC (w/ Salt) -- Model Code: 8PSIC40
521904	IntelliCenter Kit i8PS, LC (no Salt) -- Model Code: 8PS
521905	IntelliCenter Kit i5P, IC40, LC (w/ Salt) -- Model Code: 5PIC40
521906	IntelliCenter Kit i5PS, IC40, LC (w/ Salt) -- Model Code: 5PSIC40
521907	IntelliCenter Kit i5PS, LC (no Salt) -- Model Code: 5PS
521908	IntelliCenter Kit i10PS, IC40, LC (w/ Salt) -- Model Code: 10PSIC40

IntelliCenter Control System Personality Kits Only

521909	IntelliCenter i5P, Single Body
521910	IntelliCenter i8P, Single Body
521911	IntelliCenter i10P, Single Body
521912	IntelliCenter i5PS, Shared Equipment
521913	IntelliCenter i8PS, Shared Equipment
521914	IntelliCenter i10PS, Shared Equipment
521915	IntelliCenter i10D, Dual Equipment
522080	IntelliCenter i5X Expansion Panel
522996	IntelliCenter i10X Expansion Card (requires i5X)

IntelliCenter Control System Load Center (LC) & Power Center (PC) with Personality Kits

522041	CLC w/ IntelliCenter wiring Label), with IntelliChlor Transformer.
522042	CPC w/ IntelliCenter wiring Label), with IntelliChlor Transformer.
522043	CLC w/ IntelliCenter wiring Label), without IntelliChlor Transformer.
522044	CPC w/ IntelliCenter wiring Label), without IntelliChlor Transformer.

IntelliCenter Control System Upgrade Kits

522045	IntelliTouch/EasyTouch To IntelliCenter Upgrade Kit - i10P, for LC/PC
522046	IntelliTouch/EasyTouch To IntelliCenter Upgrade Kit - i10PS, for LC/PC
522047	IntelliTouch/EasyTouch To IntelliCenter Upgrade Kit - i10P, for CLC/CPC
522048	IntelliTouch/EasyTouch To IntelliCenter Upgrade Kit - i10PS, for CLC/CPC

IntelliCenter Control System Accessories

522035	IntelliCenter Indoor Control Panel Kit
522036	IntelliCenter Wireless Kit
522037	IntelliCenter Chemical Control Module (PCBA)
522038	IntelliCenter Valve Expansion Module (PCBA)
522039	IntelliCenter Pool Cover A/D Module (PCBA)

IntelliCenter™ Control System Components

The required components of an IntelliCenter Control System is a Load Center and/or a Power Center, IntelliCenter Control System Personality Kit, and Interface:

Load or Power Center

- **Load Center:** Footprint (26" H x 17" W x 5-1/4" D) Includes built-in sub panel (150 AMPS) capable of holding up to eight 1" breakers. Also includes five 25 AMP three HP relays, 110/240 V transformer with secondary side circuit protection. Multiple knockouts for different sizes of conduit are supplied as well as a GFCI side knockout. The Load Center provides space for all high and low voltage wiring needs.
- **Power Center:** Footprint (20" H x 17" W x 5-1/4" D). The Power Center does not include a circuit breaker base. This enclosure is used with the Load Center.

IntelliCenter Control System Personality Kit Descriptions

The following lists types of IntelliCenter Control Systems available for different pool/spa configurations:


- **Shared Equipment: Pool and spa combinations with shared filtration system** – Pool owners can enjoy the convenience of motorized valves for water flow separation between pool and spa. The Personality Kit models are:
 - i5PS (P/N 521912)** – Four auxiliary circuits plus filter pump operation (create a Feature circuit for valve actuators without using an existing output auxiliary circuit, and special light functions for color lighting). Five relays are included in the Load Center.
 - i8PS (P/N 521913)** – Six auxiliary circuits plus filter pump operation and the +3 option (create a Feature circuit for valve actuators without using an existing output auxiliary circuit, and special light functions for color lighting). Two relays are included in the kit and five in the Load Center.
 - i10PS (P/N 521914)** – Eight auxiliary circuits plus filter pump operation and the +3 option (create a Feature circuit for valve actuators without using an existing output auxiliary circuit, and special light functions for color lighting). Four relays are included in the kit and five in the Load Center.
- **Dual Equipment: Pool and Spa with Dual Sets of Equipment (i10D P/N 521915)** – This system is designed to operate two sets of pool equipment. Each set of a equipment (Pool or Spa) can control one temperature setting.
 - i10D (P/N 521915)** – Eight auxiliary circuits plus operation of two filter pumps. Five relays are included in the personality kit and five in the Load Center.
- **Single Equipment: Pool Only or Spa Only** – This system is designed to operate a single body of water (LO-TEMP and HI-TEMP). The Personality Kit models are:
 - i5P (P/N 521909)** – Four auxiliary circuits plus filter pump operation. Five relays are included in the Load Center.
 - i8P (P/N 521910)** – Seven auxiliary circuits plus filter pump operation. Two relays are included in the personality kit and five in the Load Center.
 - i10P (P/N 521911)** – Nine auxiliary circuits plus filter pump operation. Four relays are included in the personality kit and five in the Load Center.

IntelliCenter™ Control System Expansion Kits

- **Expansion Kits:** Models i5X (P/N 521033) and i10X (P/N 521034), offer five or ten additional Auxiliary Circuits. Each IntelliCenter Control System Expansion Kit requires a Load Center (P/N 521213) or Power Center (P/N 521214). Up to three Expansion Kits and Load or Power Centers may be added to a system, for control of up to 38 Auxiliary Circuits (40 auxiliary circuits i10x).

Optional IntelliCenter Control System Expansion Enclosures

Expansion enclosures can support all of the same high voltage connections as the main load to the Load Center or Power Center. A total of three enclosures can be added for a total of 40 auxiliary circuits that can support a maximum of four bodies of water. The Expansion enclosure supports the same COM port connections, and includes two actuators and a Load Center or Power Center. The Expansion enclosure can be expanded to include up to five actuators (with valve module P/N 520285). Refer to the IntelliCenter Control System Expansion Kit Installation Guide (P/N 520471) for more information.

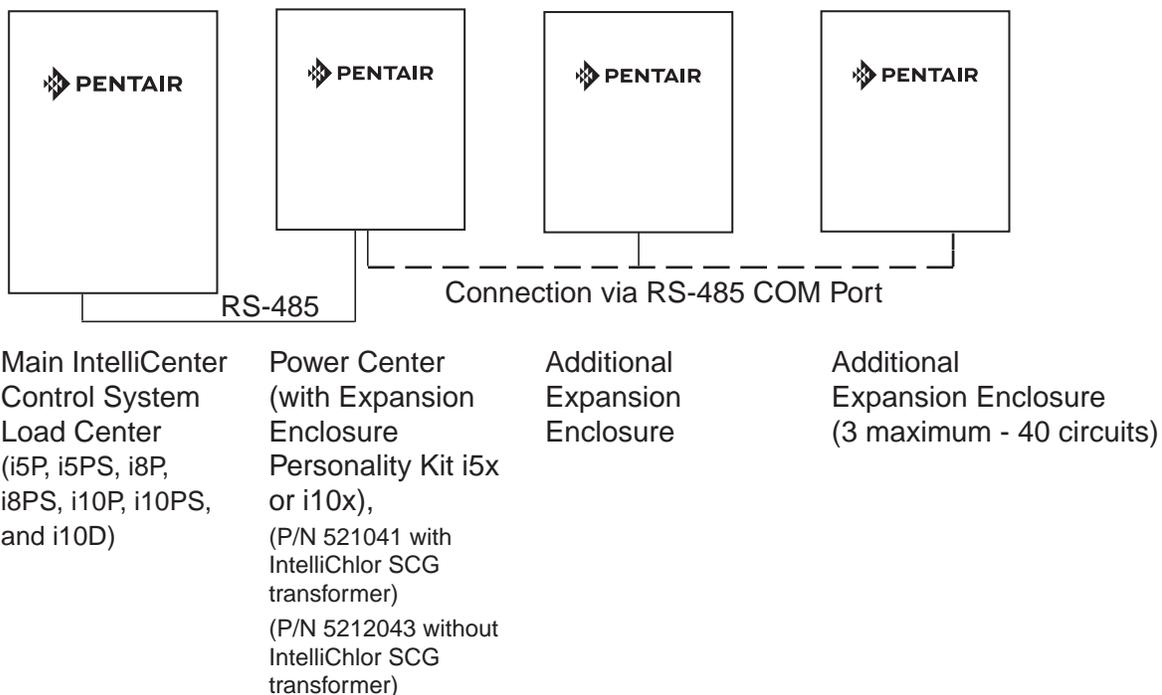

1 or 2 bodies of water (3 Expansion enclosures):

OCP0:	Main Circuit board - i5P capability
EXP1:	Exp Motherboard - i5X or i10X
EXP2:	Exp Motherboard - i5X or i10X
EXP3:	Exp Motherboard - i5X or i10X

3 or 4 bodies of water (3 Expansion enclosures):

OCP0:	Master Motherboard - i5P capability. Has to use one of the following Personality Cards: i5PS, i8PS, i10PS or i10D
OCP1:	Motherboard - i5P + any Personality Card. Can use any of the 6 Personality Cards. Note: Motherboard in OCP1 same as OCP0 (OCP0 is Master)
EXP1:	Exp Motherboard - i5X or i10X
EXP2:	Exp Motherboard - i5X or i10X

- Main Load Center or Power Center (all models)
- There are six (6) valves
- Three (3) Expansion enclosures total
- One Valve module on Main Load Center (valve expansion card)

= 2 (A & B)
= 6 (C, D, E, F, G, H)

IntelliCenter™ Control System Personality Kit Contents

The following items are included in the IntelliCenter control System Personality Kit. If any item is missing or damaged in the IntelliCenter kit, contact your authorized dealer, or contact Pentair Technical Support.

- An IntelliCenter interface Outdoor Control Panel. Includes a motherboard and a Personality circuit board.
- Power Relays - i5P, i5PS, Qty. 0, i8P, i8PS, Qty. 3, i10P, i10PS, i10D, Qty 5, i5x, Qty. 0, i10x, Qty. 5 - NOTE: 5 relays are provided in the Load Center or Power Center
- Valve Actuators – Qty. 2 (Models i5PS, i8PS, i10PS)
- Temperature Sensors – Water Sensor (25 foot cable, o-ring and hose clamp), Qty. 1, For i10D only, Qty. 2 are provided. Air Sensor (with short cable).
- Wiring Diagram Label
- Load Center or Power Center parts bag: Includes relay screws.
- Label Sheet - A set of adhesive labels for custom identification (used to label the outdoor control panel buttons). Use a pair of fine-tip tweezers to remove the labels from the sheet.
- IntelliCenter Personality Kit Installation Guide (this manual)

Optional IntelliCenter Control System Kit Contents

The following items are included in the IntelliCenter Control System kit which may also include the optional IntelliChlor SCG.

- IntelliCenter Control System Outdoor Control Panel (mounted in the load center)
- IntelliCenter Control System Load Center enclosure
- Motorized valve actuators (P/N 263045), Qty. 2 (not included with single-body system or dual equipment)
- Temperature Sensors: Water Sensor (25 foot cable, o-ring and hose clamp), Qty. 1, For i10D only, Qty. 2 are provided. Air Sensor (with short cable).
- IntelliCenter Control System Installation Guide (this manual)

Optional Equipment

- IntelliChlor® Salt Chlorine Generator Electrolytic Cell model IC20 (P/N 520554) or IC40 (P/N 520555), Power Center (P/N 520556 – if not integrated into the Load Center)
 - IntelliChlor SCG User's Guide (P/N 520589)
- IntelliChem® Controller no-pump (P/N 521357), one-pump (P/N 522621), two-pump (P/N 522622)
 - IntelliChem Installation and User's Guide (P/N 521363)

IntelliCenter™ Control System Replacement Parts List

Kit Next Gen i5P OCP PCBA w/ Faceplate CLC/CPC	P/N 523050
Kit Next Gen i5X Expansion PCBA w/ Faceplate CLC/CPC	P/N 523051
NG i5PS Personality PCBA	P/N 521936Z
NG i8P Personality PCBA	P/N 521977Z
NG i8PS Personality PCBA	P/N 521968Z
NG i10P Personality PCBA	P/N 521993Z
NG i10PS Personality PCBA	P/N 521873Z
NG i10D Personality PCBA	P/N 523029Z
NG i10X Expansion Card PCBA	P/N 522997Z
NG Faceplate, OCP, for CLC/CPC (with overlay)	P/N 522004Z
NG Faceplate, IT/ET OCP Upgrade, for LC/PC	P/N 522005Z

IntelliCenter Control System Accessory Equipment

IntelliCenter Control System Indoor Control Panel kit	P/N 522035
IntelliCenter Control System Wireless Control Panel kit	P/N 522036
IntelliCenter Control System Chemical Control Module (PCBA)	P/N 522037
IntelliCenter Control System Valve Expansion Module (PCBA)	P/N 522440
IntelliCenter Control System Pool Cover A/D Module (PCBA)	P/N 522039
SpaCommand® 10 Ten-Function Spa-Side remote, 150 ft. cable	P/N 521176
Two-Speed Three HP Relay up to three additional valve actuators	P/N 520198
Three HP Power Relay	P/N 520106
QuickTouch® four-function wireless remote kit with transceiver assembly	P/N 520148
QuickTouch II four-function wireless remote kit with transceiver assembly	P/N 521245
IntelliChem® Controller	P/N 521356
IntelliChlor® Acid Cleaning Kit	P/N 520670
IntelliChlor Spacer pass-through cell for new pool start-up	P/N 520588



IntelliCenter Control System
Indoor Control Panel (P/N 522035)



IntelliCenter Control System
Wireless Control Panel (P/N 522036)



SpaCommand® Spa-Side
Controller (P/N 521176)



QuickTouch® Wireless Controller
(P/N 521245)



IntelliChem® Controller (P/N 521356)

IntelliCenter™ Control System Configurations and Models

PANEL:	TYPE:	CAPABILITY:	PANEL:	CAPABILITY:
OCP0	i5P	i5P Capabilities: Single body of water (Pool or Spa) Filter pump relay + 4 AUX relays Valve A & B Heater control (Gas & Electric) Solar relay output 2-speed relay output Water, Air, Solar Sensor Two COM ports Ethernet port iS4 port		
				1 or 2 bodies of water: OCP0: Main Circuit board - i5P capability EXP1: Exp Motherboard - i5X or i10X EXP2: Exp Motherboard - i5X or i10X EXP3: Exp Motherboard - i5X or i10X 3 or 4 bodies of water: OCP0: Master Motherboard - i5P capability. Has to use one of these Personality. Cards: i5PS, i8PS, i10PS or i10D OCP1: Motherboard - i5P + any Personality. Card. Can use any of the 6 Personality Cards. Note: Motherboard in OCP1 same as OCP0 (OCP0 is Master) EXP2: Exp Motherboard - i5X or i10X EXP3: Exp Motherboard - i5X or i10X OCP1-4 VALVEXP Valve Expansion module: 6 extra valve outputs (C, D, E, F, G, H) OCP1-4 A TO DXP Allows external input for system control Analog/Digital (eg. Pool Cover) Expansion module:
OCP0	i5PS	i5PS Capabilities: Shared equipment (Pool and Spa) Intake & Return valves Same as i5P (see above for details)		
OCP0	i8P	i8P Capabilities: Single body of water (Pool or Spa) Filter pump relay + 7 AUX relays Same as i5P (see above for details)		
OCP0	i8PS	i8PS Capabilities: Shared equipment (Pool and Spa) Filter pump relay+ 7 AUX relays Intake & Return valves Same as i5P (see above for details)		
OCP0	i10P	i10P Capabilities: Single body of water (Pool or Spa) Filter pump relay+ 9 AUX relays Same as i5P (see i5P for details)		
OCP0	i10PS	i10PS Capabilities: Shared equipment (Pool and Spa) Filter pump relay+ 9 AUX relays Intake and Return valves Same as i5P (see i5P for details)		
OCP0	i10D	i10D Capabilities: Dual Bodies of water with separate Pumps, Filters and Heaters		

Plumbing Requirements

It is important that the pool and spa plumbing system be in accordance with local codes and the Recommended Hydraulic Schematics (page 55 and 56). Before starting, please review the diagrams and the following recommended guidelines:

- 1 The spa should be at or above the level of the pool.

If the spa is attached to the pool, provide a dam between the two bodies of water to allow the spa to overflow into the pool. If the spa is not attached to the pool, an overflow, sufficient in size to carry a full pump-flow, must be installed at the water level in the spa.

- 2 Plumb a three-port **Intake Valve** on the suction-side of the filter pump, so that the center port of the valve is connected to the pump inlet. Connect the spa suction to one side of the Intake Valve, and the pool suction to the other side.
- 3 Plumb a three-port **Return Valve** on the return-side of the heater, so that the return water will enter the valve through the center port.

Connect the spa return to one side of Return Valve, and the pool return to the other side.

- 4 If required, install a spa makeup line (consisting of a manual gate or ball valve, for elevated spas install a check valve) to bypass the pool return line. This will enable some of the chemically-balanced water from the pool to cycle through the spa. The manual valve will allow the amount of bypass to be adjusted.
- 5 If the spa is to be constructed in concrete, special provision should be made at this time for the installation of the Spa-Side remote control.

Select a convenient location in the deck or above water level in the spa wall (where the Spa-Side remote will not be submerged by the spa water), and install a 6 in to 12 in length of one inch PVC pipe to provide a receptacle for the Spa-Side remote. The pipe should be level and protrude beyond the finished surface of the spa. It will be cut back later at installation time. Reduce the pipe size down to ½ in or ¾ in conduit, and run it to the proposed Load/Power Center location at the equipment pad. Use sweep elbows for turns.


The Spa-Side remote will not be installed until the spa construction is completed.

- 6 For systems which incorporate a skimmer, it is possible to balance the amount of suction between the skimmer and main drain for maintenance purposes. This is easily accomplished by installing a manual three-port mixing valve at the suction line. Plumb one port to the skimmer and the other to the main drain.
- 7 If a “non-booster pump” pressure-side pool cleaner is being used, plumb a manual three-port valve between the filter pump and filter, with the third port plumbed to the pool cleaner line, and install a motorized two-port **Pool Cleaner Valve** at this line. The motorized valve will automatically open whenever the Control System activates the pool cleaner.
- 8 If a booster pump pool cleaner is being used, plumb the booster pump so that its suction-side is connected to the pool return, after the heater, and as close to the ground as practical.


- 9 Plumb the solar feed and return lines between the filter and the heater. Install a three-port valve at the feed line. Use a solar valve (model SOL-2T), to allow automatic draining of the panels.
- 10 A solar booster pump should be used when the distance to the panels exceed 200 ft., or the panels are elevated higher than 25 ft.
- 11 Glazed solar panels require a drain valve (model HW-5B) to allow draining of the panels. This prevents damage from overheating water. Install a drain valve at the solar feed line and connect to the pool fill line.
- 12 **SCG systems only:** IntelliChlor® IC40 or IC20 Salt Chlorine Generator cell with check valve at the heater output. Refer to IntelliChlor Salt Chlorine Generator User's Guide (P/N 520589) for plumbing requirements.

Equipment Location

All equipment, with the exception of the spa-side remote, must be located at least 10 ft. from the water's edge.

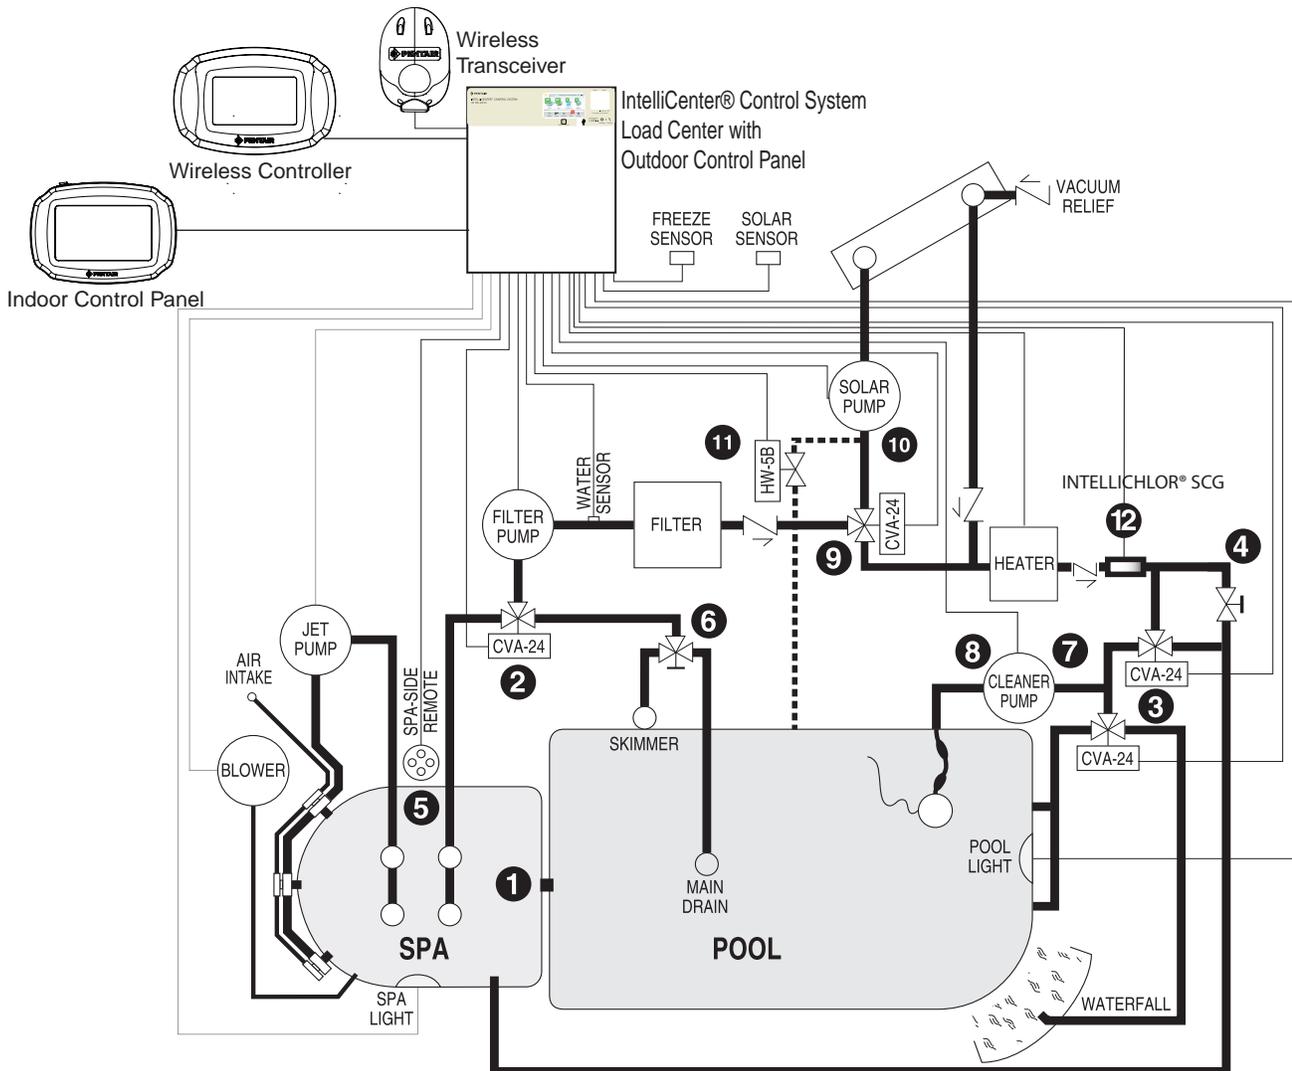

Recommended Hydraulic Schematic for Shared Equipment System

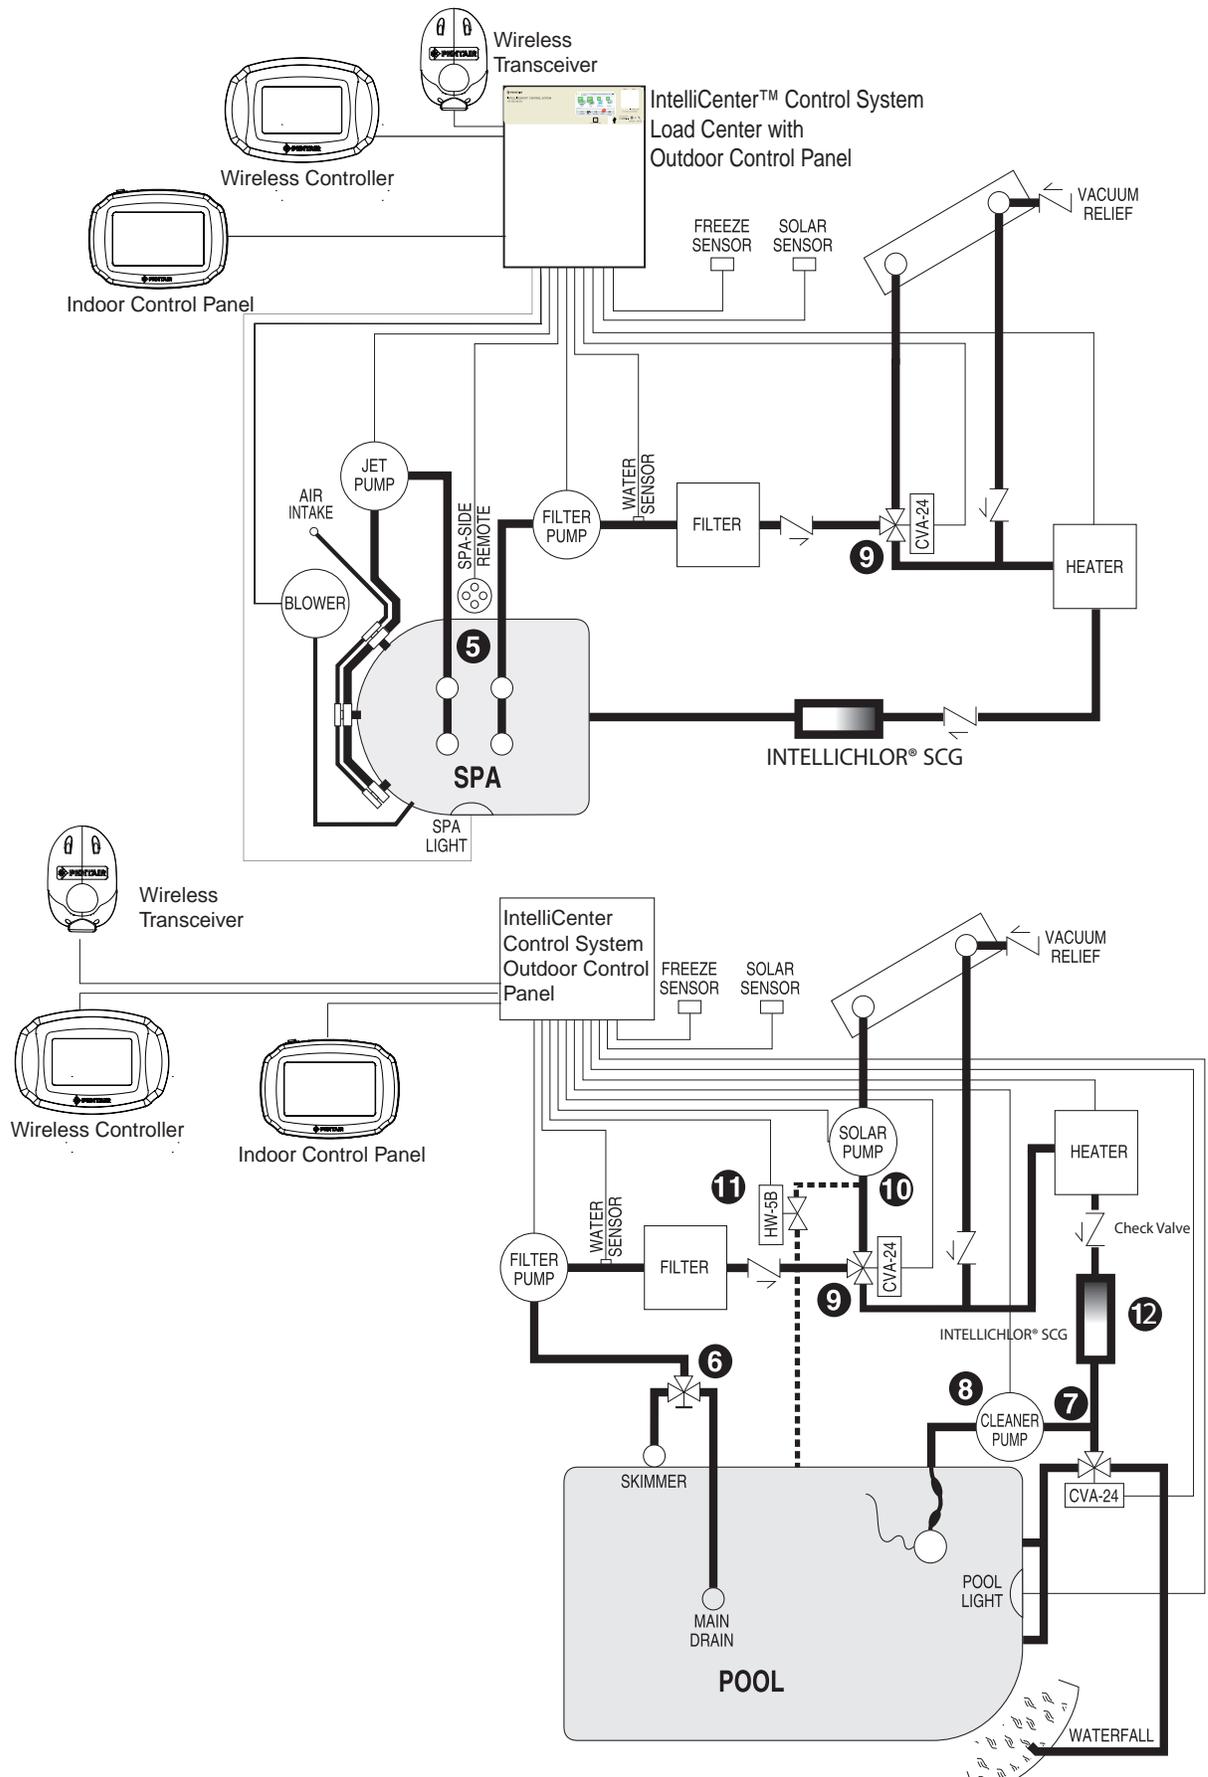

Recommended Hydraulic Schematic for Single Body Systems

Glossary

The Control Panel: The IntelliCenter™ Control System Outdoor Control Panel with flexible hinge. Installed in upper portion of IntelliCenter Control System Load Center.

EMI (Electromagnetic interference) filter: Protective circuit element that must be used between the IntelliChlor transformer and supply lines.

Expansion Kit: A kit that includes additional auxiliaries to an existing Personality Kit. Requires a Load Center or Power Center for each expansion kit.

Feature Circuits: Programmable circuits that may control relays and/or valve actuators. For details, see the IntelliCenter Control System Systems User's Guide (P/N 522461)

High Voltage Panel/Compartment: Removable panel for the high voltage compartment of IntelliCenter Load Center. The high voltage wiring including circuit breakers, relays, GFCI and optional IntelliChlor transformer/filter.

Indoor Control Panel: This 9 or 13 button remote controller with LCD (liquid crystal display) is wired to the control circuit board in the IntelliCenter Control System Load Center. The control panel can be wall mounted inside a house to control the IntelliCenter system.

IntelliChlor® (SCG): Salt Chlorine Generator. Uses a process known as electrolysis to produce sodium hypochlorite (liquid chlorine) from a low concentration of salt added to the pool water. Model IC 20 Cell (P/N 520554) for pools up to 20,000 U.S. gallons (75 liters) and model IC 40 Cell (P/N 520555) for pools up to 40,000 U.S. gallons (151 liters). The external IntelliChlor Salt Chlorine Generator Load Center (P/N 520556).

iS4 Wireless Controller: Four function spa-side remote. Spa wall or deck mounted.

Load Center: Metal enclosure with power relays, transformer, and circuit breakers. Used for distributing power for controlling IntelliCenter Control System. Also known as the sub panel.

Low Voltage Compartment: Top compartment of Load Center or Power Center for all low voltage wiring.

Low Voltage Raceway: Vertical space in the left side of Power/Load Center for low voltage cabling.

Mud Box: Enclosure to provide mounting features for SpaCommand controller or iS10 spa-side remote that is cast into gunite, concrete, or other spa wall/deck construction.

Outdoor Control Panel: Control panel with flexible hinge installed in upper portion of Power/Load Center to control IntelliCenter Control System.

Personality Board: The circuit board mounted on top of the Outdoor Control Panel motherboard. The Personality board defines the system capabilities.

Personality Kit: Set of parts to define the capability of a system; may include: Outdoor Control Panel, temperature sensors, actuators, control panel, additional relays, actuators.

Power Center: Same as Load Center with the exception of the circuit breaker base.

Relay Circuits: The circuits that control the relays on the IntelliCenter Control System circuit board.

Salt Chlorine Generator (SCG): Automated pool chlorinator that sanitizes using salt water (see IntelliChlor Salt Chlorine Generator).

Glossary (continued)

Screw Terminal Connector: Removable connector that may attach to circuit board with multiple sockets to receive conductors from controllers and sensors; conductors held by screw terminals; multiple conductors of a small enough gauge (usually 22 AWG) may be coupled to a single socket of a terminal connector.

SpaCommand® Controller: Up to ten function spa-side remote with temperature changing capability. Can be spa wall or deck mounted. Connects to the Load center via RS-485 COM port.

Transceiver: Circuit board with attached antenna that can send and receive radio frequency (wireless) transmissions. Used with QuickTouch® II remote, and Wireless Control Panel.

Wireless Controller: Wireless controller for the IntelliCenter™ Control System with all the functionality of the Indoor and Outdoor Control Panel. Connects to the Load center via RS-485 COM port.

NOTES



1620 HAWKINS AVE., SANFORD, NC 27330 • (919) 566-8000
10951 WEST LOS ANGELES AVE., MOORPARK, CA 93021 • (805) 553-5000

www.pentairpool.com

All Pentair trademarks and logos are owned by Pentair or by one of its global affiliates. IntelliCenter™, SunTouch®, EasyTouch®, QuickTouch®, IntelliChlor®, IntelliFlo®, IntelliChem®, Sta-Rite®, MiniMax®, MasterTemp®, WhisperFlo®, SpaCommand®, UltraTemp® are trademarks and/or registered trademarks of Pentair Water Pool and Spa, Inc. and/or its affiliated companies in the United States and/or other countries. Hayward is a registered trademark of Hayward Industries Inc. Jandy is a registered trademark of Jandy Industries Inc. iPhone® and iPad® are registered trademarks of Apple, Inc. in the United States and/or other countries. Android® is a registered trademark of Google, Inc. Because we are continuously improving our products and services, Pentair reserves the right to change specifications without prior notice. Pentair is an equal opportunity employer.

© 2018 Pentair Water Pool and Spa, Inc. All rights reserved. This document is subject to change without notice.



P/N 522989 3/2018