

THE CITY 2 SLIDE Assembly & Installation Instructions



3050 S. ALVERNON WAY • TUCSON, AZ 85713 520.790.7040 • 800.737.5386 • FAX 520.790.7127

inter-fab.com

TABLE OF CONTENTS:

Intended Use Instructions	2
Water Safety Envelope	3
Slide Footprint Diagrams	4
Slide Position Diagram	5-6
Step 1	7
Step 2	8
Step 3	9
Step 4 (A)	9
Step 4 (B)	9
Step 5	10
Inspection Check List	11
Slide Care & Maintenance	11
Paver Kit Information	12-13
Hardware Parts List	14
Inter-Fab Limited Warranty	15

INTENDED USE INSTRUCTIONS

- 1. Everyone who uses this slide must know, understand and follow these instructions.
- 2. The ANSI/NSPI-4 2007 standard for above ground pools prohibits the use of slides or diving boards on above ground pools.
- 3. This slide is designed for residential inground pool use ONLY. This slide may not be used on any above ground pool. Such use of this slide may result in serious injury or death.
- 4. This slide should never be installed on above ground pools, ponds, floating docks or platforms, boat docks or houseboats or any natural body of water.
- 5. This slide should never be installed on any commercial, public or semi-public pool.
- 6. Be familiar with the shape and depth of the pool before you slide. This slide should only be used with the proper water safety envelope, as described in Diagrams A, B, and C on page 3 and in accordance with the slide positioning instructions, as described in Diagrams D and E on page 4.
- 7. Because the slide may only be used in water 4' deep or greater, all slide users must be able to swim in deep water.
- 8. Weight limit for this slide is 225 pounds, no slider weighing more than 225 pounds may use this slide.
- 9. The surface of the slide is very slippery when wet; **USE CAUTION** when entering the slide and when transitioning from standing to sitting.
- 10. Slide in a feet first sitting position ONLY.
- 11. **IMPORTANT:** <u>sliding headfirst is prohibited</u>: serious spinal injury resulting in paralysis or death can result.
- 12. Maintain adult supervision at all times.
- 13. Only one person at a time is allowed on the slide; this includes the ladder.
- 14. Be sure the water delivery system is on and lubricating the slide prior to use.
- 15. Collision with another swimmer or a diver can result in serious injury or death for one or both persons: Before sliding, always make sure that the path in front of the slide is free from any (including submerged) obstructions, including other people or objects in the pool such as rafts, inner tubes etc. When a diving board is also present, make sure you do not use the slide while someone is on or using a diving board. Take turns.
- 16. No roughhousing or horseplay should be allowed on the slide at any time.
- 17. Do not stand, jump or dive from any part of the slide.
- 18. Do not slide on objects such as rafts or inner tubes, doing so greatly increases your risk of injury.
- 19. Do not slide through or at objects such as rafts or inner tubes, doing so greatly increases your risk of injury.
- 20. Do not use this slide if physically impaired or handicapped without your doctor's permission.
- 21. Do not use this slide with a history of heart conditions, seizures, back problems, fainting or fear of heights.
- 22. Do NOT use this slide if you are pregnant.
- 23. Do not drink alcohol and use this slide.
- 24. Don't take chances, inspect the slide at least once a year (see the slide inspection list on page 11). Do not use the slide if any part becomes loose, damaged, weakened or broken. If necessary, before using the slide again, have it inspected and repaired by a competent professional familiar with pool slides.

WARNING: SERIOUS INJURY OR DEATH CAN RESULT FROM THE IMPROPER INSTALLATION OR USE OF THIS SLIDE.






DO NOT SLIDE HEAD FIRST

SERIOUS INJURY CAN RESULT



When installed according to these instructions, this slide conforms to Consumer Product Safety Standard Guidelines.

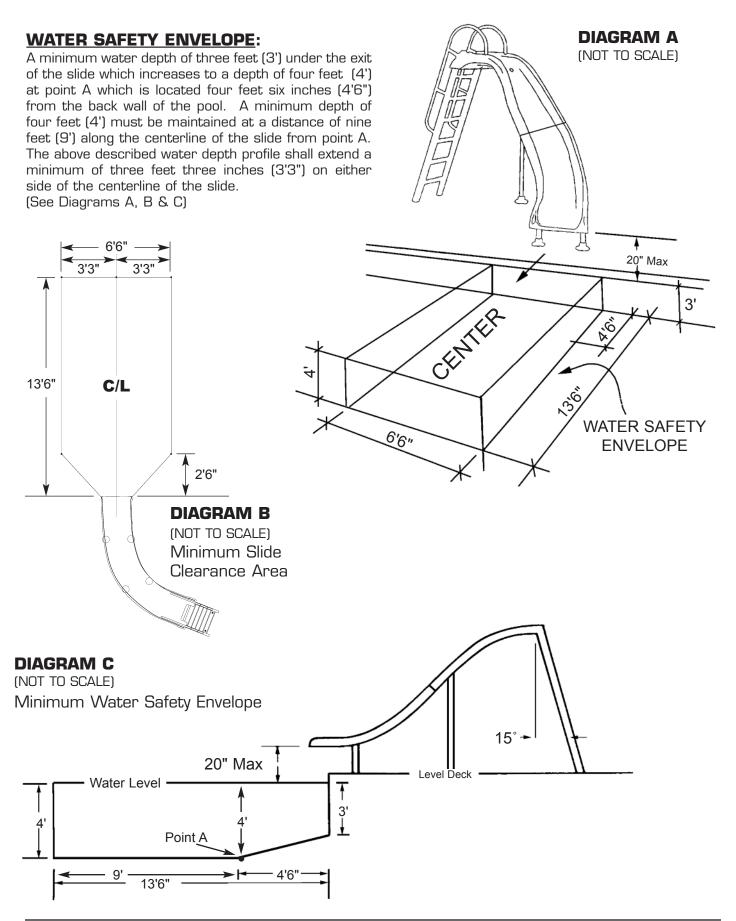

SLIDE FOOTPRINT DIAGRAMS


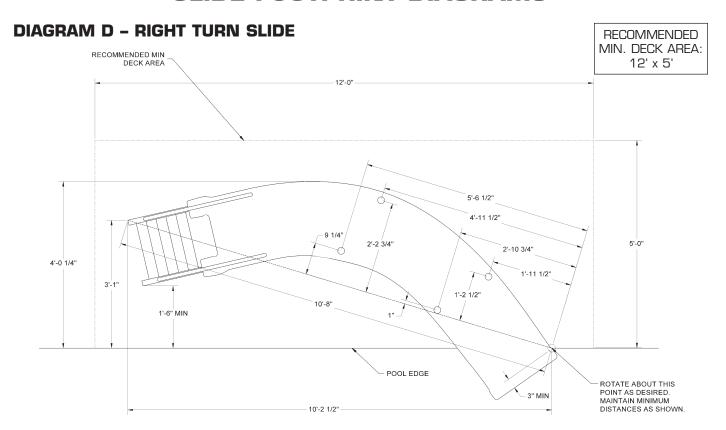


DIAGRAM E - LEFT TURN SLIDE

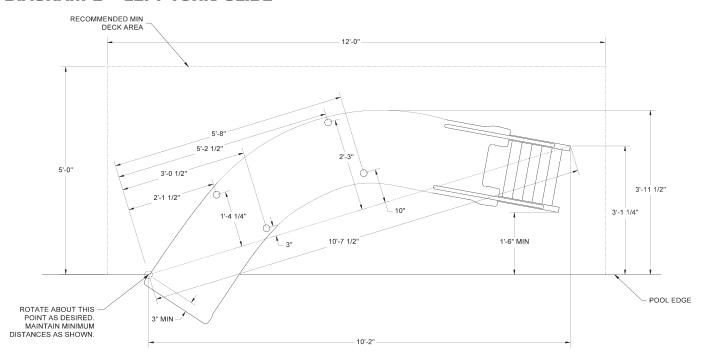

NOTE: FINAL POSITION MUST ENSURE THAT ALL WATER FALLING OFF SLIDE LANDS IN POOL. DIMENSIONS MAY VARY FROM SLIDE TO SLIDE. IT IS RECOMMENDED THAT THE FULLY ASSEMBLED SLIDE BE USED AS A TEMPLATE FOR INSTALLATION.

SLIDE & WATER STUB-UP PLACEMENT DIAGRAMS


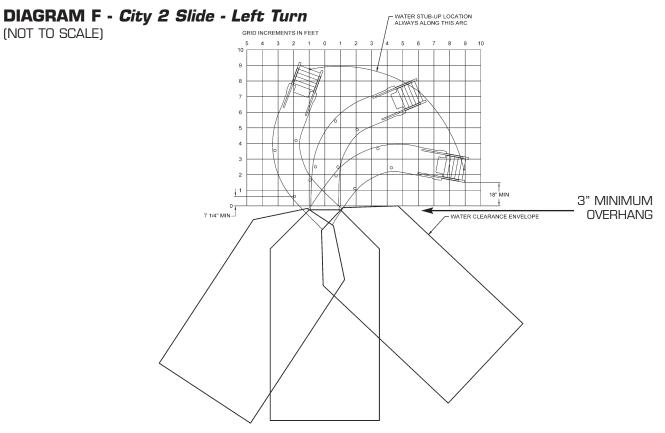


DIAGRAM G - City 2 Slide - Right Turn

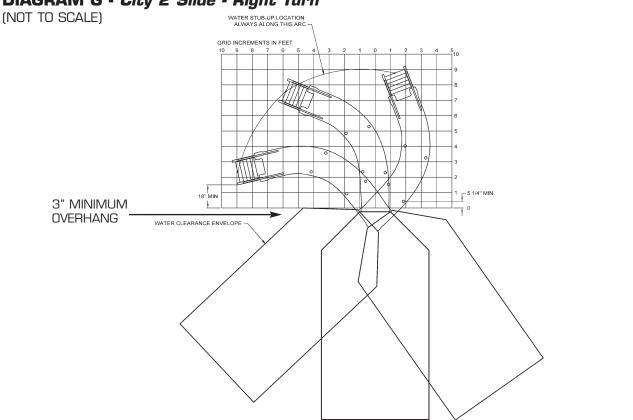

STEP ONE:

FLUME ASSEMBLY

Open box and remove slide components and parts pack.

Flatten box and use it as a protective surface to avoid scratching the acrylic parts.

Turn flume sections upside down, check flume gasket integrity. (Diagram H)



Align bolt holes on the flanges.

Use vice grips to hold halves together. (Diagram I)




Use a small dab of anti seize lubricant (included) on the bolt threads.


Insert bolts – hardware kit CS-102-SS, flume to flume. (Diagram J)

NOTE: (Hardware Order: bolts/washers, slide flange/slide flange, washers/nuts.) Check flume at inside seam for even fit.

HAND TIGHTEN ONLY.



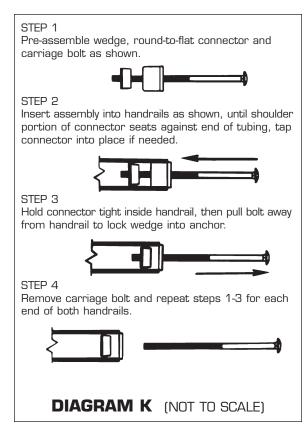

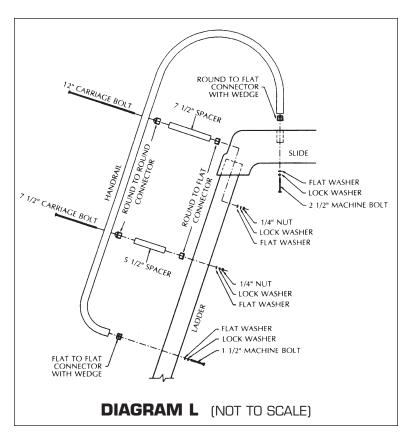

INSTALLATION MUST MEET ALL NATIONAL & LOCAL BUILDING CODES

STEP TWO:


Handrail Pre-Assembly Procedure

- Pre-assembled wedge, round to flat connector and carriage bolt as shown in Diagram K above.
- 2. Insert the assembly from 1 above into the handrail as shown in the Diagram above by sliding a round to flat connector into the handrail opening until the Shoulder portion of the connector seats against the end of the tubing. The Connector may have to be tapped into place.
- With one hand hold the connector tight inside the handrail while pulling the carriage bolt away from the handrail locking the wedge into the connector.
- 4. Remove the carriage bolts.
- 5. Repeat steps 1 through 4 on each end of both handrails.
- 6. Assemble the handrails to the slide as shown in Diagram L.

STEP THREE:

Slide Assembly Procedure

- 1. Slip the four (4) aluminum legs over the four (4) aluminum projections on the underside of the slide.
- 2. Holding the slide at its normal height insert the top of the ladder (squared end) snugly into the mating slots on the underside of the slide. See Diagram L above.
- 3. Insert a handrail into the 1 1/16" (2.56 cm) diameter hole on the top of the slide runway, at the same time ensure the predrilled holes in both the handrail and ladder are aligned. See Diagram L above. Install one 7 1/2" (19 cm) aluminum spacer between the top set of predrilled holes and secure with a 1/4" x 12" (.64 x 30.5 cm) bolt, flat washer, lock washer, and 1/4" (.64 cm) nut. Repeat this process for the second set of holes from the top utilizing the 5 1/2" spacer and secure with 1/4" x 7 1/2" (.64 x 19 cm) bolt. Secure the bottom of the handrail with a 1/4" x 1 1/2" (.64 x 3.8 cm) hex head bolt.
- 4. Repeat 1 through 3 for the other handrail.
- 5. Align flume sections and tighten flume bolts that were "hand tightened" only in step one. Place protective caps on bolt heads and nuts.

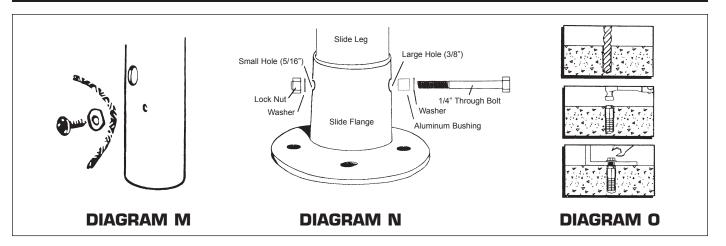

ELECTRICAL BONDING: Electrical bonding is required and slide must be installed in accordance with your local code. Bond each tubular leg by placing a bonding wire between the leg and the bonding washer and secure with a self tapping screw. See Diagram M above. Bond the handrails by placing the bonding wire under the lowest washer & nut on each side of the ladder and run the bonding wires down the inside of each ladder leg.

STEP FOUR (A):

INSTALLING SLIDE PRIOR TO POURING DECK

Position the slide relative to the pool wall per the slide placement instructions shown in Diagrams D and E, ensuring that the minimum water safety envelope is maintained as shown in Diagrams A, B & C. Position slide so that the legs and ladder bottoms will be 4" (10 cm) below the finished grade.

Utilizing a 1/2" diameter drill enlarge the holes at the bottom of each slide leg and insert a 6" length of 3/8" diameter rebar through each hole.

Once the correct slide location has been determined install a 1/2" (stub-up) from the pool return. The stub-up should be located near the inside right side ladder leg, at least 2" in front of ladder towards pool. Installing a 3 way valve between the stub-up and the slide plumbing is suggested.

Level top surface of the slide exit runway. Level the top of the slide in both directions. Level the ladder using a level on any step. Ensure that the ladder is sloped 15 degrees from vertical (see Diagram C) then, should no vertical adjustment of the slide legs be required, drill a small pilot hole, then screw one 14 X 1 self tapping screw through each leg (approx. 1" below the top of the leg) into the leg spud; otherwise, move the legs in relation to the spuds until proper leveling is obtained before inserting the screws.

Secure the slide so it will not move while the deck is being poured. TIP: to allow for easy removal of concrete from the ladder and legs apply a heavy coat of wax or wax paper approximately 1 foot above the deck surface. Allow concrete to cure for 24 hours prior to using the slide.

NOTE: YOU WILL CHOOSE TO EITHER FOLLOW STEP FOUR A OR B DEPENDING ON WHETHER THE SLIDE WILL BE AN IN-DECK OR ON-DECK INSTALLATION. INTER-FAB CANNOT/DOES NOT GUARANTEE THE CUSTOMER'S CONCRETE DECK.

STEP FOUR (B):

INSTALLING SLIDE USING DECK FLANGES (sold separately)

Position the slide relative to the pool wall per the slide placement instructions shown in Diagrams D and E, ensuring that the minimum water safety envelope is maintained as shown in Diagrams A, B & C.

Once the slide is properly positioned, place a deck anchor over each slide leg and using the 4 holes on each flange as a template drill four 1/2" diameter holes into the deck to a depth of 2 1/2". Insert the anchor into the hole until it is flush with the surface. Position the flange, insert the lag bolt and tighten. (see Diagram N & O above)

Ensure that the ladder is sloped 15 degrees from vertical (see Diagram C) then, using the 2 holes on each ladder foot as a template drill 1/4" holes 2" (5 cm) deep. Drive 2 anchor stud bolts into the ladder leg positions so that 1/2" (1.3 cm) of the studs project above the deck and unscrew the nuts from the anchors. Place the slide so the legs drop into the deck anchors and the ladder legs locate over the stud anchors, secure the ladder leg nuts onto the anchors.

Once the slide legs are within the deck flanges (ignoring the existing holes in the slide legs) drill a 1/4" hole into the slide leg through the center of the large 3/8" hole in the deck flange. Insert the aluminum bushing into the hole in the flange until it hits the slide leg, now insert the bolt thru the bushing about 1" into the slide leg. With the bolt in position, drill a 1/4" hole into the slide leg thru the hole in the opposite side of the flange. Push the bolt completely thru the slide leg, add washer and tighten nut.

Level top surface of the slide exit runway. Level the top of the slide in both directions. Level the ladder using a level on any step. Should no vertical adjustment of the slide legs be required, drill a small pilot hole, then screw one $14\ x$ 1 self tapping screw through each leg (approx. 1" below the top of the leg) into the leg spud; otherwise, move the legs in relation to the spuds until proper leveling is obtained before inserting the screws.

STEP FIVE:

CONNECTING THE WATER SUPPLY

Feed the 1/2" diameter flex hose (provided) through the slots on the right side of the slide ladder. (Diagram P)




Use PVC primer and glue to attach the feed hose to the slide fitting. (Diagram Q)



Attach ball valve shut off near deck "stub up". (Diagram R)

Attach hose to deck "stub up" last.

NOTE: Make sure that the water stub up is at least 2" in front of the ladder (toward pool).





FINAL INSPECTION CHECK LIST:

- 1. INSPECT THE SLIDE FLUMES FOR ANY VISIBLE DAMAGE, CRACKS, OR TEARS.
- 2. INSPECT THE SLIDE FOR SHARP EDGES, CRACKS, TEARS OR PROTRUSIONS ON THE LADDER, DECK FLANGES, HANDRAILS AND SLIDE FLUMES.
- 3. INSPECT THE SLIDE FOR ANY LOOSE OR CORRODED HARDWARE.
- 4. INSPECT ALL SLIDE LADDER TREADS AND STEP ATTACHMENT POINTS FOR ANY SIGN OF BENDING, FATIGUE, SHEARING OR YIELD. A SURFACE OR LADDER TREAD SHOWING SIGNS OF YIELD IS INDICATED BY FINE CRACKING OR CRYSTALLIZATION.
- 5. INSPECT THE CONNECTION OF THE SLIDE HANDRAILS FOR SECURED FASTENING AND RIGIDITY. PROPERLY ATTACHED HANDRAILS CANNOT BE PULLED AWAY FROM THEIR SOCKETS OR CONNECTION POINTS.
- 6. MEASURE THE DEPTH OF THE WATER IN FRONT OF THE SLIDE EXIT AND CONFIRM COMPLIANCE WITH DIAGRAMS A, B & C.
- 7. CERTIFY THE PROPER POSITION OF THE SLIDE EXIT AS SHOWN IN DIAGRAMS D & E.
- 8. VERIFY THE SLIDE WARNING LABEL IS SECURELY ADHERED TO THE SLIDE.
- 9. GIVE THESE INSTALLATION INSTRUCTIONS TO THE CUSTOMER AND GO OVER THE INTENDED USE INSTRUCTIONS WITH THEM.

CITY 2 SLIDE™ CARE & MAINTENANCE:

Your slide requires periodic maintenance to keep it looking like new.

- Wash monthly or more frequently, if needed. Be careful to keep cleaning material from entering the pool.
- Wash with mild soap, such as hand dishwashing soap, and avoid using strong cleaners or abraisives. Avoid strong alkaline (such as tri-sodium phosphate) or highly acidic cleaners. Avoid bleach and ammonia.
- * These suggestions and data based on information believed to be reliable, from our raw materials manufacturers. They are offered in good faith, but without guarantee, as conditions and methods of use and procedures are beyond our control.

PAVER KIT INFO - CITY 2 SLIDE


When installing an Inter-Fab City 2^{TM} slide using a paver kit, you must ensure that all standard installation requirements are met. The slide must be compatible with the type of pool on the intended installation and all ANSI/NSPI-2003 requirements must be met. Refer to installation manual.

Figure 1 illustrates an example of the minimum concrete pads recommended for the City 2^{TM} slide. Specific slide position and concrete pad orientations may vary. Make sure to allow for water stub up location near the ladder section of the City 2^{TM} slide when pouring the concrete pad for the ladder section. In order to ensure proper placement, you will need to set the slide up first to determine where the concrete pillars will be located.

Figure 2 shows a side view illustration of the City 2^{TM} slide foot deck anchor and wedge anchors used in a paver installation. **NOTE:** 4 ea. CITY-DECK ANCHOR are also required (not included with slide or paver kit) to complete the City 2^{TM} paver installation. Pavers can be a maximum of 3" thick. Pavers must be mechanically attached to the concrete pad using a setting material (such as mortar or thinset for example) that is no thicker than 3/8".

1" of each 3/8" x 7" wedge anchor (18 ea.) needs to be exposed above the final deck surface. The 3/8" wedge anchors must be drilled to a depth of 6" with 1" of the bolt left remaining above the final deck surface. The 3/8" x 7" wedge anchors (16 ea.) replace the 5/16" lag bolts and lag shields (16 ea.) included with the required CITY-DECK ANCHOR parts (4 ea.), one set per leg. See Figure 3. The remaining 3/8" x 7" wedge anchors (2 ea.) are used (1 per side) to attach the ladder bottom to the concrete pad and replace the 1/4" x 2-1/4" wedge anchors (4 ea.) from hardware kit CS-101-SS.

The ladder bottom must have the forward 1/4" hole on each side (toward slide) drilled to 1/2" to accommodate the 3/8" x 7" wedge anchor. The rear 1/4" holes on the ladder bottom are not used with the paver installation. See Figure 4. You will need to factor in the thickness of your paver (3" MAX.) and the thickness of your setting material (3/8" MAX.) for your individual installation.

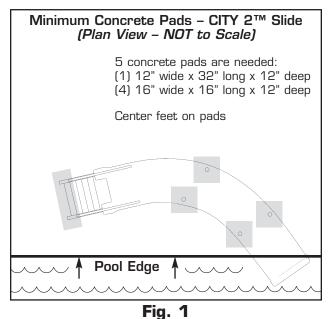

Example of Deck Anchor on Concrete Pad (Side View) HEIGHT OF WEDGE **DECK ANCHOR** ANCHOR ABOVE FINAL DECK SURFACE 3" **PAVERS** max. Layer of setting material to secure pavers 5" min. 12" min. **WEDGE** to concrete. from edge **ANCHORS** - 16" min. -Drawing Is CONCRETE NOT To Scale Fig. 2

PAVER KIT INFO - CITY 2 SLIDE - CONTINUED

You will need a 3/8" masonry bit and a 1/2" regular bit for the City 2™ slide.

Inter-Fab Inc. will not be responsible for damage to pavers caused by drilling or mechanically attaching to concrete pad. Refer to paver manufacturer's specific installation instructions before beginning.

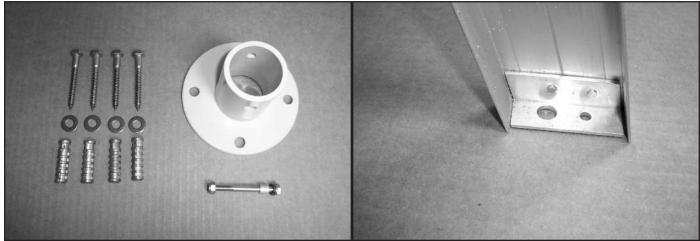


Fig. 3 Fig. 4

When installing a City 2^{TM} slide using a paver kit, disregard the lag shield instructions that are included with the CITY-DECK ANCHOR. See Figure 5.


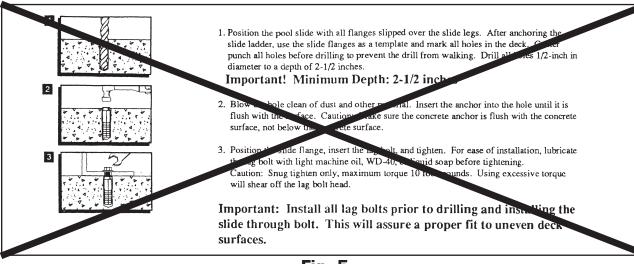


Fig. 5


PARTS LIST:




CS-	101-SS – LEG AND HANDRAIL HARDWARE
QTY	COMPONENT DESCRIPTION
2	1/4" x 12" carriage bolt s.s.
2	1/4" x 7-1/2" carriage bolt s.s.
	1/4" finish nut s.s.
8	1/4" lock washer s.s.
8	1/4" flat washer s.s.
8	#14 x 3/4" s.s. pan head screw
2	1/4" x 1-1/4" tap bolt s.s.
2	1/4" x 2-1/4" tap bolt s.s.
4	1/4" x 2-1/4" wedge anchor s.s.
8	round to flat nylon connector
4	round to round nylon connector
4	nylon wedge connector
2	5-1/2" aluminum spacers
2	7-1/2" aluminum spacers

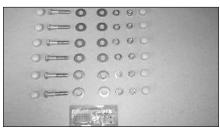


CS-	CS-102-SS – FLUME HARDWARE		
QTY	PART NUMBER	COMPONENT DESCRIPTION	
6	H-SS 3/8 X 1-3/4	3/8" x 1-3/4" all-thread bolt s.s.	
12	H-SS 3/8 FLT WASHER	3/8" x 1" flat washer s.s.	
6	H-SS 3/8 LOC WASHER	3/8" lock washer s.s.	
6	H-SS 3/8 F NUT	3/8" finish nut s.s.	
12	H562 X .390 CAP	gray protective cap	
1	H-ANTI-SEIZE	one packet of anti-seize bolt lubricant	

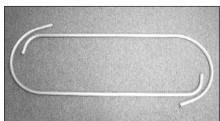

CITY	2 HANDRAILS	
QTY	PART NUMBER	COMPONENT DESCRIPTION
2	CITY-HANDRAIL	aluminum slide handrails

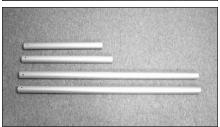

CITY 2 SLIDE LEGS		
QTY	PART NUMBER	COMPONENT DESCRIPTION
2	H-45.500 LEG	45.50" aluminum slide leg
1	H-23.250 LEG	23.25" aluminum slide leg
1	H-20.500 LEG	20.50" aluminum slide leg

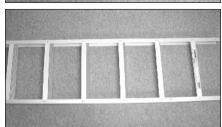

CITY 2 LADDER		
QTY	PART NUMBER	COMPONENT DESCRIPTION
1	CITY-LADDER	aluminum ladder assembly
		•



CITY	CITY 2 HOSE AND BALL VALVE		
QTY	PART NUMBER	COMPONENT DESCRIPTION	
1	H-1/2 SPA HOSE	1/2" spa hose - 10 ft.	
1	H-1/2 BALL VALVE	1/2" on/off ball valve	

LIMITED WARRANTY

Inter-Fab, Inc. will repair or replace, at its option, any product manufactured by Inter-Fab, Inc. that fails during the applicable warranty period because of a manufacturing or material defect; provided that the defect is not the result of improper installation, improper use or care, negligence, alterations or modifications to the product, or natural accidents (acts of God). The applicable warranty period for products manufactured by Inter-Fab, Inc. is three (3) years from the date of retail purchase, except as specified below:

Echoes of Nature™ products are individually handcrafted and painted by skilled artisans and as a result, dimensional differences and color variations are normal and are not a basis for warranty coverage. The warranty period for pumps sold with the Echoes of Nature™ products is three (3) years from the date of retail purchase.

Water Sports™ sports equipment warranty periods are as follows: Volleyball Poles, Basketball Poles, Basketball Rim, and Basketball Backboard are one (1) year from date of retail purchase. Volleyball, Volleyball Net, Basketball, Basketball Net, and pumps are warranted for ninety (90) days from date of retail purchase.

The Board Fall, Board Fall-L (LED), and Board Fall-F (fiber optic) water features, used for the **Jump & Splash**TM, **T7**TM and **aquaBoard**TM products, have a warranty period of one (1) year from the date of retail purchase.

Zoomerang™ slide products warranty period is one (1) year from the date of retail purchase.

Build Your Own Slide™ (BYOS™) and **Build Your Own Slide 2™** (BYOS 2™) warranty periods are one (1) year from the date of retail purchase.

City 2™ Slide and City Base™ products warranty period are one (1) year from the date of retail purchase.

Unless expressly stated otherwise all products manufactured by Inter-Fab are for **residential installation (single family residence)** inground pool use only. Inter-Fab, Inc. expressly disclaims any and all warranties and liability arising from the installation or use of its residential products for any non-residential use such as semi-public, public, or commercial applications. Products expressly manufactured for commercial installation and use will be subject to this limited warranty.

This limited warranty is in lieu of all other warranties, whether express or implied. Inter-Fab, Inc. disclaims any warranty of merchantability or fitness for a particular use, and noninfringement in relation to any of its products and Inter-Fab, Inc. is not liable for consequential, incidental or specific damages. This warranty is limited to the repair or replacement of the manufacturing or material defect, or refund of the original purchase price, whichever is less, at the sole option of Inter-Fab, Inc., and expressly does not cover any labor or reinstallation expenses related to the replacement of any and all Inter-Fab products. This limited warranty shall be the sole and exclusive remedy of irrespective of whether the claims are made in contract, tort, warranty, law, equity or by statue.

This warranty is to the original purchaser of the product only. Inter-Fab's limited warranty is neither transferable nor portable from consumer to consumer. The effective coverage date begins at the date of retail purchase. Product owner or representative must notify Inter-Fab, Inc. (or its wholesale agent) in writing, giving a full description of the nature of the product defect or failure along with proof of purchase, serial number(s) of the product and photos within thirty (30) days of the expiration of the applicable warranty period. Inter-Fab, Inc. reserves the right to physically inspect damaged or defective products or components to determine the cause of the damage or defect, prior to authorizing repair or replacement of its products.



3050 S. Alvernon Way • Tucson, AZ 85713 520.790.7040 • 800.737.5386 • Fax 520.790.7127 • inter-fab.com

Rev. 5/10 (SBK-CITY2 INSTL)